

## User Guide

Oricom OLS100 Soothing Sound Machine  
with Night Light

KEEP THIS USER GUIDE FOR FUTURE REFERENCE  
Always retain your proof of purchase in case of warranty  
service.  
[www.oricom.com.au](http://www.oricom.com.au)

Product Description .....	3
Pack Contents .....	3
Product Specifications .....	3
Product Overview .....	4
Features .....	5
How to turn OLS100 on .....	5
Basic Operations .....	6
Timer Function .....	6
Auto Save on Shutdown Function .....	6

### Warning

Risk of suffocation!

Keep all packaging materials and protective foils out of reach of children.

### Need Help?

If you need assistance setting up or using your Oricom product now or in the future, call Oricom Support.

Australia (02) 4574 8888  
[www.oricom.com.au](http://www.oricom.com.au)  
Mon-Fri 8am – 6pm AEST

New Zealand 0800 67 42 66  
[www.oricom.co.nz](http://www.oricom.co.nz)  
Mon-Fri 10am – 8pm NZST

### User Guide OLS100

Thank you for choosing the Oricom OLS100 Soothing Sound Machine with Night Light. The OLS100 is a modern device, designed for the nursery to enhance sleep quality and create a comfortable and soothing environment for your child. The sound machine features a gentle mixture of sounds and night light brightness settings, which will assist in the sleeptime routine of your child.

Note: Please read and follow all the warnings and instructions described below and be sure to keep this manual for future reference.

### Pack Contents:


1 x OLS100 Soothing Sound Machine with Night Light  
1 x User Guide  
1 x AC Adaptor

### Product Specifications:

Speaker parameter	2X8Ω 1W
Product material	ABS
Product size	173mm*155mm*48mm
Input parameter	DC 5V-1000mA

3

### Product Overview:

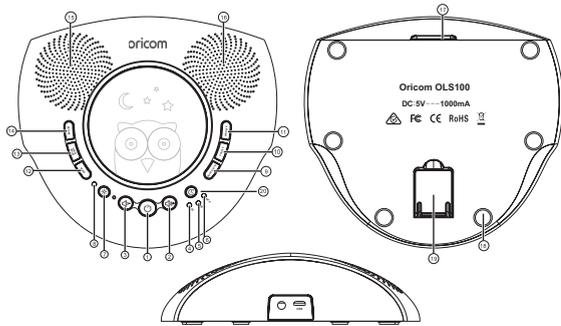

1. Power on/off
2. VOL+
3. VOL-
4. 30 minute timer indicator
5. 60 minute timer indicator
6. Timer off indicator
7. Brightness adjustment
8. Working indicator
- 9-14. Music options
15. Left speaker
16. Right speaker
17. USB port
18. Non-slip pad
19. Stand
20. Timer setting

4

### Features

- Six built-in sounds, including: Nature, White Noise, River, Rock-A-Bye, Cradle and Twinkle.
- Stand included. The OLS100 is at a vertical position when the stand is unfolded and at a 45 degree position with the stand folded. (The stand is folded by default)
- Built-in speaker. Supports audio volume adjustment.
- Three timer options are available. (30 min, 60 min and timer off)
- Five brightness settings are available. (0%, 10%, 30%, 60% and 100%)

### How to turn OLS100 on:

1. Please use the included AC power adaptor to supply power to the device.
2. When the device is plugged in, press the power button to turn on the OLS100. By default, the device will play twinkle with 30% audio volume, 10% brightness and 30 minutes timer on.

5

### Basic Operations

1. The device comes with six built-in sounds (Nature, White noise, River, Rock-a-bye, Cradle and Twinkle). Tap the music icon and the sound will play accordingly. Press the music icon during playing, and you can pause a song or resume playback.
2. Audio volume adjustment: Press the VOL+/VOL- button to adjust the volume. You can press and hold the VOL+/VOL- button to speed up the volume increase/decrease process.
3. Brightness adjustment: Press the brightness adjustment button repeatedly to adjust the brightness level (10%-30%-60%-100%-off).

### Timer

1. Press the timer button repeatedly to choose the timer period (30 minutes or 60 minutes) or turn off the timer. When you set a timer, the related indicator light comes on and the device automatically turns itself off when the timer ends. For continuous play set the timer to off.

### Auto-save On Shutdown

1. The previous working status is saved when the device is shut down either manually or automatically (timer setting).
2. To reset to factory setting, press and hold the VOL+ and VOL- buttons simultaneously for three seconds when the device is powered on.

6

### Express Warranty (Australia)

This Express Warranty is provided by Oricom International Pty Ltd ABN 46 086 116 369, Unit 1, 4 Sovereign Place, South Windsor NSW 2756, herein after referred to as "Oricom".

Oricom warrants that the product is free from defects in materials or workmanship during the Express Warranty Period. This Express Warranty does not extend to any product from which the serial number has been removed or was purchased outside of Australia.

The benefits of this Express Warranty are in addition to other rights and remedies you may have under the Australian Consumer Law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In the event of a minor failure, Oricom reserves the right to choose to repair or replace the product.

The Express Warranty Period will be a period of 12 months beginning on the date of purchase of the product evidenced by your dated sales receipt. You are required to provide proof of purchase as a condition of receiving Express Warranty services.

7

You are entitled to a replacement product or repair of the product at our discretion according to the terms and conditions of this document if your product is found to be faulty within the Express Warranty Period. This Express Warranty extends to the original purchaser only and is not transferable.

Products distributed by Oricom are manufactured using new materials or new and used materials equivalent to new in performance and reliability. Spare parts may be new or equivalent to new. Spare parts are warranted to be free from defects in material or workmanship for thirty (30) days or for the remainder of the Express Warranty Period of the Oricom branded product in which they are installed, whichever is longer. During the Express Warranty Period, Oricom will where possible repair and if not replace the faulty product or part thereof. All component parts removed under this Express Warranty become the property of Oricom. In the unlikely event that your Oricom product has a recurring failure, Oricom may always, subject to the Competition and Consumer Act 2010, at its discretion, elect to provide you with a replacement product of its choosing that is at least equivalent to your product in performance.

No change to the conditions of this Express Warranty is valid unless it is made in writing and signed by an authorised representative of Oricom.

Oricom will not be liable under this Express Warranty, and to the extent permitted by law will not be liable for any defect, loss, damage or injury arising out of or in connection with a:

8

1. Failure by you to adhere to the warnings and follow the instructions set out in this user guide for the proper installation and use of the product;
2. Willful misconduct or deliberate misuse by you of the product;
3. Any external cause beyond our control, including but not limited to power failure, lightning or over voltage; or
4. Modification to the product or services carried out on the product by anyone other than Oricom or Oricom's authorised service provider.

### How to make a claim under your Express Warranty in Australia

Oricom has a simple warranty process for you to follow:

- Please call or email our Customer Support Team, 02 4574 8888 or support@oricom.com.au.
- A Customer Support Team member will verify after troubleshooting with you if your product qualifies under warranty. If so, they will give you a Product Return Authorisation number.
- We will then email a Return Authorisation form and a Repair Notice (if necessary), together with instructions on how to return the product for warranty service.

9

Please note that if a Customer Support Team member advises that your product does not qualify for return, this warranty does not apply to your product. Products that are authorised to be returned to Oricom in Australia must include all of the following:

- A completed Return Authorisation form
- A copy of your Proof of Purchase (please keep your original copy)
- The faulty product, including all accessories.

Send the approved returns to:

Oricom International Pty Ltd

Locked Bag 658

South Windsor NSW 2756 Australia

Please note that this Express Warranty excludes expenses incurred by you in returning any faulty product to us. You must arrange and pay any expenses incurred (including postage, delivery, freight, transportation or insurance of the product) to return the faulty product to us, however, we will arrange delivery of the repaired or replaced faulty product to you.

10

### Important Information - Repair Notice

Please be aware that the repair of your products may result in the loss of any user-generated data (such as stored telephone numbers, text messages and contact information). Please ensure that you have made a copy of any data saved on your product before sending for repair. Please also be aware that products presented for repair may be replaced by refurbished products or parts of the same type rather than being repaired.

11

### ORICOM CUSTOMER SUPPORT

Oricom have a trained and dedicated team of Customer Support Representatives, each with the knowledge and resources to assist in answering your questions quickly and efficiently.

#### Oricom Support - Australia

For all product enquiries, troubleshooting or to discuss the range of Oricom products, feel free to contact Oricom or visit our website for answers to frequently asked questions.

#### 02 4574 8888

Monday - Friday 8am – 6pm AEST

Email: support@oricom.com.au

www.oricom.com.au

#### Oricom Support - New Zealand

#### 0800 674 266

Monday - Friday 10am - 8pm NZST

Email: support@oricom.co.nz

