

CARE900-1/Care900-2

Amplified Phone with direct dial picture buttons and cordless handset



USER'S GUIDE

Keep this user guide for future reference. Always retain your proof of purchase in case of warranty service.

General Information 3

Quick Setup..... 5

Package Contents of Care900-1 6

Important Safety Instructions..... 7

Location..... 8

Installing Your Phone..... 8

Getting to Know Your Phone..... 10

Using Your Phone 18

Phone Settings 22

Caller Display (Network Dependent)..... 28

Phonebook 30

Speed Dial Keys (Key 1 to Key 9)..... 31

Call Blocker 33

Automatic Call Block Mode 36

Anonymous Call Block Mode..... 36

Reminder 38

Answering Machine 39

Technical Specifications..... 46

Troubleshooting..... 46

Safety 49

Environment..... 50

Express Warranty (Australia) 50

Need Help?

If you need assistance setting up or using your Oricom product now or in the future, call Oricom Support.

Australia 02 4574 8888
 www.oricom.com.au
 Mon-Fri 8am – 6pm AEST

New Zealand 0800 67 42 66
 Mon-Fri 10am – 8pm NZST

General Information



It is very important that you read the User Guide carefully as it contains detailed information on installation, programming and operational issues which you will need to be aware of to ensure the Care Phone operates properly. Listed below are **some** of the important issues and important warnings which you need to be aware of.

This is a summary of the important issues. You **must still read** the User Guide in full.

- This telephone will not operate in the event of a mains power failure. Please ensure that a separate telephone, not dependent on local power, is available for emergency use.
- The telephone is designed for indoor use only. Do not install the telephone in areas where there is the risk of an explosion, excessive exposure to smoke, dust, vibrations, chemicals, moisture and heat.
- Do not use your telephone during an electrical thunderstorm as it is possible to get an electric shock.
- The earpiece of the handset may attract small metal objects such as staples and pins. Care should be taken when placing the handset near these items.
- Setting the receiver volume to maximum may, under some situations cause ear damage. We suggest returning the handset volume control to the minimum position after each call.
- Do not install in damp locations such as a bathroom or laundry, do not expose the unit to direct sunlight.

Notes for operation in New Zealand

The grant of a Telepermit for any item of terminal equipment indicates only that Spark has accepted that the item complies with the minimum conditions for connection to its network. It indicates no endorsement of the product by Spark, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Spark's network services.

This equipment shall not be set to make automatic calls to the Telecom "111" Emergency Service.

This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

This equipment should not be used under any circumstances that may constitute a nuisance to other Telecom Customers.


REN (RN for New Zealand)

The REN (Ringer Equivalence Number) or (RN) is of significance only if you wish to connect more than 1 telephone to your telephone line. A standard telephone line has a maximum REN capacity of 3 (RN of 5). It is possible to connect 3 devices with a REN of 1 (RN of 1) with no degradation to the product's performance. Exceeding this limit may cause the volume of the ringer in any phone to decrease or not ring at all.

Quick Setup

Set Language

When powering up for the first you will need to select a language.

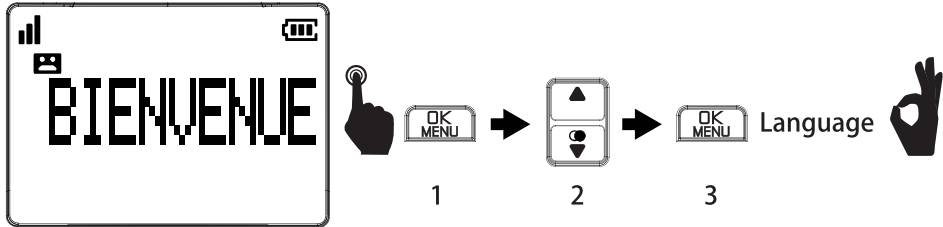

1. Press **OK** on the handset.
 2. Press **▲** or **▼** to select the desired language.
 3. Press **OK** . A confirmation tone is heard and **OK** will appear on the screen.
- For multiple handsets, you only need to set this up on one handset, the settings will carry across to the additional handsets.



DATE & TIME

1. Press **OK** on the handset in idle mode.
2. Press **▲** or **▼** to select **HS SETTING**, then press **OK** .
3. Press **▲** or **▼** to select **DATE&TIME**, then press **OK** .
4. Press **▲** or **▼** to select **SET TIME**, then press **OK** , Input the day, month, year, then press **OK** , input hour (24HR format), and minutes, then press **OK** , You hear confirmation tones.

Note: if you enter the wrong number, you can press **▲** or **▼** to select the position and enter correct number.


Package Contents of Care900-1

The package contains the following items:

1. Cordless handset
2. Base unit
3. Mains power adaptor
4. Telephone line cord
5. 3pcs of AAA 500mAh NiMH rechargeable batteries
6. User Guide
7. 4 pcs of transparent photo covers

The Care900-2 package contains these additional items:

- Cordless handset
- Cordless handset charging dock
- Mains power adaptor
- 3 pcs AAA 500mAh NiMH rechargeable batteries

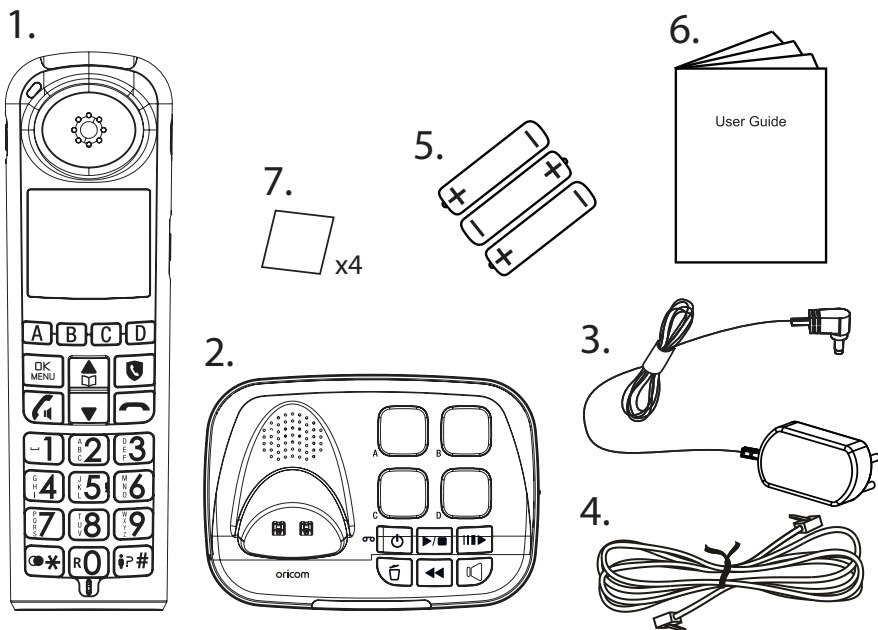

Important Safety Instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all the instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning.
Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. **To avoid hearing damage, please make sure anyone who uses this product is aware that the product can produce loud sound when Audio boost function is on.**
5. Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
6. Do not expose the telephone to direct sunlight or extreme cold environment. Do not put the telephone close to a heating source such as heaters, cookers, etc.
7. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
8. NEVER use your phone outdoors during a thunderstorm-unplug the base from the telephone line and the mains socket when there are storms in your area.
9. Do not use the telephone to report a gas leak in the vicinity of the leak.
10. **Use only the supplied NiMH (Nickel Metal Hydride) batteries!**
The operation periods for the handsets are only applicable with the default battery capacities.
11. **The use of other battery types or non-rechargeable batteries/primary cells can be dangerous and may result in warranty being void.**
The manufacturer will not be held liable for damage arising from such non-compliance.
12. Do not use third party chargers. The batteries may be damaged.
13. Dispose of batteries safely according to your local authority.

Location

For maximum coverage and reduced interference, here are some guidelines you should consider for base unit placement.

- Place at a convenient, high, and central location with no obstructions between the handset and base unit in an indoor environment.
- Place away from electronic appliances such as televisions, microwave ovens, radios, personal computers, wireless devices or other cordless phones.
- Avoid facing radio frequency transmitters, such as external antennas of mobile phone cell stations.
- Avoid plugging into the same circuit as other major household electrical appliances to avoid potential interference.


If the reception for a base unit location is not satisfactory, try another location.

Depending on the surrounding conditions as well as spatial and structural factors, the range may be reduced. The range indoors is normally less than outdoors.

Installing Your Phone

Installing and Charging the Batteries

1. Slide down to open the battery compartment cover.
2. Place the 3 supplied AAA-size NiMH rechargeable batteries as indicated. Please note the correct polarity while inserting the batteries.

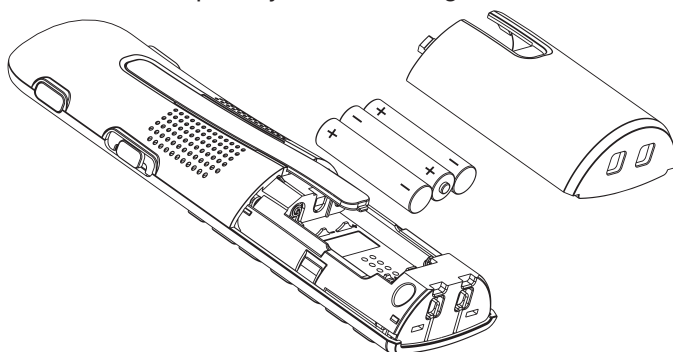

3. Re-install the battery compartment cover.
4. Put the handset on the base and charge for 15 hours before using the handset for the first time.


Notes:

1. **Use only the supplied NiMH rechargeable batteries.**
2. If the handset will not be used for a long time, disconnect and remove the batteries to prevent possible leakage. Battery leakage is not covered by our warranty.

Replacement 500mAH, 1.2V batteries can be ordered by contacting the Oricom Support Team. Part Number: 2T0076


Connecting the Base Station

1. Plug one end of the telephone line cord into the telephone jack on the bottom of the base.
2. Plug the small end of power adaptor into the power port next to the phone line connection on the bottom of the base.
3. Plug the large end of power adaptor into a wall power outlet.
4. Plug the other end of the telephone line cord into your telephone connection.
5. Always use the cables provided in the box.

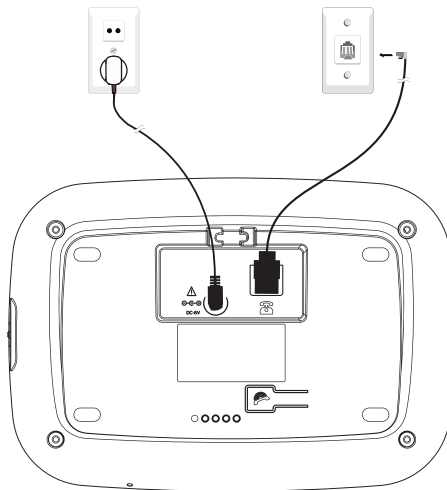

Getting to Know Your Phone

Handset Overview

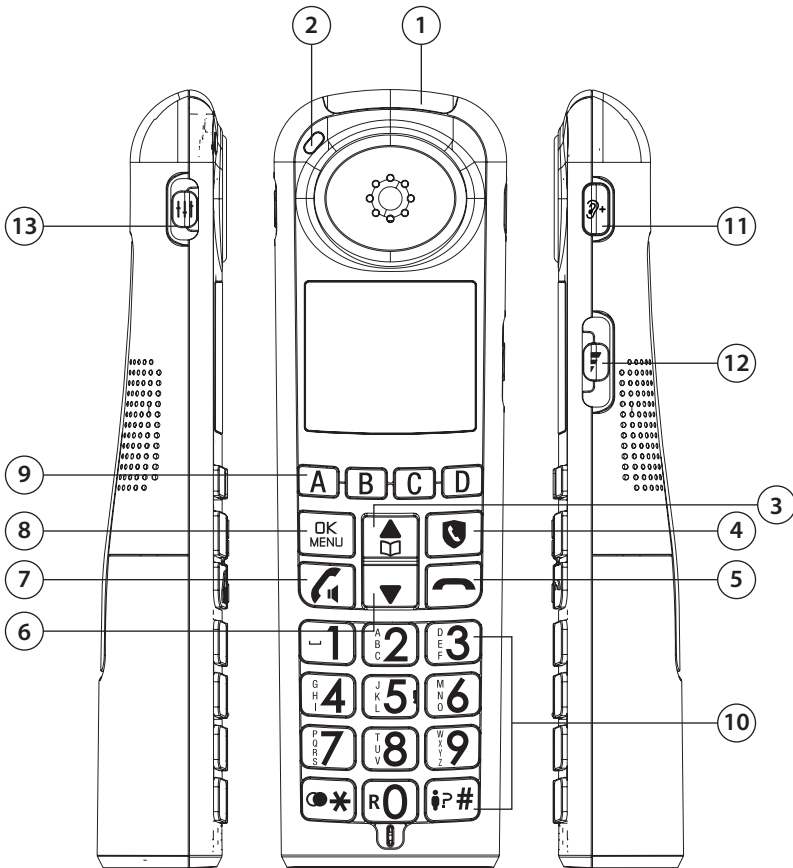

1. INCOMING CALL LED

- Flashes when there is an incoming call or the base is paging the handset.

2. CHARGE LED

- On when the handset is charging in the base and/or docked.



3.

- In menu mode: Press to scroll up the menu.
- In ringing mode: Press to increase ringer volume of handset.

- While entering names or numbers in the phonebook:
Press to move the cursor to the left.
- In idle mode: Press to access phonebook.
- 4. 
 - In Idle mode: Press to go to Call Block menu.
 - In ringing mode: Press to block incoming call number if Block Set is set to ON.
- 5. 
 - During a call: Press to end a call and go back to idle screen.
 - **In editing/predialing mode: Press to clear a character/digit.**
 - **In menu/editing mode: Press and hold to go back to idle screen.**
 - In ringing: Press to mute handset ringer.
- 6. 
 - In menu mode: Press to scroll down the menu items.
 - In ringing mode: Press to decrease the ringer volume of handset.
 - While entering names or numbers in the phonebook:
Press to move the cursor to the right.
- 7. 
 - In idle/pre-dialing mode: Press to make a call.
 - During ringing: Press to answer a call.
 - During a call: Press to turn on/off the speakerphone.
- 8. 
MENU
 - Press to select a menu item.
 - While in a menu: Press to select an item or save an entry or setting.
- 9. **A B C D**
 - Press to dial out phone numbers stored in memory A, B, C, or D.,,,
- 10. **ALPHANUMERIC KEYPAD / * / #**
In idle / pre-dial / editing mode:
 - Press to enter characters /numbers.
 - Press ***** to switch between upper case and lower case while entering characters.
 - During a call: Press and hold **#** to answer an incoming call when you receive a call waiting alert*.
- 11. 
 - Press to enhance the clarity and loudness through the earpiece during a call.



 
Warning: this phone may emit high volume of sound in boost mode. Take Extra Care when you use audio boost, we recommend the volume setting is set to minimum when boost is turned on.

12.


- During a call: Slide to increase the volume /decrease the volume.

13.


- Sound experience: slide to select “NATURAL”, “BASS” or “TREBLE” during a call.



BASS
(lowest position)

 

TREBLE
(mid position)

 



NATURAL
(highest position)

14.

- In idle mode. Long press to access the redial list. Short press for star.
- In talk mode. Access to vocal server services.

Base Station Overview

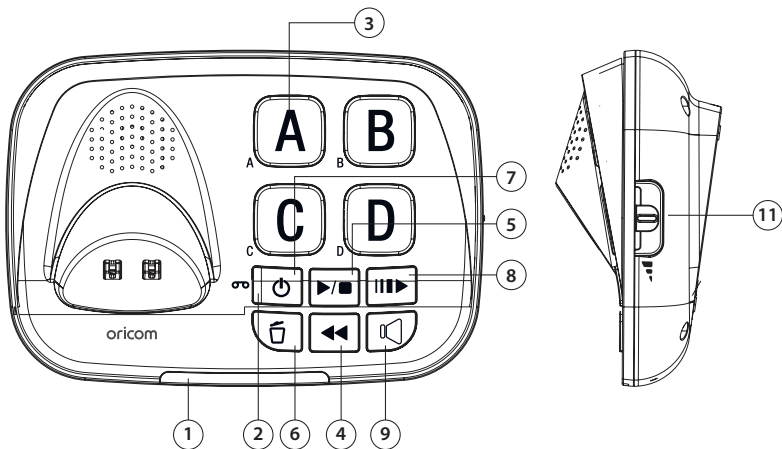

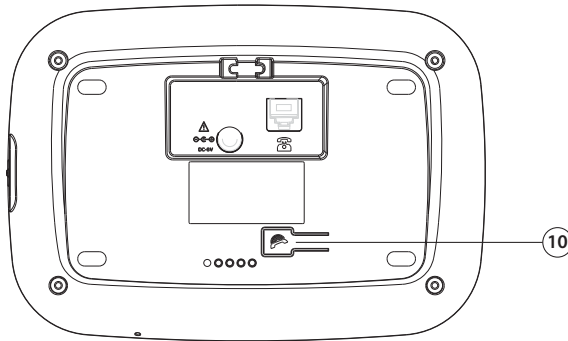

1. INCOMING CALL LED


- Flashes when there is an incoming call.
- On when the phone is in use.
- On when a device is being registered.
- On when another telephone on the same line is in use.

2. MESSAGE LED ()

- On when the answering machine is on.
- Flashes when there are new messages/memos in the answering machine.
- Flashes slowly when pressing  for slow play.

3. DIRECT MEMORY KEYS (A, B, C, D)

- Press to dial out phone number stored.

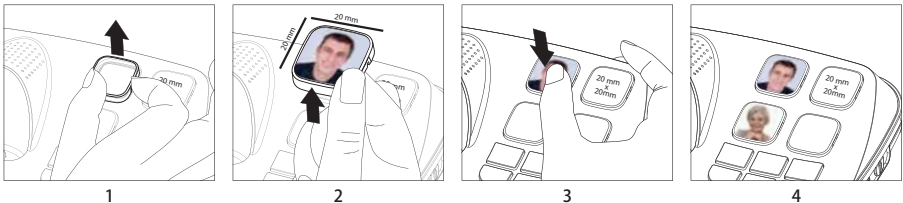

4.

- Press to replay the current message from the beginning.
- Press twice to skip backward to the previous message.

5.

- Press to play the message.
- Press again to stop the message playback.

6.

- Press to delete the message currently playing.
- In idle mode, long press to delete all old messages.

- 7. 
 - Press to turn on the answering machine.
 - Press again to turn off the answering machine.
- 8. 
 - Press to slow down the message playback.
- 9. 
 - Press to make, answer or end a call through base speaker.
 - Orange LED is on during speaker mode.
- 10. 
 - Press to page your handset. It will ring for approximately 60 seconds.
- 11. 
 - During a call: Slide up and down to increase /decrease the volume.
 - During message playback: Press to adjust the volume.

Display Icons and Symbols of LCD on Cordless Handset.

Display icons	Description
	Full battery power level.
	2/3 battery power level.
	1/3 battery power level.
	Flashes when the battery is low and needs charging.
	The speakerphone is in use.
	On: if the handset ringer is turned off.
	On: when there are new Voice Message Waiting (VMWI)*. Off: when all the voice messages have been read. (Network service dependent)*

	 displays when the signal strength is strong.  displays when the signal strength is moderate.  displays when the signal strength is weak. Off when handset is out of range from the base.
	On: New call list- Missed and new calls.
	On: The answering machine (TAM) is turned on. Flashes: when new TAM message is received. Off: The answering machine (TAM) is turned off.
	On: when an alarm is set. Off: when an alarm is off.
	On: when audio booster is activated (in earpiece mode). Off: when audio booster is deactivated.
	On: when the telephone line is in use. Flashes: when there is an incoming call.
	On: when the entry in call list is a contact saved in black list.

*Subject to subscription and availability of the service from your service provider.

MENU TREE

MAIN MENU	Level 1	Level 2	Level 3	Level 4	Level 5
Call List	FIRST ENTRY	View			
		Add To PB	VIP X		
	LAST ENTRY	Add To Block			
		Delete	Confirm?		
		DeleteAll	Confirm?		
Phonebook	All	FIRST ENTRY	Add new	Number	Name
			View		
		LAST ENTRY	Edit	Number	Name
			Delete	Confirm?	
			DeleteAll	Confirm?	
			Add to SD	KEY 1	
				KEY 2	
					
				Used	
			Status		
	Speed Dial	Key 1	Add new	Number	Name
		Key 2	View		
			Edit		
		KEY 9	Delete	Confirm?	

Getting to Know Your Phone

Call Block	Block Set	Off *	Saved		
		On	Saved		
		VIP OK	Saved		
		Contacts OK	Saved		
	Blocklist	FIRST ENTRY	Add new	Number	Name
			View		
		LAST ENTRY	Edit		
			Delete	Confirm?	Deleted
			Delete All	Confirm?	Deleted
			Status	Used	
	Block Anonym	Off *	Saved		
		Private	Saved		
		All	Saved		
Direct Mem.	A	Add new	Number	Name	
	..B..C..D	Voice Tag	Playback	Playing	
			Record	Recording	
			Delete	Deleted	
		View			
		Edit	Number	Name	
		Delete	Confirm?		
Ans.Machine	MSG Playback				
	Delete All	Confirm?			
	Memo	Recording			
		Playing			
	Tam On/Off	On *			
		Off			
	OGM	Ans & Rec *	Play OGM	Playing	
			Rec. OGM	Recording	
			Delete	Deleted	
		Answer Only	Play OGM		
			Rec. OGM	Recording	
			Delete	Deleted	
	Answer Mode	Ans & Rec *			
		Answer Only	Play OGM		
	Tam Setting	BS Screening	Off *		
			On		
		Answer Delay	Rings 2		
			Rings 4		
			Rings 6		
			Rings 8		
			Rings 10		
		Record Time	60 s *		
			120 s		
			180 s		
		Remote Acc.	Off *		
			On		
		Change Pin	PIN? _____		
		Msg Alert	Off *		
			On		


HS Setting	Ring Setup	Ext.Ring	Melody 1		
			Melody 3 *		
					
			Melody 12		
		Int.Ring	Melody 1		
			Melody 2		
			Melody 3 *		
					
			Melody 12		
		Ring Volume	Volume 1 *		
					
			Ring Off		
	Tone Setup	Key Tone	On *		
			Off		
		Batt. Tone	On *		
			Off		
		Out Of Area	On		
			Off *		
	Date / Time	Date Format	DD-MM-YY *		
			MM-DD-YY		
		Time Format	24 HR *		
			12 HR		
		Set Time	Set Date		
	Auto Answer	On *			
		Off			
	Registration	Registration			
	Delete Hs	1			
	Default	Confirm?			
BS Setting	BS Ringer	Melody 1			
		Melody 2 *			
					
		Melody 12			
	Ring Vol	Volume 1			
					
		Volume 5			
		Off *			
	Enrich Ring	Off *			
		On			
	Flash Time	Short *			
		Medium			
		Long			
	NZ CID	Off *			
		On			
Talk Digit	On	On *			
Reminder	ALARM 1	On/Off	ON	Time	Frequency
	...ALARM 10		Off	Saved	Daily
					Mon-Fri
					Once
		Melody	Melody 1		
					
			Melody 12		
		Rename			
		Voice Tag	Playback	Playing	
			Record	Recording	
			Delete	Deleted	
Intercom	Base				

Using Your Phone

Set Date & Time and Language

Set Date & Time

1. Input Date, Time directly after first time power up

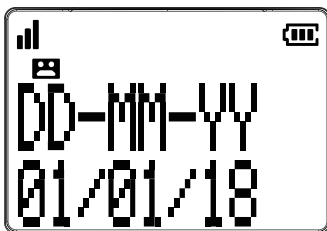

OR

1. Press **OK** on the handset in idle mode.
2. Press **▲** or **▼** to select **HS SETTING**, then press **OK**.
3. Press **▲** or **▼** to select **DATE&TIME**, then press **OK**.
4. Press **▲** or **▼** to select **SET TIME**, then press **OK**, Input the day, month, year, then press **OK**, input hour (24HR format), and minutes, then press **OK**, You hear confirmation tones.

Note: if you enter the wrong number, you can press **▲** or **▼** to select the position and enter correct number. For 12 hour time format, press any number to select AM or PM.

Make, Answer, End a Call

Make a Call

Preparatory Dialing

Handset: Enter the phone number and press  to dial the number.

Press  to clear the entry.

Direct Dialing

Handset: Press  to open the line and enter the phone number.

Call direct memories (A, B, C, D) on base or on handset

Press  (on handset) or  (on base) to enter talk mode.

Press again if you wish to activate handsfree mode.

Press A, B, C, D key on handset or Photo A, B, C, D key on base to dial.

Note:

- Pressing  or  a third time will terminate handsfree mode
- Before dialing, programming of A, B, C, D keys is required, refer to Section "Set Photo A, B, C, D key memories".

Call the indirect memories (Key 1 to Key 9)

Long press Key 1, or,Key 9 on the handset to dial.

Note: Before dialing, programming of key 1, ...key 9 is required, refer to Section "Store phonebook in speed dial".

Answer a Call

Using Cordless Handset:

If the handset is not on the charging cradle, when the phone rings, press .

Using Telephone Base:

Press  to answer a call. The handsfree mode will be activated.

End a Call

During a call connection,

Using Cordless Handset:

Press  OR put the handset on the charging cradle to end a call.

Using Telephone Base:

Press  to end a call.

Set Photo A, B, C, D key memories**Input number and name**

1. Press **OK** on the handset in idle mode.
2. Press **▲** or **▼** to select **DIRECT MEM**, then press **OK**.
3. Press **▲** or **▼** to select **A, B, C, D**, then press **OK**.
4. Select **ADD**, , then press **OK**, enter the telephone number, press **OK**, then enter name, then press **OK**. You hear confirmation tones.

Note: While entering a number or name, you can make a correction by pressing



, the last number or letter entered will be deleted.

Record your own voice tag

This feature requires caller ID to be activated by your telephone service provider.

This feature is VERY convenient to know who calls you if the telephone number is stored and voice is recorded in 1 of 4 photo keys.

You can program telephone number and record your voice through the handset. For other operations, they are controlled through the handset only.

1. Follow steps 1,2 and 3 from "Input number and name" on page 19, press **OK** .
2. **VIEW** appears, press **▲** or **▼** to select **VOICE TAG**, then press **OK** .
3. Press **▲** or **▼** to select **RECORD**, then press **OK** .
4. **RECORDING...** will appear, speak into the phone with a clear voice towards the microphone (just below zero keypad).
5. Press **OK** to finish recording.

Note: approx. 15 seconds recording time per memory.

When the direct calling number has been saved in A, B, C, or D, a ringing sound with the recorded voice will play from the handset and base until you answer by pressing  on handset or  on base.

Play Voice tag

1. Press **OK** on the handset in idle mode.
2. Press **▲** or **▼** to select **DIRECT MEM**, then press **OK** .
3. Press **▲** or **▼** to select **A, B, C, D**, then press **OK** .
4. **VIEW** appears, then press **▲** or **▼** to select **VOICE TAG**, press **OK** .
5. **PLAYBACK** appears, then press **OK** .
6. **PLAYBACK PLAYING** will appear. The recording will play.

Delete Voice tag

1. Repeat the step 1 to 4 in Section "Play Voice tag".
2. **PLAY** appears, then press **▲** or **▼** to select **DELETE**, press **OK** .
3. **DELETED** will display.

To view saved contact of Photo memory

1. Press **OK** on the handset in idle mode.
2. Press **▲** or **▼** to select **DIRECT MEM**, then press **OK** .
3. Press **▲** or **▼** to select **A, B, C, D**, then press **OK** .
4. **VIEW** appears, then press **OK** .
5. Record (name and number) will show.

Press  to return previous menu.

To edit saved contact of Photo memory

1. Press **OK** on the handset in idle mode.
2. Press **▲** or **▼** to select **DIRECT MEM**, then press **OK**.
3. Press **▲** or **▼** to select **A, B, C, D**, then press **OK**.
4. **VIEW** appears, then press **▲** or **▼** to select **EDIT**, press **OK**.
5. Edit number, then press **OK**.
6. Edit name, then press **OK**.

Press  to return previous menu.

Note: While entering a number or name, you can make a correction by pressing



, the last number or letter entered will be deleted.

Adjust Earpiece and Handsfree Volume

There are 6 levels to choose from for earpiece volume in Cordless handset and handsfree volume, through volume slide switch (refer to Section "Handset Overview" and "Base station Overview").

During a call:

Using Cordless Handset:

Slide up and down  to select volume 1-6.

The current setting is shown on the screen.

Using telephone base:

Slide left and right  to select volume level.

Audio Boost

Use the audio boost feature to enhance loudness on the cordless handset earpiece.

To turn on Audio Boost:

While you are on a call or listening to a message using the handset earpiece.

Using cordless handset, press + on side of handset.

To turn off Audio Boost:

Press + again.

Note: Audio boost function resets to “off” after end of call.



Warning: This phone may emit high volume of sound in boost mode. Take Extra Care when you use audio boost, we recommend the volume setting is set to minimum when boost is turned on.

Equalizer

The equalizer feature on the handset enables you to change the quality of the handset audio to best suit your hearing.

During a call:

1. Slide up and down  on handset to select Treble, Natural, or Bass. (refer to Section "Handset Overview" item 13 for details).

Redial

Each Cordless handset stores the last 10 dialled numbers (up to 17 digits each) in the redial list. Note: The redial entries are not synced when more than one cordless handset is in use.

In idle mode:

1. Press  and hold for 1 second.
2. Press  or  to view the list.
The handset beeps twice at the end of the list.
3. When the desired number displays, press  to dial.

Phone Settings

Note: Base station must have power connected.

Set Ringer Melody and Volume

Set Handset ringer volume:

1. Press **OK** on the handset in idle mode.
2. Press  or  to select **HS SETTING**, then press **OK**.
3. Press **RING SETUP** by pressing **OK**.

4. Press ▲ or ▼ to select **EXT. RING**, **INT. RING** or **RING VOL.**, then press **OK** .
5. After selection, press **OK** to confirm setting. You will hear confirmation tones.

Set Base ringer:

1. Press **OK** on the handset in idle mode.
2. Press ▲ or ▼ to select **BS SETTING**, then press **OK** .
3. Repeat step 3 to step 5 of the above section.

Notes:

EXT. RING ring tone (total 12 for handset, 12 for base) for an external call.

INT. RING ring tone (total 12 for handset) for an internal call (between base and handset, or among 2 or more handsets registered to the base).

RING VOL is **OFF**, **VOLUME 1** to **VOLUME 5**.

When the telephone is ringing, you can temporarily silence the ringer of the handset by pressing  only without disconnecting the call.

The next call rings normally at the preset volume.

Set Alert Tone

You can turn on / off the alert tones for low battery, out of range and keypad tones.

1. Press **OK** when idle.
2. Press ▲ or ▼ to select **HS SETTING**, then press **OK** .
3. Press ▲ or ▼ to select **TONE SETUP**, then press **OK** .
4. Press ▲ or ▼ to select **KEY TONE**, **BATT TONE**, or **OUT OF AREA**, then press **OK** .
5. Press ▲ or ▼ to select **ON**, or **OFF**, then press **OK** .

You hear confirmation tones.

Set Date and Time Format

1. Press **OK** when idle.
2. Press ▲ or ▼ to select **HS SETTING**, then press **OK** .
3. Press ▲ or ▼ to select **DATE&TIME**, then press **OK** .
4. Press ▲ or ▼ to select **DATE FORMAT**, then press **OK** ,
select your desired date format (**DD-MM-YY** or **MM-DD-YY**), then press **OK**.

5. Press ▲ or ▼ to select **TIME FORMAT**, then press **OK** , select your desired time format (**24 HR** or **12HR**) then press **OK**.
Note: For 12 hour time format, press any number to select AM or PM.
6. Press **OK** to confirm. You hear confirmation tones.

Talking Digit

You can turn on or off the audible spoken tone that announces the digits when you press the dialing key on the handset whilst making a call.

1. Press **OK** when idle.
2. Press ▲ or ▼ to select **Talk Digit**, press **OK** , then press ▲ or ▼ to select **ON** or **OFF**.
3. Press **OK** to confirm. You hear confirmation tones.

Change the Flash Time

1. Press **OK** when idle.
2. Press ▲ or ▼ to select **BS SETTING**, then press **OK** .
3. Press ▲ or ▼ to select **FLASH TIME**, then press **OK** .
4. Press ▲ or ▼ to select your desired flash time.
(**Short**, **Medium**, **Long**), then press **OK** to confirm.
You hear confirmation tones.

Reset Your Phone

You can reset your phone to the default settings.

After reset, all personalized phone settings will revert back to default factory settings.

1. Press **OK** when idle.
2. Press ▲ or ▼ to select **HS SETTING**, then press **OK** .
3. Press ▲ or ▼ to select **DEFAULT**, then press **OK** , **CONFIRMED?** is displayed, then press **OK** to confirm. You hear confirmation tones.

Registration

Your handset and telephone base are pre-registered. If for some reason, the handset is not registered to the base station, **Register** will be displayed on the handset screen. If it is out of the base and ■■■ disappears on the screen, you

need to register the handset, follow the steps below -

1. Make sure the handset is out of the base and shows **Register** before you begin registration
2. In idle mode, press and hold  located under the telephone base for around 5 seconds until incoming call LED light bar illuminates on the telephone base.
3. Press **OK** on handset when idle.
4. Press **▲** or **▼** to select **HS SETTING**, then press **OK**.
5. Press **▲** or **▼** to select **Registration**, then press **OK**, **Registration** appears on the screen until the handset displays **Registered**.

If registration fails, the handset displays **Impossible**.

Please repeat the above procedure.

Note: make sure batteries are fully charged to register.

Find the Handset

You can locate the handset by pressing  once on the paging key, located under the main base.

All the handsets registered to the base will produce the paging tone and **"PAGING"** is displayed on the LCD of the handsets.

You can stop the paging by pressing  ,  , on any handset or  on the base again.

Note: If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

Conference call

Up to 5 cordless handsets and the telephone base can join an external call at the same time.

To join a call with a cordless handset:

- Press  join the call.
- Press  or place the handset in the base or charger to exit the call.

To join a call with the telephone base:

- Press  to join the call.
- Press  again, to exit the call.

Transfer a call

During an external call, you can transfer the call from a cordless handset or the telephone base to additional cordless handset or base.

To transfer a call from a cordless handset:

During a call,

1. Press **OK** , then press ▲ or ▼ to select **INTERCOM**, then press **OK** .
2. If you have two or more cordless handsets, press ▲ or ▼ to select the desired device and then press **OK** .
3. The external call is put on hold and the cordless handset shows **CALLING HS 2** or **CALLING BASE** destination device rings.

4. To answer the call on the destination handset, press,  , or any dialing key,
OR,

To answer the call on the base, press  (speaker mode).

5. Press  on the calling handset to transfer the call to additional handset or base.

To transfer a call from the telephone base:

During a call,

1. If the handset is in base, pick up from cradle, the call will be transferred from base to handset automatically.
2. If handset is out of base, press  to start conference call between base and external call.

Then, press  on the base to transfer the call to the cordless handset.

Intercom

Use the intercom feature for conversations between two cordless handsets or between cordless handset and base.

In idle mode,

Intercom initiated from cordless handset:

1. Press  , and then press **OK** , then press ▲ or ▼ to select **INTERCOM**, then press **OK** .
2. If you have two or more cordless handsets, press ▲ or ▼ to select the desired cordless handset and then press **OK** .
3. The cordless handset shows **CALLING HS 2**, the destination device rings.

4. To answer the call on the destination handset, press, , or any dialing key,
- OR**, To answer the call on the base, press  (speaker mode).

Answer a Call

If the handset is not on the charging cradle:

When the phone rings, press  to answer a call.

If the handset is on the base station and if **AUTO ANSWER** is set to ON:

When the phone rings, pick up the handset to answer a call.

To turn on / off **AUTO ANSWER**.

1. Press **OK** when idle.
2. Press **▲** or **▼** to select **HS SETTING**, then press **OK** .
3. Press **▲** or **▼** to select **AUTO ANS.**, then press **OK** .
4. Press **▲** or **▼** to select **ON**.
5. Press **OK** to confirm. You hear confirmation tones.

Enrich Ring

When first call is not picked up and the same caller calls again within 5 minutes, the ringer level of handset and base will be automatically set to maximum, to alert you of the incoming call.

1. Press **OK** on the handset in idle mode.
2. Press **▲** or **▼** to select **BS SETTING**, then press **OK** .
3. Press **▲** or **▼** to select **ENRICH RING**, then press **OK** to select **ON**.
4. Press **OK** to confirm. You hear a confirmation tone.

To disable:

1. Repeat steps 1 to 2.
2. Press **▲** or **▼** to select **ENRICH RING**, then press **OK** to select **OFF**.
3. Press **OK** to confirm. You hear a confirmation tone.

NOTE: This feature is network dependent and may not work.

CALLER DISPLAY (Network Dependent)

This feature is available if you have subscribed to Caller Line Identification service with your telephone service provider.

Your phone can store up to 30 received calls with date/time information in the Call List. The number will be shown on the LCD when the phone is ringing. If the number matches one of the entries in your Private Phonebook, the caller's name and number stored in the private phonebook will be displayed.

If the caller has called ID disabled, **UNAVAIL** will display.

If the caller number is not provided, **PRIVATE** will display.

In standby, if three unanswered calls with different calling numbers are received, **"3 NEW CALLS"** will be displayed. Each time you review a call list entry marked with  icon, the number of new calls decreases by one. When you have reviewed all the new calls, the  icon disappears.

If the incoming telephone number matches the last 7 digits of a telephone number in your phonebook, the name that appears on the screen matches the corresponding name in your phonebook.

View the call list

All received calls are saved in Call List with the latest call at the top of the list. When the call list is full, the oldest call will be replaced by a new call. When number of digits of incoming number is more than 10, phone will display first 9 digits, you can press ***** key to view all digits.

In idle mode,

1. Press **OK** , **Call list** appears.
then press **OK** to review the calling number display history.
2. Press **▲** or **▼** to browse the call log.
3. Press **OK** , **VIEW** appears.
4. Press **OK** to view the details of the call log including date and time.
(Date/Month and Time appears in left and right sides of lower row respectively)
5. Press  to return previous menu.

Store a Call List Number into the Phonebook

1. Select a desired entry in the call list, and then press **OK** .
2. Press **▲** or **▼** to select **ADD TO PB**, and then press **OK** .

3. **Call number** appears press **OK** to confirm.
4. **Call name** appears, delete name, then can add the name.
5. Press **OK** to confirm. **VIPX** appears, press **OK** . You hear confirmation tones.

Store a Call List Number into the Black List

1. Select a desired entry in the call list, and then press **OK** .
2. Press **▲** or **▼** to select **ADD TO BL**, and then press **OK** .
3. **Call number** appears press **OK** to confirm.
4. **Call name**, delete number, then can add the name.
5. Press **OK** to confirm. You hear a confirmation tones.

Delete an entry in the call list

1. Select a desired entry in the call list.
2. Press **▲** or **▼** to select **DELETE**, and then press **OK** .
3. **CONFIRM?** appears press **OK** to confirm. You hear a confirmation tone.

Delete all entries in the call list

1. Select a desired entry in the call list. Press **OK** .
2. Press **▲** or **▼** to select **DELETE ALL**, and then press **OK** .
3. **CONFIRM?** will show, Press **OK** to confirm. You hear confirmation tones.

Call Waiting

You will hear a tone in the handset earpiece if someone calls while you are already on a call.

Using handset or speaker mode from the handset

- Long press **#** key on cordless handset to put your current call on hold and take the new call.
- Long press **#** key on cordless handset to switch back and forth between calls.

Voice Mail (Network Dependent)

By subscription to your network provider, you can have your calls diverted to

a voicemail box when you are absent. For more details, contact your network provider.

When new messages are received,  appears on the screen. The  disappears once you have retrieved the voicemail messages.

To reset the voicemail indicator:

1. Press **OK** to select **CALL LIST**, press **OK**.
2. Press **▲** or **▼** to select Voice Mail log.
3. Long Press key 4, and then  should disappear.

Phonebook

The phonebook stores up to 100 entries, which are shared by all handsets.

Add a new phonebook entry

In idle mode,

1. Press  or,
2. Press **OK**, press **▼** to select **PHONEBOOK**, then press **OK** to select **ALL**, press **OK**.



3. Press **OK**, **ADD new** appears, press **OK**.
4. Enter a telephone number, press **OK**.
5. Enter a name, then press **OK**. **VIPX** appears, press **OK**.

View a phonebook entry

1. Select a desired entry in the phone book, and then press **OK**.
2. **ADD** appears then press **▲** or **▼** to select **VIEW**, press **OK** to review name and number of the entry.

Press  to return previous menu or long press  to return to standby mode.

Search a phonebook entry

1. Follow the steps in View a phonebook entry above to enter the phonebook.
2. Enter the first character of the name to search.

Edit a phonebook entry

1. Select a desired entry in the phone book, and then press **OK** .
2. **ADD** appears then press **▲** or **▼** to select **EDIT**, press **OK** to edit the number.
3. Press **OK** to edit the name. You hear confirmation tones.

Note: when entering number or name, Press **OK** , **VIPX** appears, press **OK** .

You can correct a number or a letter by pressing  , last number or letter will be removed.

Store phonebook in speed dial

1. Select a desired entry in the phone book, and then press **OK** .
2. **ADD** appears then press **▲** or **▼** to select **ADD TO SD**, press **OK** .
3. Press **▲** or **▼** to select **KEY 1** to **KEY 9**.
4. Press **OK** to confirm. You hear confirmation tones.

Delete a phonebook entry

1. Select a desired entry in the phone book, and then press **OK** .
2. **Add new** appears then press **▲** or **▼** to select **DELETE**, press **OK** .
3. **CONFIRM?** will display, press **OK** to confirm. You hear confirmation tones.

Status of phonebook

You can view how many phonebook records are stored out of total 100 records.

1. Press  , press **OK** .
2. **ADD** appears then press **▲** or **▼** to select **STATUS**, press **OK** .
3. **X / 100 USED** will display.

SPEED DIAL KEYS (KEY 1 TO KEY 9)

You can use key 1 to 9 on handset as speed dial keys, long press the speed dial number to dial the saved phone number.

Store a speed dial entry

1. Press **OK** , press ▼ to select **PHONEBOOK**, then press **OK** .
2. Press ▼ to select **SPEED DIAL**, press **OK** .



3. Press ▲ or ▼ to select **KEY 1,... KEY 9**, then press **OK** .
4. **ADD** will display, then press **OK** .
5. Enter a number, then press **OK** .
6. Enter a name, then press **OK** . You hear confirmation tones.
7. Press  to return previous menu or long press  to return to standby mode.

View a speed dial entry

1. Repeat the step 1 to 3 in Section "Store a speed dial entry".
2. **VIEW** will display, then press **OK** .
3. The record (number and name) can be viewed.

Press  to return previous menu.

Edit a speed dial entry

1. Repeat the step 1 to 3 in Section "Store a speed dial entry".
2. **VIEW** will display, then press ▲ or ▼ to select **EDIT**, then press **OK** .
3. Edit a number, then press **OK** .
4. Edit a name, then press **OK** . You hear confirmation tones.

Note: when entering number or name, you can correct a number or a letter by pressing , then last number or letter will be removed.

Delete a speed dial entry

1. Repeat the step 1 to 3 in Section "Store a speed dial entry".
2. **VIEW** will display, then press ▲ or ▼ to select **DELETE**, then press **OK**.
3. **CONFIRM?** will display, then press **OK**. You hear confirmation tones.

CALL BLOCKER

This telephone is built-in with Smart Call Block feature*. This feature will help you avoid unwanted calls by only allowing some numbers to make your phone ring. Default setting of Smart Call Block in this telephone is OFF but you can enable it via your phone settings, see below.

**This feature requires a subscription of Caller Line Identification service from your telephone service provider.*

Call block overview

Settings	Explanations
Off	Call Block function (Block all call with numbers) is Disabled. This is the default mode.
On	Call Block function is set to Manual. Numbers registered in the black list will ring silently. Numbers can be added to the list while the phone is ringing and / or after a call (to enable, see "Manual call block mode").
Contacts	In this automatic mode, any number not registered to your phonebook will automatically be blocked and your phone will not ring. All calls from contacts registered to your phonebook will proceed normally. When this mode is chosen, Contacts OK is displayed on LCD in idle mode unless you have unread messages/missed calls (to enable, see "Add numbers to Blocklist").

VIPS	In this second automatic mode, only calls from contacts registered as VIP in your phonebook will go through and your phone will ring. All other numbers will not ring. When this mode is chosen, VIPS OK is displayed on the LCD in idle mode unless you have unread messages / missed calls (to enable, see "Add numbers to Blocklist").
Anonymous	This feature allows you to block calls that do not have a number attached to them (ie private calls, international calls, etc). This option can be enabled with any of the previous four options (to enable, see "Edit numbers in Blocklist").

Manual call block mode

Manual call block is the easiest option when starting out. When you choose ON in the call block settings, all calling numbers registered in your blacklist will be blocked. You can add/remove numbers from that list at any time.

How to block an incoming call:

When the phone is ringing, press . It will terminate the call and offer you the option to register the number to the blacklist.

Then to confirm, press OK.

IMPORTANT: if you don't confirm, the number will not be added to the blacklist.

Enable manual mode

Menu	 	Call block	 	Block set.	Off
					On*
					VIP OK
					Contacts OK

Press **OK** , press  or  to select **Call Block**.

Press **OK** , press  or  to select **Block Set**.

Press **OK** , press  or  to select **On** (manual mode).

OR

In idle mode, press  to access **Block Set**. directly.

After you enable this option, the call block icon will be displayed on the LCD.

Add numbers to Blocklist

In idle mode,

1. Press **0** key, **Call block** and its icon is displayed, then press **▲** or **▼** to select **Blocklist**,
press **OK** to show **Blocklist numbers**.
2. Press **▲** or **▼** to select numbers stored in **Blocklist**.
3. Press **OK** to select **Add**, enter number to be blocked, press **Save key** to save.

NOTE: Another way to add incoming and outgoing call numbers in Block list:

1. From incoming call numbers
Press **▼ ?**, to enter Call list, press **▲** or **▼** to select the stored numbers in **CALL LIST**.
Press **OK**, press **▲** or **▼** to select the **Add To Block** number.
Press **OK** to show selected number, press **OK** to save to Block list.

Edit numbers in Blocklist

In idle mode,

1. Repeat step 1 and 2 in Section "Add numbers to Blocklist" to select the stored number.
2. Press **OK**, Press **▲** or **▼** to select **Edit**, edit selected number press **OK** to save.

Delete numbers in Blocklist

Delete a number from blocklist

1. Repeat step 1 and 2 in Section "Add numbers to Blocklist" to select the stored numbers.
2. Press **OK**, Press **▲** or **▼** to select **DELETE**, **Confirm?** is shown, and then press **OK** to confirm.

Delete all numbers from blocklist

In idle mode,

1. Repeat step 1 and 2 in Section "Add numbers to Blocklist" to select the stored numbers.
2. Press **OK**, press **▲** or **▼** to select **Delete all** to delete all the numbers.
Press **OK**, **Confirm?** is shown, and then press **OK** to confirm.

Automatic Call Block Mode

VIPs only

In this restrictive automatic mode, only calls from numbers registered as VIP in your phonebook will ring.

Menu	↑↓	Call block	↑↓	Block set.	Off
					On
					VIP OK*
					Contacts OK

- Press **Menu**, press ▲ or ▼ to select **Call Block**.
- Press **OK** , press ▲ or ▼ to select **Block Set**.
- Press **OK** , press ▲ or ▼ to select **VIP OK** (Automatic mode).

Contacts only

In this mode, only calls from contacts registered in your phonebook (normal and VIP) will go through and ring.

Menu	↑↓	Call block	↑↓	Block set.	Off
					On
					VIP OK
					Contacts OK*

- Press **Menu**, press ▲ or ▼ to select **Call Block**.
- Press **OK** , press ▲ or ▼ to select **Block Set**.
- Press **OK** , press ▲ or ▼ to select **Contacts OK** (Automatic mode).

Anonymous Call Block Mode

This feature allows you to block numbers that do not display a number on your phone. It can be enabled or disabled independently from the previous call block modes.

Menu	↑↓	Call block	↑↓	Block anonym	Private*
					All
					Off

Press **Menu**, press ▲ or ▼ and Press **OK** to select **Call block**.

Press ▲ or ▼ to select **Block anonymous**.

Press **OK** , press ▲ or ▼ to select one of the options.

Block Private Calls

This mode will block incoming calls that do not display their numbers.

In idle mode,

1. Press  key, Call block and its icon is displayed, press **OK** .
2. Press ▲ or ▼ to select Block anonymous.
3. Press **OK** , press ▲ or ▼ to select Private, press **OK** to confirm.
4. Press Back twice.
5.  will be displayed on the upper side of LCD.

Block All Anonymous Calls

This mode will block all unknown incoming calls, including private calls, international calls, pay phone and other out-of-area calls.

In idle mode,

1. Repeat step 1 and 2 in Section "Block Private Calls".
2. Press **OK** , press ▲ or ▼ to select **ALL**, press **OK** to confirm.
3. The call block icon  will be displayed on the LCD.

Set Block Anonymous Calls OFF

In idle mode,

1. Repeat step 1 and 2 in Section "Block Private Calls".
2. Press **OK** , press ▲ or ▼ to select **Off**, press **OK** to confirm.
3.  will disappear from the LCD if the regular call block is also set to OFF.

REMINDER

The reminder feature helps remind you of important events. You can set the reminder to record your voice, or use alarm sound in order to remind you once, daily, Monday to Friday or Saturday to Sunday. Once you set the reminder, the system will alarm at the set time. Each reminder can be up to 2 minutes in length.

Turn on alarm reminder, set time and frequency

1. Press **OK** when idle.
2. Press **▲** or **▼** to select **REMINDER**, then press **OK**.
3. Press **▲** or **▼** to select **ALARM 1.. ALARM 10**, then press **OK**.
4. **ON/OFF** appears then press **OK** to select **ON**.
5. Enter the time then press **OK**.
6. Press **▲** or **▼** to select frequency **ONCE, DAILY, MON-FRI, SAT-SUN**.
7. Press **OK** to confirm. You hear confirmation tones.

Select melody of the alarm reminder

1. Repeat step 1 to 3 in Section "Turn on alarm reminder, set time and frequency".
2. **ON/OFF** appears then press **▼** to select **MELODY**, press **OK**.
3. Press **▲** or **▼** to select desired melody.
4. Press **OK** to confirm. You hear confirmation tones.

Rename the alarm reminder

1. Repeat step 1 to 3 in Section "Turn on alarm reminder, set time and frequency".
2. **ON/OFF** appears then press **▼** to select **RENAME**, press **OK**.
3. Change name from **ALARM** to your preference (max. 9 letters or digits)
4. Press **OK** to confirm. You hear confirmation tones.

Note: When entering number or name, you can correct a letter by pressing , the last number or letter will be removed.

Record Voice memo as the alarm reminder

1. Repeat step 1 to 3 in Section "Turn on alarm reminder, set time and frequency".
2. **ON/OFF** appears then press ▼ to select **VOICE MEMO**, press **OK**.
3. **PLAY** appears then press ▼ to select **RECORD**, press **OK** to start recording.
4. **RECORDING...** appears after beep sound, you can record your voice.
5. Press **OK** to finish your voice recording. Your voice will replay.
6. Press  to return previous menu.

Notes:

1. To playback your voice memo recording in step 3, select **PLAY**, then press **OK**. **PLAYING** will appear.
2. You can delete your voice memo in step 3, to select **DELETE**, press **OK**. Then, **DELETED** will appear after the memo is deleted.
3. If there is no voice memo recording in the alarm reminder, melody will play for 2 minutes at the alarm time.

ANSWERING MACHINE

The total storage capacity for the outgoing message, messages and memos is approximately 30 minutes.

Note: Your answering system will answer a call after 14 rings even when the answering machine is turned off. This is to allow the remote access feature to work.

Turn on/off the answering machine

If you turn the answering machine on, it answers calls and records messages. When the answering machine is on the red message LED  on the telephone base and the  icon on the handset are on.

Answer on/off through Cordless handset:

1. Press **OK** in idle mode.
2. Press ▲ or ▼ to select **ANS. SYS**, then press **OK**.
3. Press ▲ or ▼ to select **TAM ON/OFF**, then press **OK**.

4. Press ▲ or ▼ to select **ON** or **OFF**, then press **OK** to save.

You hear confirmation tones.

Answer on/off through base:

Press  key on the base to turn the answering machine on or off.

Note: When Answering machine is off, the red message LED  on the telephone base and the  icon on the handset are off.


Message Playback

If 2 new voice messages are stored in the phone, “**2 NEW MESSAGES**” will appear and the  icon will flash on the handset screen, the red message LED  on the telephone base will flash.

If memory is full, **MEM FULL** will display on the screen.

Listen to new messages through the Cordless Handset:

1. Press **OK** in idle mode.
2. Press ▲ or ▼ to select **Ans.Machine**, then press **OK**.
 - To play new messages, press **OK** to select **PLAYBACK**.
 - Time and date of the message played will display on the screen if listened through handset.

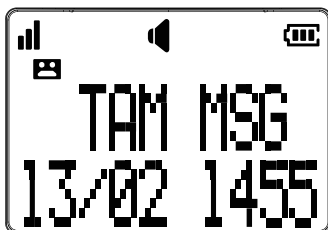

- After last message, “**END OF MESSAGES**” will appear.

Options during playback:

- Slide  up or down on side of handset to adjust the speaker phone volume.
- Press **6** to skip to the next message.
- Press **4** to repeat the message currently playing.

Press 4 twice to listen to the previous message.

- Press **2** to delete the current message
- Press **5** or  to stop.

OR,

During playback, press **OK** to select options:

REPEAT

NEXT

PREVIOUS

DELETE

Listen to new messages through the Base:

1. Press **▶/■** to listen to new messages through base speaker.
After playback of all new messages, a long beep will emit from the base.
2. To playback old messages, press **▶/■** again to listen.

Options during playback:

- Slide left and right **◀▶** on the side of base to adjust the speaker volume
- Press **◀◀** to repeat the message currently playing.
- Press **⏏** to delete the current message.
- Press **▶/■** to stop.
- Press **|||▶** to reduce the playback speed.

Delete Old Messages in the Answering Machine

Delete all old messages through the Handset:

1. Press **OK** in idle mode.
2. Press **▲** or **▼** to select **Ans.Machine**, then press **OK**.
3. **PLAYBACK** appears and then press **▲** or **▼** to select **DELETE ALL**, then press **OK**.
4. The handset displays **CONFIRM?** Then press **OK** to confirm.
5. The handset displays **DELETING...** and then **DELETED** is shown.
You hear confirmation tones.

Delete a message through the base:

1. Press **▶/■** to listen to new or old messages through base speaker.
2. Press **⏏** to delete the message being played. You hear confirmation tones.

Delete all old messages through the Base:

1. During idle mode, long press **⏏** to delete all old messages.
You hear confirmation tones.

Record a Memo

You can record your memo message for another user.

1. Press **OK** in idle mode to enter the main menu.
2. Press **▲** or **▼** to select **Ans.Machine**, then press **OK**.
3. **MSG Playback** appears and then press **▲** or **▼** to select **MEMO**, then press **OK**.
4. **RECORDING** shows on the screen. After the tone, speak towards the microphone.
5. Press **OK** when you finish recording. **PLAYING ...** shows on the screen. Your recorded memo will playback. then returns to the previous menu.
6. When listening to the memo, the time & date of the memo will display on the screen (when using handset).



Notes:

- MEM FULL will display on the screen if you attempt to record a memo when the memory is full.
- Each memo can be up to 4 minutes long.
- Memos shorter than two seconds are not recorded.

Outgoing Message (OGM)

The telephone is preset with a greeting that answers calls with “please leave a message after the tone.” You can use this default outgoing message, or replace it with your own.

Play your outgoing message (OGM)

1. Press **OK** in idle mode.
2. Press **▲** or **▼** to select **ANS. MACHINE**, then press **OK**.
3. **PLAYBACK** appears and then press **▲** or **▼** to select **SET OGM**, then press **OK**.
4. **ANS & REC** appears, press **OK**, **Play OGM** appears.
5. Then it will play the default outgoing message.

Record your own outgoing message (OGM)

1. Repeat step 1 to 4 in Section "Play your outgoing message (OGM)".
2. **PLAY** appears on the screen, then press ▼ to select **RECORD**, and then press **OK**.
3. **RECORDING...** appears, you can then record your outgoing message.
4. When you are finished recording, press **OK**.

Notes:

- Your outgoing message can be up to 90 seconds long.
- Outgoing messages shorter than two seconds are not recorded.

Delete your outgoing message

1. Repeat step 1 to 4 in Section "Play your outgoing message (OGM)".
2. **PLAY** appears on the screen, then press ▼ to select **DELETE**, and then press **OK**.
3. **RESET TO DEFAULT** will show, You hear confirmation tones.

Answering Machine Settings

Set Answer Delay

You can set the number of rings before the answering machine answers and starts playing your OGM. Options are to answer after 2 to 10 rings or TOLL SAVE. With TOLL SAVE selected, the answering machine answers after 2 rings when you have new messages, and after 4 rings when you have no new messages.

1. Press **OK** in idle mode.
2. Press ▲ or ▼ to select **ANS. Machine**, then press **OK**.
3. Press ▲ or ▼ to select **TAM Settings**, then press **OK**.
4. Press ▲ or ▼ to select **ANS. DELAY**, then press **OK**.
5. Press ▲ or ▼ to select **2, 4, 6, 8, 10 rings**, then press **OK** to save.

You hear confirmation tones.

Recording Time

You can set the maximum length of the recording time of the incoming messages.

1. Repeat step 1 to 3 in Section "Set Answer Delay".
2. Press ▲ or ▼ to select **REC. TIME**, then press **OK**.
3. Press ▲ or ▼ to select **60s, 120s, 180s**, then press **OK** to save.

You hear confirmation tones.

Call Screening

When the answering machine is set to ON and when there is an incoming message, the base will start call screening if call screening is set to ON after the preset numbers of rings of answer delay, press **OK** to screen the call on your handset. At any time if you want to pick up the call, you can press  on the handset, or press  on the telephone base. If the answering machine is in the process of recording, the message already stored will be saved.

1. Repeat step 1 to 3 in Section "Set Answer Delay".
2. **BS Screening** will display, then press **OK**.
3. Press  or  to select between **On** to **Off**, then press **OK** to save.

You hear confirmation tones.

Options while a message is being recorded in the telephone base:

- Slide up/down  on the side of base to adjust the speaker volume.
- Press / to temporarily turn off the feature.

Options while a message is being recorded in the cordless handset:

- Press **OK** to temporarily turn on the feature if it is set to off.
- Slide  up or down on side of handset to adjust the speaker phone volume.

Activate Remote Access

You can access the answering machine remotely by dialling your fixed telephone number from any touch-tone telephone.

Your phone lets you check your messages, or otherwise operate your answering machine, by calling the answering machine when you are away from home by entering a 4-digit remote access PIN on a tone-dialing phone.

To activate remote access function:

1. Press **OK** in idle mode.
2. Press  or  to select **ANS. Machine**, then press **OK**.
3. Press  or  to select **TAM Setting**, then press **OK**.
4. Press  or  to select **REMOTE ACC**, then press **OK**.
5. Press  or  to select **ON** or **OFF**, then press **OK** to save. You hear confirmation tones.

To change the remote code:

1. Repeat step 1 to 3 as above.
2. Press  or  to select **CHANGE PIN**, then press **OK** to enter a 4-digit number.

3. Press **OK** to save. You hear confirmation tones.

To access your answering machine remotely:

You can ring your phone from another tone-dialing phone to switch the answering machine on or off and listen to your messages remotely.

1. Place a call from a tone-dialing phone to your phone.
2. When the answering machine answers the calls and starts playing the outgoing message, enter ***** key and then 4-digit remote access code (0000 is the preset code).
3. See below list of Key functions.

Key	Description
2	Delete the message currently being played.
4	Repeat the current message or press twice for the previous message.
5	Play all messages.
6	Skip to the next message.
7	Turn on the answering machine.
9	Turn off the answering machine.

Notes:

- After 5 seconds of key inactivity, the answering machine automatically cuts off communication.
- When the answering machine is turned off, the telephone answers after 14 rings, and plays the outgoing message.

Message Alert Tone

When the message alert tone is set to On, the telephone base beeps every 10 seconds to alert you to new messages.

The tone stops when all new messages have been played.

1. Press **OK** in idle mode.
2. Press **▲** or **▼** to select **ANS. Machine**, then press **OK** .
3. Press **▲** or **▼** to select **TAM Settings**, then press **OK** .
4. Press **▲** or **▼** to select **MSG ALERT**, then press **OK** .
5. Press **▲** or **▼** to select **ON** or **OFF**, then press **OK** to confirm.

You hear confirmation tones.

Pressing any telephone base key temporarily silences the message alert tone. The message alert tone plays with the next incoming message.

TECHNICAL SPECIFICATIONS

Free Field Range	Up to 300 metres*
Indoor Range	Up to 50 metres*
Handset Battery Life (average values)	10 hours talk time** 100 hours standby**
Number of Handsets	Up to 4
Intercom Mode	Yes
Three-Way Conference	Yes (1 external correspondent + 2 internal correspondents)
Electrical Connection/Base Mains Adaptor/Charger	Main base adaptor and charger: Input: 100-240 V/50-60 Hz/0.15A Output: 6V DC/450 mA, 2.7W Only use the adaptors supplied with telephone.
Telephone Connection	Appliance designed for connection to a ES1, PS1 telephone line energy and power source as defined by the AS/NZS 62368-1 standard.
Batteries	AAA NiMH batteries– 1.2 V (3 pieces) Only use the batteries supplied with the telephone. Use any other type of battery presents a risk of explosion. Used batteries must be disposed of in compliance with current environmental protection regulations.
Operating Temperature	From 5°C to 40°C

* Values may vary according to environment.

** Depending on initial battery charge.

TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.
As a general rule, if a problem occurs, remove the batteries from all the handsets in your installation for about 1 minute, then disconnect and reconnect

the power supply to the base and reinstall the handset batteries.

Phone does not work

- Make sure you installed the batteries correctly.
- Check that the mains power is correctly connected for the base and charger.

“NO LINE” appears in the screen

- Is the telephone cord plugged into the phone socket?
- Only use the telephone cord supplied with the phone.
- The telephone line cord might be malfunctioning. Install a new telephone line cord.
- Disconnect the telephone and connect a different telephone. If there is no dial tone on this telephone, the problem is in your wiring or local service. Contact your local telephone company.

No dial tone

- Is the telephone cord plugged into the phone socket?
- Check that the mains power is switched on.
- Only use the telephone cord supplied with the phone.
- The telephone line cord might be malfunctioning. Install a new telephone line cord.
- Move the cordless handset closer to the telephone base. It might be out of range.
- Disconnect the telephone and connect a different telephone. If there is no dial tone on this telephone, the problem is in your wiring or local service. Contact your local telephone company.

Cannot dial out or receive calls

- Check that the mains power is correctly connected.
- The battery may need recharging.
- Has there been a power outage? If so, place the handset back on the base for 10 seconds and try again. If it still does not work disconnect the batteries and mains power for 10 minutes, then reconnect and try again.
- If you are connected to a PABX, check whether you need to dial an access code.

Your own voice cannot be announced when the telephone number of incoming call is same as 1 of 4 photo memories stored

- The ringer volume may be switched off.
- Voice recording in 1 of 4 photo memories was not done successfully. Please refer to Section "Record your own voice tag" to record again.
- Your telephone line may not be subscribed or availability of the service from the fixed line operator.

Cordless handset does not ring (Caller Line Identification)

- The ringer volume may be switched off.
- Check that the mains power is correctly connected.
- Make sure the cordless handset is registered to the base.

No display in cordless handset

- The batteries may be flat, dead or incorrectly inserted.
- Recharge or replace the batteries

Handset displays “PUT ON BS TO POWER”

- Check that the mains power is correctly connected.
- Check that the cordless handset is within range of the base.

No voice tag announcement from cordless handset during ringing

- After 1 minute in idle mode without any operation of the phone feature should resume operation.

You hear the busy tone when you press key on handset

- Make sure the cordless handset is in range of the base.
- Another cordless handset registered to your telephone base may be on the line.

Buzzing noise on my phone or on other electrical equipment nearby

- Sometimes your phone can interfere with other electrical equipment if it is too close. It is recommended that you place your phone at least one metre away from electrical appliances or metal obstructions to avoid any risk of interference.
- If you have an ADSL internet service ensure correct filters are installed to prevent interference.

Answering machine does not record any messages

- Make sure the answering machine is switched on.
- The memory may be full, please delete old messages to free up space.

Cannot access your messages from another phone

- Have you changed the remote access security PIN code?
- Make sure you are calling from a touch-tone telephone. When dialling a number, you should hear keypad tones.
- The answering machine might not detect the remote access code when your outgoing message is playing. Try again, enter remote access code quickly.
- There might be interference on the telephone line you are using. Press the dial pad keys firmly when dialing.

Voicemail and show on the display and I don't know why.

Your telephone has voicemail indication that is separate from the built-in answering system. If  appears on the display, then your telephone has received a signal from your telephone service provider that you have a voicemail message waiting for you to retrieve from your telephone service provider. Contact your telephone service provider for more information on how to access your voicemail.

Safety

In the event of an electrical hazard, the mains adaptor acts as a 230 V electrical isolation device. It should therefore, as a precaution, be installed close to the appliance and be easily accessible. To disconnect the device from the primary power source, the mains adaptor must be removed from the 230V AC/50 Hz socket.

If the mains adaptor fails, it must be replaced by an identical model.

We recommend that you also keep a conventional telephone – one that doesn't require a power supply – as a backup.

! Do not use the phone to report a gas leak when standing in the vicinity of the leak.

It is recommended that you avoid using this device during electrical storms. Do not attempt to open the batteries, as they contain chemical substances. In the event of leakage, avoid contact with the skin, eyes, nose and mouth. In the event of contact, rinse the affected part with running water and seek urgent medical attention. Clean the product with absorbent paper or a dry cloth and contact Oricom for replacement batteries.

Hereby, ATLINKS EUROPE declares that the radio equipment type DECT is in compliance with Directive 2014/53/ EU. The full text of the EU declaration of conformity is available at the following internet address: www.swissvoice.net.

Then, select: Documentation/Downloads EU declaration of conformity

Average power per channel: 10mW

Maximum Output Power (NTP) : 24dBm

Frequency Range : 1880-1900MHz



Environment



This symbol means that your inoperative electronic device must be collected separately and must not be mixed with household waste. The European Union has set up a specific collection and recycling system for which manufacturers are responsible.

This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused.

Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way. Consequently, please do not throw out your inoperative appliance with the household waste.

- If you are a professional user, please follow the instructions of your supplier.
- If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance.
- If the appliance is rented to you or left in your care, please contact your service provider.

The used batteries from your telephone must be disposed of in compliance with current environmental protection regulations. Comply with your local regulations. Return your batteries to your reseller or dispose of them at an approved recycling centre.

Help us protect the environment we live in!

**UK
CA**

Express Warranty (Australia)

This Express Warranty is provided by Oricom International Pty Ltd ABN 46 086 116 369, Unit 1, 4 Sovereign Place, South Windsor NSW 2756, herein after referred to as "Oricom".

Oricom warrants that the product is free from defects in materials or workmanship during the Express Warranty Period. This Express Warranty does not extend to any product from which the serial number has been removed or was purchased outside of Australia.

The benefits of this Express Warranty are in addition to other rights and remedies you may have under the Australian Consumer Law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In the event of a minor failure, Oricom reserves the right to choose to repair or replace the product.

The Express Warranty Period will be a period of 12 months beginning on the date of purchase of the product evidenced by your dated sales receipt. You are required to provide proof of purchase as a condition of receiving Express Warranty services.

You are entitled to a replacement product or repair of the product at our discretion according to the terms and conditions of this document if your product is found to be faulty within the Express Warranty Period. This Express Warranty extends to the original purchaser only and is not transferable.

Products distributed by Oricom are manufactured using new materials or new and used materials equivalent to new in performance and reliability. Spare parts may be new or equivalent to new. Spare parts are warranted to be free from defects in material or workmanship for thirty (30) days or for the remainder of the Express Warranty Period of the Oricom branded product in which they are installed, whichever is longer. During the Express Warranty Period, Oricom will where possible repair and if not replace the faulty product or part thereof. All component parts removed under this Express Warranty become the property of Oricom. In the unlikely event that your Oricom product has a recurring failure, Oricom may always, subject to the Competition and Consumer Act 2010, at its discretion, elect to provide you with a replacement product of its choosing that is at least equivalent to your product in performance.

No change to the conditions of this Express Warranty is valid unless it is made in writing and signed by an authorised representative of Oricom.

Oricom will not be liable under this Express Warranty, and to the extent permitted by law will not be liable for any defect, loss, damage or injury arising out of or in connection with a:

1. Failure by you to adhere to the warnings and follow the instructions set out in this user guide for the proper installation and use of the product;
2. Willful misconduct or deliberate misuse by you of the product;
3. Any external cause beyond our control, including but not limited to power failure, lightning or over voltage; or
4. Modification to the product or services carried out on the product by anyone other than Oricom or Oricom's authorised service provider.

How to make a claim under your Express Warranty in Australia

Oricom has a simple warranty process for you to follow:

- Please call or email our Customer Support Team, 02 4574 8888 or support@oricom.com.au.
- A Customer Support Team member will verify after troubleshooting with you if your product qualifies under warranty. If so, they will give you a Product Return Authorisation number.
- We will then email a Return Authorisation form and a Repair Notice (if necessary), together with instructions on how to return the product for warranty service.

Please note that if a Customer Support Team member advises that your product does not qualify for return, this warranty does not apply to your product. Products that are authorised to be returned to Oricom in Australia must include all of the following:

- A completed Return Authorisation form
- A copy of your Proof of Purchase (please keep your original copy)
- The faulty product, including all accessories.

Send the approved returns to:

Oricom International Pty Ltd
Locked Bag 658
South Windsor NSW 2756 Australia

Please note that this Express Warranty excludes expenses incurred by you in returning any faulty product to us. You must arrange and pay any expenses incurred (including postage, delivery, freight, transportation or insurance of the product) to return the faulty product to us, however, we will arrange delivery of the repaired or replaced faulty product to you.

Important Information

Repair Notice

Please be aware that the repair of your products may result in the loss of any user-generated data (such as stored telephone numbers, text messages and contact information). Please ensure that you have made a copy of any data saved on your product before sending for repair. Please also be aware that products presented for repair may be replaced by refurbished products or parts of the same type rather than being repaired.

ORICOM CUSTOMER SUPPORT

Oricom have a trained and dedicated team of Customer Support Representatives, each with the knowledge and resources to assist in answering your questions quickly and efficiently.

Oricom Support - Australia

For all product enquiries, troubleshooting or to discuss the range of Oricom products, feel free to contact Oricom or visit our website for answers to frequently asked questions.

02 4574 8888

Monday - Friday 8am – 6pm AEST

Email: support@oricom.com.au

www.oricom.com.au

Oricom Support - New Zealand

0800 674 266

Monday - Friday 10am - 8pm NZST

Email: support@oricom.co.nz

