

## MT01 User Manual

Thank you for choosing our product! We invite you to spend a few minutes to read the user manual before first use.

### Features:

- Supplied with two probes, main rotation probe for instant readings and an external probe for constant temperature monitoring.
- Large easy to read back-lit LCD display.
- Temperature alarm.
- IP65 waterproof rating (when charge input and external probe rubber cover is installed correctly)
- Fahrenheit or Celsius temperature measurement.
- Measurement range: -40°C-300°C (-40°F-572°F).
- Measurement accuracy:  $\pm 1^{\circ}\text{C}$  ( $\pm 2^{\circ}\text{F}$ ) at -20°C-150°C (-4°F-302°F)
- Internal magnet for easy mounting.
- Display temperature hold function.
- Internal rechargeable battery, USB-C cable supplied, to be used with Type A-USB output connection with a minimum of 5V 1.5A output.
- Auto Shut-off after 10 mins of inactivity if the measured temperature is below 50°C and the temperature change is within 3°C/6°F

### Operation:

1. Before using the thermometer, please peel-off the protective film from the front panel.
2. The unit comes with two probes, one is a built-in rotation probe, the other is an external wired probe.
  - ① To use the built-in rotation probe, rotate the probe away from its body, the thermometer will automatically turn on. To turn off, rotate the probe back in to its original position.
  - ② To use the external probe, release the rubber cover and insert the probe into the round jack connection, the display will turn on and show "OUT" below the battery indicator, to turn off remove the probe and reinstall the rubber cover. (Note: when the external probe is connected the thermometer will only read the temperature from the external probe) NOTE: Thermometer is not waterproof when using external probe.
3. The default temperature measurement is in Celsius. To change to Fahrenheit, please hold down the  button for 2s
4. Data-hold: to hold a temp reading press the  button. This will hold the temperature reading, press again to remove the hold.
5. Long-press the  button for 3s to reset the device to factory default settings.
6. To turn on the backlight, press the  button once, press it again to turn off. The backlight will turn off automatically after 10s of inactivity.
7. To set the temperature alarm, press the  button once, the set temperature value will start to flash, press the  button to increase the number or press the  button to decrease the number.  
To save the selected temperature, press the  button. If the temperature rises above the set temperature, the thermometer will beep and flash "alarm set". The alarm will turn off automatically after one minute, the "alarm set" will keep flashing until the temperature falls below the set temperature or if the thermometer is turned off. You can also stop the alarm by pressing any button.
8. How To Recharge: When the power is low, the battery icon on the display will flash, plug in the supplied USB cable as per images below then plug the cable into a power adaptor (5V 1.5A, not supplied) to charge.



### Warnings and Product Safety

1. Always wear a heat resistant glove when touching the stainless steel probe sensor or wire during or just after cooking. Do not touch with bare hands.
2. Keep the stainless steel probe sensor and wire away from children.
3. Clean the stainless steel probes and dry thoroughly after each and every use. Wash the metal probe tips with hot soapy water and dry thoroughly. Wipe the unit with a damp cloth. Do not immerse unit in water while cleaning.
4. Do not use the unit in the rain.
5. Do not expose the plugs of the stainless steel probes or the jack holes of the unit to water or any liquid. This will result in a bad connection and/or faulty readings.
6. Do not expose the unit to direct heat or hot surfaces. Do not use stainless steel probes in microwave ovens.
7. Do not use the stainless steel probe sensor above 300°C (572°F). Doing so may damage the probe.
8. Do not expose the external probe wire to temperatures above 380°C (716°F). This will damage the wire.
9. Do not drop the unit or subject it to sudden shock or impact. Do not disassemble the unit.

## Express Warranty (Australia)

This Express Warranty is provided by Oricom International Pty Ltd ABN 46 086 116 369, Unit 1, 4 Sovereign Place, South Windsor NSW 2756, herein after referred to as "Oricom".

Oricom warrants that the product is free from defects in materials or workmanship during the Express Warranty Period. This Express Warranty does not extend to any product from which the serial number has been removed or was purchased outside of Australia.

The benefits of this Express Warranty are in addition to other rights and remedies you may have under the Australian Consumer Law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In the event of a minor failure, Oricom reserves the right to choose to repair or replace the product.

The Express Warranty Period will be a period of 12 Months beginning on the date of purchase of the product evidenced by your dated sales receipt. You are required to provide proof of purchase as a condition of receiving Express Warranty services.

You are entitled to a replacement product or repair of the product at our discretion according to the terms and conditions of this document if your product is found to be faulty within the Express Warranty Period. This Express Warranty extends to the original purchaser only and is not transferable.

Products distributed by Oricom are manufactured using new materials or new and used materials equivalent to new in performance and reliability. Spare parts may be new or equivalent to new. Spare parts are warranted to be free from defects in material or workmanship for thirty (30) days or for the remainder of the Express Warranty Period of the Oricom branded product in which they are installed, whichever is longer. During the Express Warranty Period, Oricom will where possible repair and if not replace the faulty product or part thereof. All component parts removed under this Express Warranty become the property of Oricom. In the unlikely event that your Oricom product has a recurring failure, Oricom may always, subject to the Competition and Consumer Act 2010, at its discretion, elect to provide you with a replacement product of its choosing that is at least equivalent to your product in performance.

No change to the conditions of this Express Warranty is valid unless it is made in writing and signed by an authorised representative of Oricom.

Oricom will not be liable under this Express Warranty, and to the extent permitted by law will not be liable for any defect, loss, damage or injury arising out of or in connection with a:

1. Failure by you to adhere to the warnings and follow the instructions set out in this user guide for the proper installation and use of the product;
2. Willful misconduct or deliberate misuse by you of the product;
3. Any external cause beyond our control, including but not limited to power failure, lightning or over voltage; or
4. Modification to the product or services carried out on the product by anyone other than Oricom or Oricom's authorised service provider.

## How to make a claim under your Express Warranty in Australia

Oricom has a simple warranty process for you to follow:

- Please call or email our Customer Support Team, 02 4574 8888 or support@oricom.com.au.
- A Customer Support Team member will verify after troubleshooting with you if your product qualifies under warranty. If so, they will give you a Product Return Authorisation number.
- We will then email a Return Authorisation form and a Repair Notice (if necessary), together with instructions on how to return the product for warranty service.

Please note that if a Customer Support Team member advises that your product does not qualify for return, this warranty does not apply to your product. Products that are authorised to be returned to Oricom in Australia must include all of the following:

- A completed Return Authorisation form
- A copy of your Proof of Purchase (please keep your original copy)
- The faulty product, including all accessories.

Send the approved returns to:

Oricom International Pty Ltd  
Locked Bag 658  
South Windsor NSW 2756 Australia

Please note that this Express Warranty excludes expenses incurred by you in returning any faulty product to us. You must arrange and pay any expenses incurred (including postage, delivery, freight, transportation or insurance of the product) to return the faulty product to us, however, we will arrange delivery of the repaired or replaced faulty product to you.

## Important Information Repair Notice

Please be aware that the repair of your products may result in the loss of any user-generated data (such as stored telephone numbers, text messages and contact information). Please ensure that you have made a copy of any data saved on your product before sending for repair. Please be aware that products presented for repair may be replaced by refurbished products or parts of the same type rather than being repaired.