

oricom®



USER'S GUIDE

5" HD Baby Monitor with Cot Mount Camera & Night Light

Model: OBH650AI, CU650

The Features described in this user's guide are subject to modifications without prior notice.

Welcome...

to your new Oricom Wi-Fi® Video Baby Monitor!

Thank you for purchasing the Wi-Fi® Video Baby Monitor. Now you can see and hear your baby sleeping in another room or you can monitor your older children in their play room. Our Connected Baby Monitor lets you see your baby from the hand-held viewer, or from your smartphone. Watch over and communicate with your baby from anywhere in the world.

Please keep your original dated sales receipt for your records. For warranty service of your Oricom product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product related questions, please contact:

Australia:

(02) 4574 8888 / Monday - Friday 8am – 6pm AEST
Email: support@oricom.com.au / www.oricom.com.au

New Zealand:


0800 674 266 / Monday - Friday 10am - 8pm NZST
Email: support@oricom.co.nz

Visit support@oricom.com.au to download the User Guide with instructions, answers to frequently asked questions, and more to help you get the most from your product.

Inside the Box


- 1 x Parent Unit (with battery pre-installed)
- 1 x Baby Unit
- 2 x Power Adaptors
- 1 x Top Clamp
- 1 x Cot Mount Kit
(1 x Cot Rail Clamp, 2 x Extension Connector,
1 x Top Mounting Extension (Camera), 1 x Middle Mounting Extension,
1 x Low Mounting Extension, 1 x Elbow Mounting Extension,
1 x Elbow Extension Cover, 2x Cable Cover, cable tie)
- 1 x Quick Start Guide

Overview of the Parent Unit

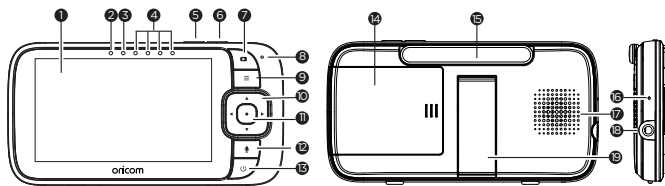

- 1. Display (LCD screen)**
- 2. Charging LED**
RED when mains power connected.
- 3. Parent Unit ON/OFF indicator**
- 4. Sound Level indicators (Green, Amber, Red, Red)**
Show the sound level detected by the Baby Unit - the louder of sound detected, the more LEDs light up.
- 5. Volume -**
Press to decrease Volume level.
- 6. Volume +**
Press to increase Volume level.
- 7. Display ON/OFF button**
Press to turn the LCD screen ON/OFF (Note: audio is maintained.)
- 8. Microphone**
- 9. MENU button**
Press to access or exit the Menu options.
- 10. Navigation button**
Press to move up, down, left and right on zoomed image (when in Zoom only).
Press to access menu options when menu is active.
- 11. OK button**
In menu mode, press to confirm a selection.
- 12. TALK button**
Press and hold to speak to your baby.
- 13. Power button**
Press and Hold to turn the Parent Unit ON/OFF.
- 14. Battery door**
- 15. Antenna**
- 16. RESET pin hole**
(recessed - use small pin)
- 17. Speaker**
- 18. Power Socket**
- 19. Stand**

Overview of Your Baby Unit

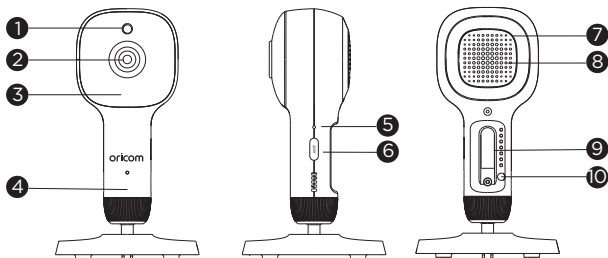






 
















1. Photo Sensor
2. Camera Lens
3. Infrared LEDs (x 8, for night vision)
4. High Sensitivity Microphone
5. Power/Link indicator
6. PAIR button
7. Night Light
8. Speaker
9. Power Socket
10. Temperature Sensor

Important guidelines for installing your Digital Video Baby Monitor

- To use your Baby Unit and Parent Unit together, you must be able to establish a radio link between them, and the range will be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, a metallic door or reinforced concrete, between the Baby Unit and Parent Unit may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- Other 2.4GHz products, such as wireless networks (Wi-Fi® routers), microwave ovens or other Baby Monitors, may cause interference with this product, so keep the Baby Monitor at least 5ft (1.5m) away from these types of product, or switch them off if they appear to be causing interference.
- If the signal is weak, try moving the Parent and/or the Baby Unit to different positions in the rooms.


 




Parent Unit menu icons

Menu Icons	
	LCD Brightness Level Control (8 Levels).
	Zoom Level Control.
	Audio Media selection - Personal Recordings  , Lullabies/Soothing Sounds  , Audio Books  , Volume control of media playback  .
	Select night light colour and to turn Night Light on or off.
	Alarm Setting On status bar, indicates alarm set, and when flashing, that alarm time has been reached or missed.
	Set Screen Off Timer (5 mins, 15 mins, 30 mins).
	Camera Control (add  , del  , view  , scan 
	View multiple cameras on screen. Note: Function available when you have more than 1 Baby Unit (Camera).
	 Temperature scale selects (°C/°F)  Lowest Temperature Alert Setting (programmable from 10 to 30°C, default is 14°)  Highest Temperature Alert Setting (programmable from 20 to 40°C, default is 29°C) Readings display in grey, but turns RED if > 29 °C or < 14 °C.
	Clock display in 12-hour (AM/PM) or 24-hour format. Note: Function available when connected to the HubbleClub for Partners App
VOX	Set VOX (voice activated) function and sensitivity levels (Off, Lo, Mid, Hi) High Sensitivity HI : monitor activates with very soft sounds Medium Sensitivity MID : monitor activates with moderate sounds Low Sensitivity LO : monitor activates only with loud sounds VOX OFF icon: monitor stays on continuously
	To read the firmware version of the Parent Unit Note: For providing the technical information of the device when requested by the technical support team.


 




Note: Feature is not available in this version when the icons are grayed out.

IMPORTANT:

Download the full User Guide for complete instruction, from the Oricom website: oricom.com.au/support/.

Audio Media Playback menu icons			
	Tap to display personal recording* playlist.		Volume control of media playback.
	Tap to display soothing sound or lullaby playlist.		Play selected audio media on the playlist.
	Tap to display audio book playlist.		Stop playing audio media.

* The playlist appears only if you make the audio recording via HubbleClub for Partners app.

Display icons			
	Signal Level (5 Levels).		Volume Level Control (8 Levels).
	Night Vision Mode (Video also changes to Black/White).		No Baby Unit detected.
	Indicates the screen off timer is set.		Battery Level Indicator (4 Levels).

Note: The feature is not available in this version when the icons appear grayed out.

IMPORTANT:

Download the full User Guide for complete instruction and button location, from the Oricom website: oricom.com.au/support/

Important Safety Information

- Your Oricom baby monitor is designed to be an aid and should not be used as a substitute for responsible and proper adult supervision of a child.
- The baby monitor has been designed to provide some added reassurance in the form of video/sound transmission for those times when you are not in the same room as your baby provided you always stay within hearing range of the baby monitor during use.
- Your baby monitor is not a medical device, nor a device to prevent cases of Sudden Infant Death Syndrome (SIDS) or "cot death", and you should not rely on it for your baby's wellbeing. It is important that you regularly check on your baby personally.
- Make sure the baby unit, parent unit and mains adaptor cables are kept out of reach of your baby and other young children at all times, as far away from the baby as practical.
- Never place the baby unit or parent unit inside your baby's cot, bed or playpen.
- Never cover the parent or baby units with clothes, towels or blankets or any other item.
- Never use or place your parent or baby unit in or near moisture or water (e.g. near bath or pool). Immersing in water could cause electric shock and even death.
- The installation location plays an important role in ensuring proper operation. Therefore, maintain a distance of at least one metre from other electronic equipment, such as microwave ovens or Wi-Fi devices, otherwise they could cause interference.
- During continual use the baby unit power adaptors may become warm to the touch. This is normal and should not be a concern.
- This product is not a toy, do not allow children to play with this monitor.
- This device is designed for indoor use only.
- Unplug power adaptors when not in use, do not leave device on charge unattended.

Table of contents

1. Safety Instructions	8
2. Getting Started	10
2.1 Connecting the Power Supply for the Baby Unit	10
2.2 (Optional) Fixing magnetic mount on the wall	10
2.3 Connecting the Power Supply of the Parent Unit.	11
2.4 Desktop Stand of the Parent Unit	11
2.5 Registration (Pairing)	12
3. Using the Baby Monitor	12
3.1 Setting Up	12
3.2 Night Vision Mode	12
3.3 Talk Mode.....	12
3.4 Video ON/OFF.....	12
3.5 Temperature Display (HH °C / °F or LL °C / °F)	12
4. Parent Unit Menu Options	13
4.1 Volume	13
4.2 Brightness	13
4.3 Zoom	13
4.4 Audio Playlist	13
4.4.1 Lullaby/Soothing Sounds Playback	13
4.4.2 Audio Book (English only) Playback	14
4.4.3 Personal Recording Playback	14
4.4.4 Volume Level of Audio Playback	14
4.5 Alarm	14
4.6 Camera Control.....	15
4.6.1 Add (pair) a camera	15
4.6.2 View a camera	15
4.6.3 Delete a camera	16
4.6.4 Scan camera	16
4.7 Temperature	16
4.8 Power Saving mode	17
4.9 View multiple cameras on screen	17
4.10 Set Night Light	17




5. Wi-Fi® Internet Viewing	18
5.1 Minimum System Requirements	18
5.2 Getting started - Connecting Devices.....	18
5.3 Setup.....	19
5.4 User Account and Camera Setup.....	19
on Android™ or Apple devices.	
5.4.1 Connect the Camera.....	19
5.4.2 Download HubbleClub for Partners App.....	19
5.4.3 Sign up with Hubble on your smart device.....	20
5.4.4 Add the Camera to your account.....	21
6. Installation of Cot Mount.....	24
6.1 Assembling the Cot Mount.....	25
6.2 Close the Elbow Extension Cover.....	26
6.3 Camera Installation.....	26
6.4 Power Connection.....	27
6.5 Mounting the Cot Mount.....	27
6.6 Powering On	27
6.7 Cable Management Covers	28
7. Procedure for Resetting the Camera.....	29
8. Disposal of the Device (environment)	29
9. Cleaning.....	30
10. Help	31
11. General Information	38
12. Technical Specifications	42



1. Safety Instructions

WARNING:

Strangulation Hazard: Children have STRANGLED on cords. Keep this cord out of the reach of children (more than 1m away). Never use extension cords with AC Adaptors. Only use the AC Adaptors provided.

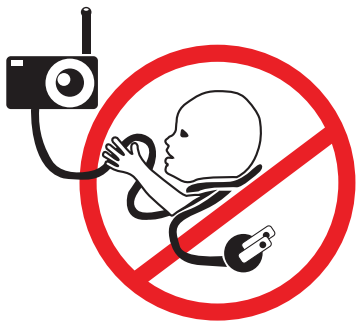

Wi-Fi® CAMERA UNIT SET UP & USE:

- Choose a location for the Baby Unit that will provide the best view of your baby in his/her cot.
- Place the Baby Unit on a flat surface, such as a dresser, shelf, or mount the Baby Unit on a wall securely using the keyhole slots in the underside of the stand.
- NEVER place the Baby Unit or cords within the cot.

WARNING

This Baby Monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This Baby Monitor is not a substitute for responsible adult supervision.
- Keep this User's Guide for future reference.
- Keep the cords out of reach of children.
- Do not cover the Baby Monitor with a towel or blanket.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the Baby Monitor in damp areas or close to water.
- Do not install the Baby Monitor in extreme cold or heat, direct sunlight, or close to a heat source.
- Only use the chargers and power adaptors provided. Do not use other chargers or power adaptors as this may damage the device and battery pack.
- Do not touch the plug contacts with sharp or metal objects.
- Connect the power adaptors to easily accessible electrical sockets.


CAUTION

The Parent Unit includes a user replaceable Lithium-ion rechargeable battery. When the in-use time becomes short, the battery may have exhausted its charging capabilities, and needs to be replaced. Please contact Oricom Customer Support for a replacement battery, Part N: 2B0167. There is a risk of fire, explosion, or other hazard, if the battery is replaced by a non-genuine battery.



2. Getting Started

2.1 Connecting the Power Supply for the Baby Unit

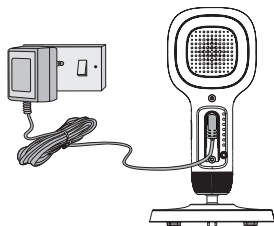


- Insert the DC plug of the power adaptor into the DC socket on the back of the Baby Unit.
- Connect the other end of the power adaptor to a suitable electrical outlet.
- The baby unit turns on and the power indicator lights in Green colour.


Note : Only use the supplied power adaptor (DC5V/1000mA).


2.2 (Optional) Fixing magnetic mount on the wall

- Mark the position of the screw holes on the wall.
- Install wall anchors (Not provided) suitable for the wall type, and mounting screws if required.
- Fasten the mounting screws (Not provided) on the wall.
- Position the cable behind the base as shown in the picture before attaching the base on the wall.

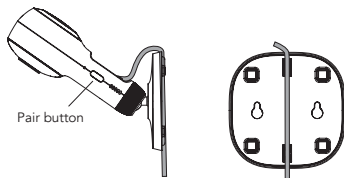


2.3 Connecting the Power Supply of the Parent Unit.

- Remove the pull tab from Parent Unit before use.
- Connect the USB-C plug of the power adaptor to the parent unit and the other end to mains power. Only use the supplied adaptor (DC5V/1500mA).
- A rechargeable battery allows the parent unit to be used when not plugged into mains power. The battery provides up to 8 hours operation of the Parent Unit with the screen turned off. We recommend charging for at least 4 hours before first use, and charging the battery each time the Parent Unit indicates that the battery is low.
- Press and hold the  button to turn the Parent unit on, the Parent unit and Baby unit are automatically linked and ready to use.

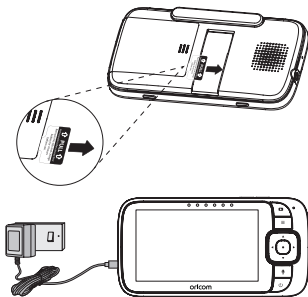


NOTE:

When the Baby and Parent Units are both turned on and within range, the Parent Unit should show a colour image from the Baby Unit camera, but if the room is dark, the image will be in black and white, with an  icon showing the Baby Unit is in Night Vision mode. Unplug power adaptors when not in use, do not leave device on charge unattended.

2.4 Desktop Stand of the Parent Unit

- The parent unit comes with a desktop stand attached to the back.
- To place the parent unit on a desk, simply pull out the stand, as shown.

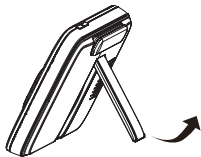

Note: Place the parent unit on a flat, even surface.



2.5 Registration (Pairing)

The Baby Monitor is pre-registered to your Parent Unit. You do not need to register it again unless the Baby Unit loses its link with the Parent Unit. To re-register your Baby Unit, or register a new Baby Unit (CU650), follow the procedures described on 4.6.1.

3. Using the Baby Monitor

3.1 Setting Up

Place the Baby Unit in a convenient location (e.g. on a table) and point the camera lens towards the area you want to monitor. Adjust the angle of the Baby Unit's camera until you are satisfied with the image shown on the Parent Unit.


Note:


Do not place the Baby Unit within the baby's reach! If there is interference with the picture or sound, try moving the units to different locations, and ensure they are not close to other electrical equipment.

3.2 Night Vision Mode


The Baby Unit has 8 high-intensity infrared LEDs for picking up clear images in the dark. When the built-in Light sensor on the top of the Unit detects a low level of ambient light, the LEDs will automatically activate and the screen on the Parent Unit will display in black and white. The 🌙 icon will be displayed at the top of the screen.

3.3 Talk Mode

Press and hold the TALK button  on the Parent Unit to talk to your baby through the Baby Unit's loudspeaker.

The  icon will be displayed at the top of the LCD screen.

3.4 Video ON/OFF

Press  Display On/Off button to turn the LCD screen on or off, whilst still leaving the audio monitor on.


3.5 Temperature Display (HH °C / °F or LL °C / °F)

The temperature reading from the temperature sensor at the back of the Baby Unit will be displayed at the top of the LCD screen. The readings will turn RED if the temperature goes above 29°C / 84°F or below 14°C / 57°F. The reading will change to HH °C / °F if the temperature goes above 36°C / 97°F. The reading will change to LL °C / °F if the temperature goes below 1°C / 34°F.







4. Parent Unit Menu Options

4.1 Volume




Press the + or - button to adjust the volume level.


 


The  icon will pop up and you can select the desired volume from level 0~8. (The default volume level setting is level 4, and level 0 is OFF.)

4.2 Brightness

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  LEFT button or  RIGHT button to select the desired brightness from level 1 ~ 8. (The default brightness is level 4.)

4.3 Zoom

1. Tap the  in the menu bar to zoom.
2. Tap the  or  button to select 1X to 4X zoom.











Note: After zoom-in, you can press Left  and Right  buttons to pan and Up  and Down  buttons to tilt to locate the desired views.

4.4 Audio Media

You can playback audio content - Lullabies, Soothing Sounds and Audio Book on the Baby Unit. You have 10 preloaded lullabies/soothing sounds and 8 audio books in the Baby Unit.

4.4.1 Personal Recording Playback










The unit allows playback of your personal audio to soothe your baby. Before playback, record a personal audio via HubbleClub by Hubble Connected App.

1. Press the  button,  LEFT or  RIGHT button to highlight the .
2. Press  OK button to confirm entering the media selection.
3. Press the  LEFT button or  RIGHT button until  is highlighted.
4. Press the  OK button to select and display the personal record name.
5. Press the  OK button to play the selected record.
6. Press the  OK button to stop the playback at the selected record.









4.4.2 Lullaby/Soothing Sounds Playback

1. Press the  button,  LEFT or  RIGHT button to highlight the .
2. Press  OK button to confirm entering the media selection.
3. Press the  LEFT button or  RIGHT button until  is highlighted.
4. Press the  OK button to select and display the song list.
5. Press the  UP or  DOWN button to highlight the lullaby to play.
6. Press the  OK button to play the selected lullaby.
7. Press the  OK button to stop the playback at the highlighted lullaby.

4.4.3 Audio Book Playback













1. Press the  button,  LEFT or  RIGHT button to highlight the .
2. Press  OK button to confirm entering the media selection.
3. Press the  LEFT button or  RIGHT button until  is highlighted.
4. Press the  OK button to select and display the audio book list.
5. Press the  UP or  DOWN button to highlight the audio book to play
6. Press the  OK button to play the selected audio book.
7. Press the  OK button to stop the playback at the highlighted audio book.

4.5 Alarm

1. Press the  button to pop up the menu bar.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  LEFT button or  RIGHT button to select **ON** Alarm ON and **OFF** Alarm OFF.
4. Once Alarm **ON** is selected, press the  UP button or  DOWN to program the alarm timer (0 to 6 hours) with 15 min each step.

4.6 Camera Control

4.6.1 Add (pair) a camera

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted, and the - (delete) / + (add) /  (view) /  (scan) menu will pop up.
3. Press the  LEFT button or  RIGHT button to select + (add), and press the  button to confirm.
4. Camera **1 / 2 / 3 / 4** will pop up. Press the  LEFT button or  RIGHT button to select the desired Camera, and press the  button to start searching for a camera unit.



 


 







Note: If a camera is currently paired with the Parent Unit, its camera location (icon in black) cannot be selected for a new registration.



5. Press and hold the **PAIR** button on the bottom of the Baby Unit until the Parent Unit finds the camera, beeps and shows **PAIR OK** on the screen. The camera prompts SET UP COMPLETED.

Note: A camera can only be registered to one Parent Unit at any one time.






 











 4.6.2 View a camera

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted, and the - (delete) / + (add) /  (view) /  (scan) menu will pop up.
3. Press the  LEFT button or  RIGHT button to select  (view), and press the  button to confirm.
4. Camera **1 / 2 / 3 / 4** will pop up, press the  LEFT button or  RIGHT button to select the desired Camera, and press the  button to view the picture from that camera.

TIP : You can also press the  button repeatedly to select the available camera options from **1 / 2 / 3 / 4**,  (scan).

4.6.3 Delete a camera

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted, and the - (delete) / + (add) /  (view) /  (scan) menu will pop up.
3. Press the  LEFT button or  RIGHT button to select - (delete), and press the  button to confirm.
4. Camera **1 / 2 / 3 / 4** will pop up, press the  LEFT button or  RIGHT button to select the desired Camera, and press the  button.
5. Press the  LEFT button or  RIGHT button to select, then press the  button to delete that camera.

Note: You are not allowed to delete the camera if there is only one registered camera in the system.



4.6.4 Scan camera

You can tour around all the registered cameras with this function. This function works only when you have more than 1 Baby Unit (Camera).




1. Press the ☰ button and the menu bar will pop up.
2. Press the ◀ LEFT button or ▶ RIGHT button until 📷 is highlighted, and the - (delete) / + (add) / 👁 (view) / 🔄 (scan) menu will pop up.
3. Press the ◀ LEFT button or ▶ RIGHT button to select 🔄 (scan), and press the ● button to confirm.
4. The screen will then display images from the different cameras in a loop of Camera 1 / 2 / 3 / 4 , changing about every 12 seconds.

TIP : You can also press the ● button repeatedly to select the available camera options from 1 / 2 / 3 / 4, 🔄 (scan).





4.7 Temperature Monitor Setting

4.7.1 Temperature Scale Selects

1. Press the  button and the menu bar will pop up.
2. Press the ◀ LEFT button or ▶ RIGHT button until  is highlighted.
Press ● button to enter the setting.
3. Scroll ◀ LEFT button or ▶ RIGHT button to select  then press ● button to enter the setting.
4. Press ◀ LEFT button or ▶ RIGHT button to select °C and confirm with ● button.



4.7.2 Highest Temperature Alert Setting

The default highest alert temperature is 29°C; you can program different values according to your nursery conditions. The programmable range is 20 to 30°C.


1. Press the ≡ button and the menu bar will pop up.
2. Press the ◀ LEFT button or ▶ RIGHT button until  is highlighted.
Press ● button to enter the setting.
3. Scroll ◀ LEFT button or ▶ RIGHT button to select  then press ● button to enter the setting.
4. Press ▲ UP button or ▼ DOWN button to set the value then confirm with ● button.

4.7.3 Lowest Temperature Alert Setting

The default lowest alert temperature is 14°C; you can program different values according to your nursery conditions. The programmable range is 10 to 20°C.

1. Press the ≡ button and the menu bar will pop up.
2. Press the ◀ LEFT button or ▶ RIGHT button until  is highlighted.
Press ● button to enter the setting.
3. Scroll ◀ LEFT button or ▶ RIGHT button to select  then press ● button to enter the setting.
4. Press ▲ UP button or ▼ DOWN button to set the value then confirm with ● button.








4.8 Power Saving mode

1. Press the ≡ button and the menu bar will pop up.
2. Press the ◀ LEFT button or ▶ RIGHT button until  is highlighted.
3. Press the ◀ LEFT button or ▶ RIGHT button to select auto video off after 5 mins, 15 mins or 30 mins (if operating on batteries only).














Note: The audio will remain and you can press any key to switch the video back on.

4.9 View multiple cameras on screen

This function is only available when you have more than 1 Baby Unit (Camera). When the Split Screen function is On, you can view multiple cameras on the screen.





1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press  button to confirm.
4. In the split screen mode, you can press the  LEFT button /  RIGHT button to hear the audio from the highlighted camera.

4.10 Set Night Light

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button to scroll to  and press  button.
3. Scroll  LEFT button or  RIGHT button to select one of the 7 colours, OFF or  auto looping.
Press  button to select the colour then go to the brightness selection.
4. Press  LEFT or  RIGHT button to select then confirm with  button for the selection.
5. Press  to exit Night Light setup.

4.11 VOX (voice activated)

The function sorts the various sounds the baby unit picks up, and chooses which ones are more important to notify the parent.

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button to scroll to **VOX** and press  button.
3. Scroll  LEFT button or  RIGHT button to select **OFF**, **HI**, **MID** or **LO** then confirm with  button to select the desire sensitivity levels.

Reference:

High Sensitivity **HI** : The monitor activates with very soft sounds like a baby's snuffle, turn in bed, or even background noises.

Medium Sensitivity **MID** : The monitor activates with moderate sounds like loud babbling or louder noises.

Low Sensitivity **LO** : The monitor activates only with loud crying or screeching sounds.

VOX **OFF**: The monitor stays on continuously, regardless of sound levels.

5. Wi-Fi® Internet Viewing

5.1 Minimum System Requirements

Android™ System

- Version 8.0 or above

iPhone®/iPad® iOS


- Version 14.0 or above

High Speed (Wi-Fi®) Internet

- At least 0.6 Mbps upload bandwidth per camera (you can test your internet speed on this site: <http://www.speedtest.net>)

5.2 Getting started - Connecting Devices

How does it work?

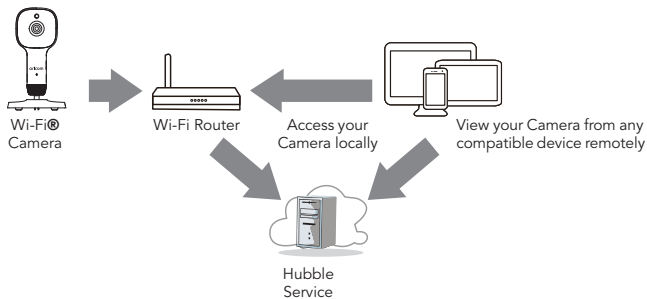

When a user tries to access the Camera, our Hubble server authenticates the user's identity and permits access to the Camera.



5.3 Setup

Connect the Wi-Fi® Camera to the Power Adaptor, then plug into mains power. The Camera must be within range of the Wi-Fi® router with which you want to connect. Make sure the password of the router is available for entering during the in-app setup process.

Status of LED Indication:

- Pair / Setup state: LED is Flashing Green.
- Unconnected state: LED is Flashing Red.
- Connected state: LED is Solid Green.

Note: *You can only setup via a compatible smartphone or tablet only.*

5.4 User Account and Camera Setup on Android™ or Apple devices.

What you need

- Wi-Fi® Camera Unit
- Power adaptor for the Camera
- Device with Android™ system version 8.0 and above
- Or iPhone®/iPad® with iOS version 14.0 and above

5.4.1 Connect the Camera

- Switch the parent unit off before connect the camera to Wi-Fi®.
- Connect the power adaptor to mains power and insert the plug into the power socket on the back of the Camera Unit, DO NOT switch the power on at the power point yet.

5.4.2 Download HubbleClub for Partners App



- Scan the QR code with your smart device and download HubbleClub for Partners App from the App Store for iOS devices or from the Google Play™ Store for Android™ devices.
- Install HubbleClub for Partners App on your device.



5.4.3 Sign up with Hubble on your smart device

- Ensure that your smart device is connected to your Wi-Fi® router.
- Run HubbleClub for Partners App, tap **Create Account** with Hubble (fig.1), read through the Privacy Policy, Terms and Conditions, by signing up you agree to our terms of service, tap Done (fig.2).

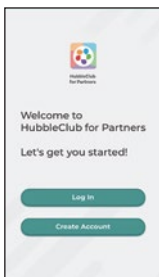


fig.1

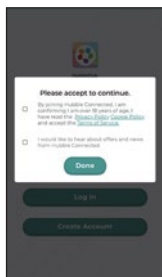


fig.2

- Follow the steps to enter your account information and sign up with Hubble (fig.3-6).

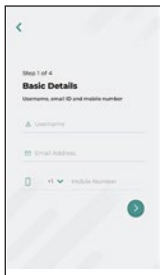


fig.3



fig.4

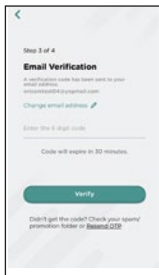


fig.5

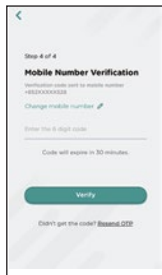


fig.6

Note: If you already have a HubbleClub for Partners App account, please tap **Log in with Hubble** to go to the next steps.



5.4.4 Add the Camera to your account

- Log in your Hubble Account by entering "User Name" and "Password" (fig.7).
- Tap **Add Your Device** on the screen of your device to add new Camera (fig.8)

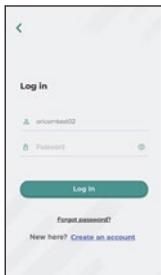


fig.7

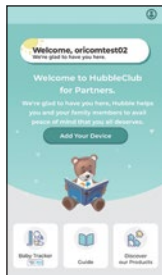


fig.8

- Select **Oricom**, then select the model of your Oricom baby monitoring. (fig.9-10).
- Tap **OBH650AI** to add the new camera (fig.11) .



fig.9



fig.10

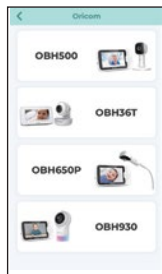


fig.11



- The following setup instructions will appear on the screen, select your Wi-Fi network and enter "Password" (fig.12).
- Power on your camera and wait for the LED to flash Red on the camera. Press and hold the PAIR button on the side of Camera, you will hear a voice prompt "Ready for Pairing" then tap **Next** (fig.13)

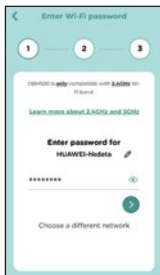


fig.12



fig.13

- Tap Generate QR code on your device and hold the QR code 15 to 30cm in front of Camera until you hear confirmation message "Scanning Success" from your device. (fig.14, fig.15)

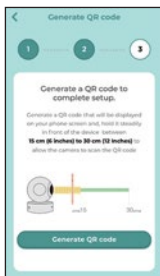


fig.14



fig.15



- It will take a few minutes for the Camera to connect to the Wi-Fi® network before showing the connection status (fig.16).
- The Camera has been successfully connected, name your Camera (fig.17).



fig.16

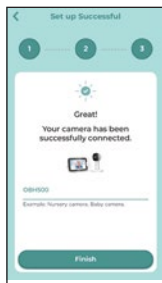


fig.17

Note: If connection fails, please tap Retry and repeat the steps starting from 5.4.4.

- Add your baby's profile to track your baby growth by tapping Create New Profile (fig.18).
- Enter your baby information and tap Done to create profile (fig.19).
- Select one of the profiles for your baby when using the Camera (fig. 20).



fig.18

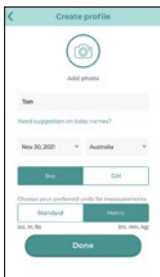


fig.19

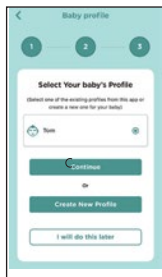



fig.20



6. Installation of Cot Mount (applicable For OBH650AI)


The model features advanced AI prediction algorithms so that unsafe sleep postures like when baby has their face covered face or aren't on their back, are detected and you are alerted via the HubbleClub for Partners app.

For accurate detection and notification of all events, please mount the camera in a bird's eye view to oversee your baby at about 1 to 1.5m distance for optimal detection like the illustration below. You can also read up more on correct camera installation angles in our digital knowledge base.

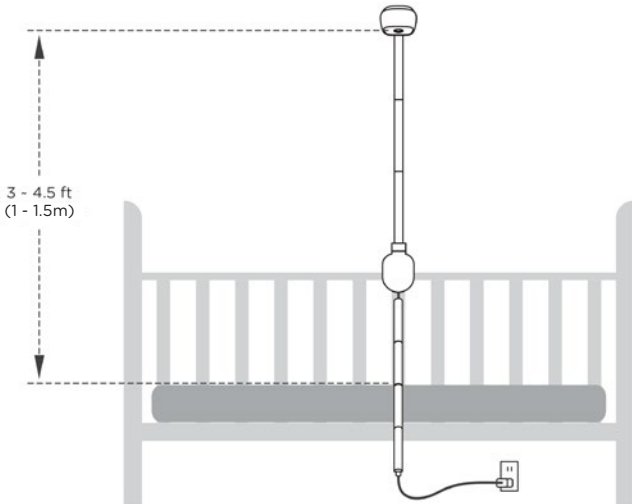


6.1 Assembling the Cot Mount

- Follow the number sequence to assemble the cot mount.
- Thread the power cable from the Cot Rail Clamp through all the Low Extensions, Extension Connectors, Middle Extension, Elbow Extension and Top Extension.
- Make sure the Extensions and Connectors are probably joined with the click sound.

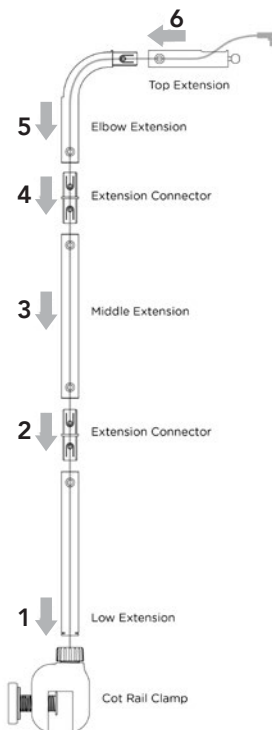



6.2 Close the Elbow Extension Cover

- Close the Elbow Extension Cover after the power cable is properly aligned.

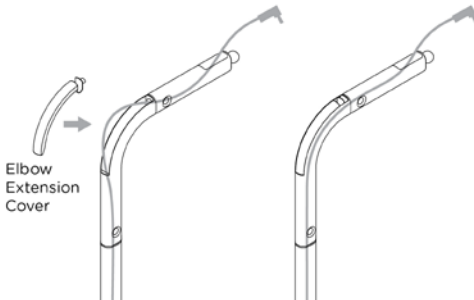

6.3 Camera Installation

- Press the lock nut through the ball joint from the Top Extension.
- Press the chuck at the camera end to catch the ball joint from the Top Extension (fig. 1).
- Tighten the lock nut securely to hold the camera in place (fig.2).

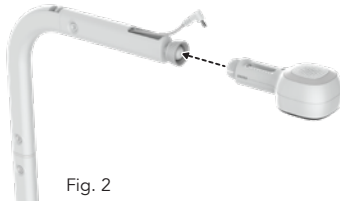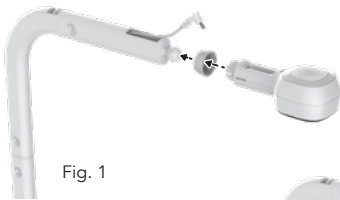

6.4 Power Connection

- Insert the DC power plug into the camera's power socket. Refer to fig. 3 and 4.
- Any excess cable should be pushed back into the open slot.

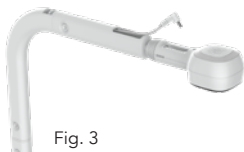


Fig. 3


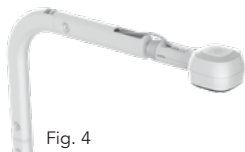


Fig. 4

6.5 Cot Mounting options

A. For the top rail width less than 4.0cm (1.5")

- Place the Cot Rail Clamp on the top rail of the cot.
- Tighten the lock nut to securely clamp the cot mount to the rail.

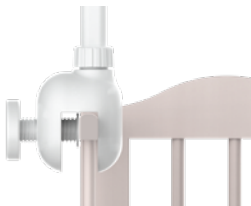


B. For the top rail width wider than 4.0cm (1.5")

- Place the Cot Rail Clamp on the fencing with the lock nut inside the cot.
- Tighten the lock nut to securely clamp the cot mount against the fence.



6.6 Powering On

- Insert the round DC plug into the round socket at the bottom of the cot mount.
- Connect the power adaptor to a suitable power outlet.

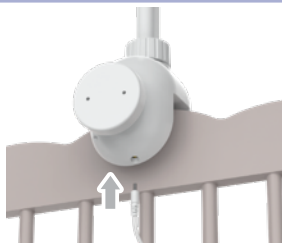

6.7 Cable Covers application

- Use the cable covers to cover the power cable under the Cot Rail Clamp.
- Remove the cover first then align the cables inside the cover channels. After that snap back the cover.
- Peel the backing tape off the cable covers.
- Press to stick the cable covers to the cot rails or fence and tie the covers to the cot fence by cable tie (see fig. 7 and 8).

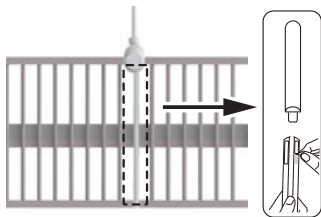


Fig. 7

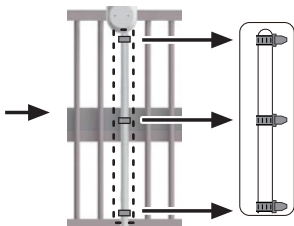


Fig. 8

IMPORTANT SAFETY NOTES:

- Choking Hazard - Contains Small Parts. Keep children under 5 away from the installation area.
- Strangulation Hazard: The cable covers **MUST** be installed and be even with or extend below the bottom of the cot rails before use.



7. Procedure for Resetting the Camera

Note: If your Camera is moved from one router (e.g. home) to another (e.g. office) or you have Camera setup issues, then the Camera must be reset.

Please reset the Camera with the following procedure:

- Disconnect from power, press and hold the PAIR button, plug in the power connection and continue to hold the pair button for approximately 20 seconds, you will then hear a long beep, release PAIR button and wait for the Camera Unit to complete an internal reset procedure. The Red LED will begin to flash when the Camera Unit is reset successfully.
- You can add your Camera again by following the steps in section 5.4.4.

8. Disposal of the Device (environment)

At the end of the product life cycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.



Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

The battery should be disposed of in an environmentally-friendly manner according to your federal, state, and local regulations.



9. Cleaning

Clean the Baby Monitor with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals – this may cause permanent damage to the product which is not covered by the warranty.
- Keep the Baby Monitor away from hot, humid areas or strong sunlight, and don't let it get wet.
- Every effort has been made to ensure high standards of reliability for your Baby Monitor. However, if something does go wrong, please do not try to repair it yourself – contact Customer Service for assistance.

IMPORTANT



Always switch off and disconnect the power adaptor before cleaning your baby monitor.



10. Help

Display

No display

- Try recharging the battery.
- Reset the Units. Unplug both Units electrical power, then plug them back in.
- Is the Unit switched on?
- Press and hold the ON/OFF button  on the Parent Unit for 3 seconds to switch it ON.
- Is the correct camera selected? Change the camera number, if necessary.
- Is the video display turned on? Press the VIDEO ON/OFF button  to turn it ON.
- When operating using battery only, the display will go blank after 5 minutes or 15 minutes or 30 minutes to save power (depending on video settings). The Unit is still active and will give you audio alerts. You can reactivate the screen by pressing any button.

Registration

If the Baby Unit has lost its link with the Parent Unit

- If the Baby Unit is too far away it may be going out of range, so move the Baby Unit closer to the Parent Unit.
- Reset both the Parent Unit and Baby Unit by disconnecting them from the electrical power. Wait about 15 seconds before reconnecting. Allow up to one minute for the Baby Unit and the Parent Unit to synchronize.
- See 4.6.1 Registration (Pairing), if there is a need to re-register the Units.

Interference

Noise interference on your Parent Unit

- Your Baby and Parent Units may be too close. Move them further apart.
- Make sure there is at least 1 to 2m between the 2 Units to avoid audio feedback.
- If the Baby Unit is too far away, it may be out of range. Move the Baby Unit closer to the Parent Unit.



- Make sure that the Baby and Parent Units are not near other electrical equipment, such as a television, computer or cordless/mobile telephone. Move the Baby Unit or Parent Unit 1 metre away from other electrical equipment.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi® routers), microwave ovens, may cause interference with this product. Keep the Baby Unit or Parent Unit at least 1 metre away from these types of products, or switch them off if they appear to be causing interference.
- If the signal is weak, try moving the Parent and/or Baby Unit to different positions in the rooms.

Noise interference on your device

- To avoid background noise or echoes, ensure that there is enough distance Parent unit and Camera Unit.
- Use of other 2.4 GHz products, such as or microwave ovens, may cause interference with this product. Keep the Wi-Fi® Camera Unit at least 1 metre away from these types of products, or switch them off if they appear to be causing interference.

Lost connection in App

- Check your Wi-Fi® settings. If necessary, reset your Wi-Fi® router. Ensure that the Wi-Fi® Camera Unit is switched ON. Wait a few minutes for the Camera Unit connection to be complete with your Wi-Fi® network.

If you forgot your password

- If you do not remember your password, tap Forgot Password and submit your e-mail address. A new password will be sent to your e-mail address immediately.



Troubleshooting for Wi-Fi® Internet Viewing

Category	Problem Description / Error	Solution
Account	I am unable to login even after registration.	Please check your user name and password.
Account	I receive an error message saying: "Email ID is not registered".	Please ensure that you have registered with us. Tap Create Account to create an account.
Account	What do I do if I forgot my password?	Click on the "Forgot Password" link on https://app.hubbleconnected.com/#lostpassword OR on your Android™ or iOS application. An email will be sent to your registered email address.
Account	I am unable to receive a new password although I have used the "Forgot password" option.	<ol style="list-style-type: none"> 1. The e-mail might have been sent to your Junk Mail Folder. Please check your Junk Mail Folder. 2. There might be a delay in getting your e-mail. Please wait a few minutes and refresh your email account.



Connectivity Issues	I get a message: We are having problems accessing your camera. This could be due to lack of internet connection. Please wait and try again later.	<ol style="list-style-type: none"> 1. Please try again in a few minutes. This could be because of any issue with your internet connection. 2. If the problem remains, please restart your Camera to check if this fixes the problem. 3. Please restart your WIFI Router.
Viewing Camera	When I am in "remote mode", the video stops after 5 minutes. How do I view for longer?	<p>When you are accessing your Camera via a network different from your home network (over the internet) your video times out after 5 minutes.</p> <p>You can click on the Camera again from the Android™/iOS application to start streaming again.</p> <p>If you are accessing from your webbrowser, then you can press on the Reload button to start viewing your Camera video stream again.</p>
Features	The sound alert setting threshold is not right.	You can Adjust Sound Sensitivity to trigger notifications under Camera Setting menu.
Setting Up	While I am adding a new Camera to my account, I am not able to find any Cameras to add.	If you are trying to add a Camera which has previously been added into your account or another account, you will first have to reset the Camera. This can be done by following the re-setting procedure stated in section 6 of this guide. Switch the parent unit off before connecting the camera to Wi-Fi®.



General	What is the significance of the camera LED?	<p>Pair / Setup state: LED is Flashing Green.</p> <p>Unconnected state: LED is Flashing Red.</p> <p>Connected state: LED is Solid Green.</p> <p>Green: The camera is live streaming.</p> <p>LED Off - No Power to camera.</p>
Connectivity issues	I am not able to access my Camera.	Please check if the Camera is within Wi-Fi® range. Please try to move the Camera closer to the router for better Wi-Fi® connectivity and try again.
Setting Up	During setup on devices for Android™ and iOS, I am not able to find my Camera during the last step and the setup fails.	Please reset the Camera to setup mode and try again. Press and hold the PAIR button on the side of the camera until you hear a beep and voice prompt 'Ready for pairing'. When the Camera LED is off, this indicates that it is in setup mode. Add camera in HubbleClub for Partners App.
Connectivity Issues	Even though I am accessing my Camera from the same Wi-Fi® network, I still find my Camera is shown as remote. I can only access it for 5 minutes at a time.	Please check your wireless router settings. For example, for Buffalo brand routers there is an option called Wireless Isolation. Please disable this option.



Camera	When I try to view the Camera, I get a prompt for Camera firmware upgrade. What should I do?	Please upgrade your firmware. This takes around 5 minutes. We push upgrades from time to time to improve the Camera features.
General	Which platforms are supported for accessing my Camera?	Minimum requirement: Android™ 8.0 iPhone®/iPad® iOS version 12.0
General	I do not hear any sound when I am accessing a remote Camera.	You can tap on the speaker icon in the video stream screen to hear audio. By default the audio is not ON when you are accessing a remote Camera.
General	What is the meaning of "Local Camera" and "Remote Camera"?	When you are accessing your Camera from the same wireless network (Home) in which it is configured, it is a Local Camera. When you are accessing your Camera away from your home it is a Remote Camera. You may be using 3G, 4G or 4G LTE or a Wi-Fi® connection outside of your home.



General	How do I download the App for Android™ and iOS devices?	<p>Android™:</p> <ul style="list-style-type: none"> - Open the Google Play Store on your Android™ device. - Select Search - Type in "HubbleClub for Partners" - The results will show the Hubble App - Select to install it <p>iOS Device:</p> <ul style="list-style-type: none"> - Open the App Store™ - Select Search - Type in "HubbleClub for Partners" - The results will show the Hubble App - Select to install it
Setting up	When the video is cut off, the application attempts to reconnect and this results in lost sound and choppy video.	You will need to turn off the Auto Lock function of your device to ensure continuous video/audio streaming.
Features	How many users can access the Camera at one time?	If you are accessing in Local Mode, two users are supported, after two users all streaming will go through the remote server. This allows for unlimited user access to a single Camera at one time.
Connectivity issues	I found interference caused by my other webcam devices.	Video streaming performance is related to internet bandwidth, especially if you have 2 or more video streaming devices that are working through the same router.



11. General Information

Express Warranty (Australia)

This Express Warranty is provided by Oricom International Pty Ltd ABN 46 086 116 369, Unit 1, 4 Sovereign Place, South Windsor NSW 2756, herein after referred to as "Oricom".

Oricom warrants that the product is free from defects in materials or workmanship during the Express Warranty Period. This Express Warranty does not extend to any product from which the serial number has been removed or was purchased outside of Australia.

The benefits of this Express Warranty are in addition to other rights and remedies you may have under the Australian Consumer Law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In the event of a minor failure, Oricom reserves the right to choose to repair or replace the product.

The Express Warranty Period will be a period of 24 months beginning on the date of purchase of the product evidenced by your dated sales receipt. You are required to provide proof of purchase as a condition of receiving Express Warranty services.

You are entitled to a replacement product or repair of the product at our discretion according to the terms and conditions of this document if your product is found to be faulty within the Express Warranty Period. This Express Warranty extends to the original purchaser only and is not transferable.



Products distributed by Oricom are manufactured using new materials or new and used materials equivalent to new in performance and reliability. Spare parts may be new or equivalent to new. Spare parts are warranted to be free from defects in material or workmanship for thirty (30) days or for the remainder of the Express Warranty Period of the Oricom branded product in which they are installed, whichever is longer. During the Express Warranty Period, Oricom will where possible repair and if not replace the faulty product or part thereof. All component parts removed under this Express Warranty become the property of Oricom. In the unlikely event that your Oricom product has a recurring failure, Oricom may always, subject to the Competition and Consumer Act 2010, at its discretion, elect to provide you with a replacement product of its choosing that is at least equivalent to your product in performance.

No change to the conditions of this Express Warranty is valid unless it is made in writing and signed by an authorised representative of Oricom.

Oricom will not be liable under this Express Warranty, and to the extent permitted by law will not be liable for any defect, loss, damage or injury arising out of or in connection with a:

1. Failure by you to adhere to the warnings and follow the instructions set out in this user guide for the proper installation and use of the product;
2. Willful misconduct or deliberate misuse by you of the product;
3. Any external cause beyond our control, including but not limited to power failure, lightning or over voltage; or
4. Modification to the product or services carried out on the product by anyone other than Oricom or Oricom's authorised service provider.



How to make a claim under your Express Warranty in Australia

Oricom has a simple warranty process for you to follow:

- Please call or email our Customer Support Team, 02 4574 8888 or support@oricom.com.au.
- A Customer Support Team member will verify after troubleshooting with you if your product qualifies under warranty. If so, they will give you a Product Return Authorisation number.
- We will then email a Return Authorisation form and a Repair Notice (if necessary), together with instructions on how to return the product for warranty service.

Please note that if a Customer Support Team member advises that your product does not qualify for return, this warranty does not apply to your product. Products that are authorised to be returned to Oricom in Australia must include all of the following:

- A completed Return Authorisation form
- A copy of your Proof of Purchase (please keep your original copy)
- The faulty product, including all accessories.

Send the approved returns to:

Oricom International Pty Ltd
 Locked Bag 658
 South Windsor NSW 2756 Australia

Please note that this Express Warranty excludes expenses incurred by you in returning any faulty product to us. You must arrange and pay any expenses incurred (including postage, delivery, freight, transportation or insurance of the product) to return the faulty product to us, however, we will arrange delivery of the repaired or replaced faulty product to you.



Important Information - Repair Notice

Please be aware that the repair of your products may result in the loss of any user-generated data (such as stored telephone numbers, text messages and contact information). Please ensure that you have made a copy of any data saved on your product before sending for repair. Please also be aware that products presented for repair may be replaced by refurbished products or parts of the same type rather than being repaired.

Oricom Customer Support

Oricom have a trained and dedicated team of Customer Support Representatives, each with the knowledge and resources to assist in answering your questions quickly and efficiently.

Oricom Support - Australia

For all product enquiries, troubleshooting or to discuss the range of Oricom products, feel free to contact Oricom or visit our website for answers to frequently asked questions.

(02) 4574 8888 / Monday - Friday 8am – 6pm AEST

Email: support@oricom.com.au / www.oricom.com.au

Oricom Support - New Zealand

0800 674 266 / Monday - Friday 10am - 8pm NZST

Email: support@oricom.co.nz



12. Technical Specifications

BABY UNIT

Frequency	Proprietary 2400 MHz to 2483.5 MHz Wi-Fi® 802.11 b/g/n, 2.4GHz
Image sensor	colour CMOS 2M Pixels
IR LED	8 pcs
Operating Temperature	5°C to 40°C
Power Adaptor:	Input: 100-240V AC, 50/60Hz, 300mA; Output: 5.0VDC, 1500mA WARNING <i>Use only with provided power supply.</i>



PARENT UNIT

Frequency	2400 MHz to 2483.5 MHz
Display	5" diagonal (1280x720) LCD
Display Colours	16.7M colour LCD
Operating Temperature	5°C to 40°C
Brightness Control	8 steps
Volume Control	8 steps
Power Adaptor	Input: 100-240V AC, 50/60Hz, 300mA; Output: 5.0V DC, 1500mA WARNING <i>Use only with provided power supply.</i>
Battery	TM3000 3.8V, 2100mAh Lithium-Ion Polymer, rechargeable battery pack WARNING <i>Use only with provided battery.</i>

Specifications are subject to change without prior notice.



oricom®

All rights reserved

Ref: 2026-02-23

Printed in China
Version 3.0

