

QUICK START GUIDE

oricom®

For a full explanation of all features and instructions, please refer to the User Guide (available for download from www.oricom.com.au/support/).

1. Contents Inside Box

Models:
OBH650AI



Baby Unit *
(Camera Unit)



Parent Unit

 


x 2

Power Adaptors *




Quick Start Guide




Cot Rail Clamp



 Extension
Connectors x 2



Elbow Mounting
Extension

 


Mounting
Extensions



Cable Cover
x 4



 Cable
Tie



Elbow
Extension Cover

Note: In multi-camera packs, you will find one or more additional Baby Units with power adaptors.




Warning - Strangulation Hazard -

Children have STRANGLED in cords. Always use protective covering when used within 1m of cot. Check before each use to ensure that the cord is not exposed to your child. Immediately discontinue use if protective covering is damaged or broken. Do not remove this tag.

2. Setting up your Digital Video Baby Monitor

2.1 Connecting the Power Supply for the Baby Unit

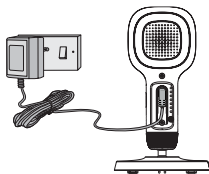


- Insert the DC plug of the power adaptor into the DC socket on the back of the Baby Unit.
- Connect the other end of the power adaptor to a suitable electrical outlet.
- The baby unit turns on and the power indicator lights in Green colour.

Note : Only use the supplied power adaptor (DC5V/1000mA).

2.2 Installing the camera mount on a wall


- Mark the position of the screw holes on the wall.
- Install wall anchors (Not provided) suitable for the wall type and mounting screws if needed.
- Fasten the mounting screws (Not provided) on the wall.
- Position the cable behind the base as shown in the picture before attaching the base on the wall.

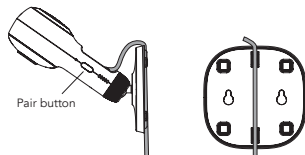


2.3 Connecting the Power Supply of the Parent Unit.

A rechargeable battery inside the Parent Unit allows the parent unit to be used when not plugged into mains power. We recommend charging for at least 4 hours before first use, and when the Parent Unit indicates the battery is low.

 - Remove the pull tab from Parent Unit before use.

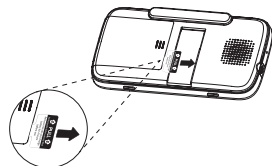

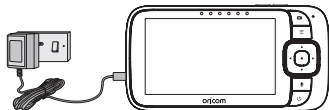

- Connect the USB-C plug of the power adaptor to the parent unit and the other end to mains power. Only use the supplied adaptor (DC5V/1500mA).
- Press and hold the  button to turn the Parent unit on, the Parent unit and Baby unit are automatically linked and ready to use.

NOTE:

When the Baby and Parent Units are both turned on and within range, the Parent Unit should show a colour image from the Baby Unit camera, but if the room is dark, the image will be in black and white, with an  icon showing the Baby Unit is in Night Vision mode. Unplug power adaptors when not in use, do not leave device on charge unattended.

C. Desktop Stand of the Parent Unit

- The parent unit comes with a desktop stand attached to the back.
- To use, simply pull out the stand, as shown.



Note: *Place the parent unit on a flat, even surface.*

3. Basic operation of the keys and display icons

Parent unit		
	ON/OFF button	Press and hold to turn the Parent Unit ON/OFF.
	Vol+ and Vol- buttons	Press +/- to select volume level of the Parent Unit.
	UP/DOWN buttons	Press to tilt the camera up or down. (when in Zoom only) Press to adjust menu setting when menu is active.
	LEFT/RIGHT buttons	Press to pan the camera left or right. (when in Zoom only) Press to access menu options when menu is active.
	MENU button	Press to access or exit the menu.
	OK button	In menu mode, press to confirm a selection. When multiple cameras are paired to the parent unit, press to switch cameras, select camera scan or split screen viewing modes.
	VIDEO button	Press to turn the LCD screen ON/OFF. Audio will be active when the screen is off.
	TALK button	Press and hold to talk to your baby.
	RESET pin hole	Press and hold with a small pin to reset the unit.
Baby Unit		
	PAIR button	Press and hold to pair with the parent unit or HubbleClub for Partners App.

Menu Icons	
	LCD Brightness Level Control (8 Levels).
	Zoom Level Control.
	Audio Media selection - Personal Recordings  , Lullabies/Soothing Sounds  , Audio Books  Volume control of media playback  .
	Select night light colour and to turn Night Light on or off.
	Alarm Setting On status bar, indicates alarm set, and when flashing, that alarm time has been reached or missed.
	Set Screen Off Timer (5 mins, 15 mins, 30 mins).
	Camera Control (add  , del  , view  , scan ).
	View multiple cameras on screen. Note: Function available when you have more than 1 Baby Unit (Camera).
	 Temperature scale selects (°C/°F)  Lowest Temperature Alert Setting (programmable from 10 to 30°C, default is 14°)  Highest Temperature Alert Setting (programmable from 20 to 40°C, default is 29°C) Readings display in grey, but turns RED if > 29 °C or < 14 °C.
	Clock display in 12-hour (AM/PM) or 24-hour format. Note: Function available when connected to the HubbleClub for Partners App
VOX	Set VOX (voice activated) function and sensitivity levels (Off, Lo, Mid, Hi) High Sensitivity HI : monitor activates with very soft sounds Medium Sensitivity MID : monitor activates with moderate sounds Low Sensitivity LO : monitor activates only with loud sounds VOX OFF icon: monitor stays on continuously
	To read the firmware version of the Parent Unit Note: For providing the technical information of the device when requested by the technical support team.

Note: Feature is not available in this version when the icons are grayed out.

IMPORTANT: Download the full User Guide for complete instruction, from the Oricom website:
oricom.com.au/support/.

* The playlist appears only if you make the audio recording via HubbleClub for Partners app.

Audio Media Playback menu icons	
	Select to display personal recording playlist. *
	Select to display soothing sound or lullaby playlist.
	Select to display audio book playlist.
	Volume control of media playback.
	Play selected audio media on the playlist.
	Stop playing audio media.

Display icons

	Signal Level (5 Levels).
	Night Vision Mode (Video also changes to Black/White).
	Indicates the screen off timer is set.
	Volume Level Control (8 Levels).
	No Baby Unit detected.
	Battery Level Indicator (4 Levels).

4. Important Safety Information

- Your Oricom baby monitor is designed to be an aid and should not be used as a substitute for responsible and proper adult supervision of a child.
- The baby monitor has been designed to provide some added reassurance in the form of video/sound transmission for those times when you are not in the same room as your baby provided you always stay within hearing range of the baby monitor during use.
- Your baby monitor is not a medical device, nor a device to prevent cases of Sudden Infant Death Syndrome (SIDS) or "cot death", and you should not rely on it for your baby's wellbeing. It is important that you regularly check on your baby personally.
- Make sure the baby unit, parent unit and mains adaptor cables are kept out of reach of your baby and other young children at all times, as far away from the baby as practical.
- Never place the baby unit or parent unit inside your baby's cot, bed or playpen.
- Never cover the parent or baby units with clothes, towels or blankets or any other item.
- Never use or place your parent or baby unit in or near moisture or water (e.g. near bath or pool). Immersing in water could cause electric shock and even death.
- The installation location plays an important role in ensuring proper operation. Therefore, maintain a distance of at least one metre from other electronic equipment, such as microwave ovens or Wi-Fi devices, otherwise they could cause interference.
- During continual use the baby unit power adaptors may become warm to the touch. This is normal and should not be a concern.
- This product is not a toy, do not allow children to play with this monitor.
- This device is designed for indoor use only.
- Unplug power adaptors when not in use, do not leave device on charge unattended.

5. Setting up the Camera Unit for Wi-Fi® internet viewing

5.1 Install HubbleClub for Partners App.



- Scan the QR code with your smart device and download HubbleClub for Partners App from the App Store for iOS devices or from the Google Play™ Store for Android™ devices.
- Install HubbleClub for Partners App on your device.

5.2 View on Compatible Smartphones and Tablets.



1. Open the HubbleClub for Partners App on your compatible smartphone or tablet.
2. Follow the in-app instructions to create your HubbleClub for partners account and connect to your device.


Please take note of the following minimum system requirements:

Smartphones/Tablets: iOS 14.0, Android™ 8.0

6. Installation of Cot Mount


The model features advanced AI prediction algorithms so that unsafe sleep postures like when baby has their face covered or aren't on their back, are detected and you are alerted via the HubbleClub for Partners app.

For accurate detection and notification of all events, please mount the camera in a bird's eye view to oversee your baby at about 1 to 1.5m distance for optimal detection. See image below.

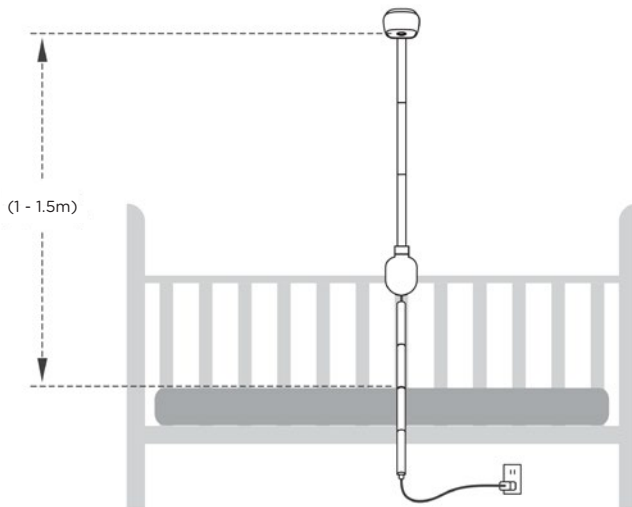


6.1 Assembling the Cot Mount

- Follow the number sequence to assemble the cot mount.
- Thread the power cable from the Cot Rail Clamp through all the Low Extensions, Extension Connectors, Middle Extension, Elbow Extension and Top Extension.
- Make sure the Extensions and Connectors are connected correctly, you should hear a click sound once installed together.

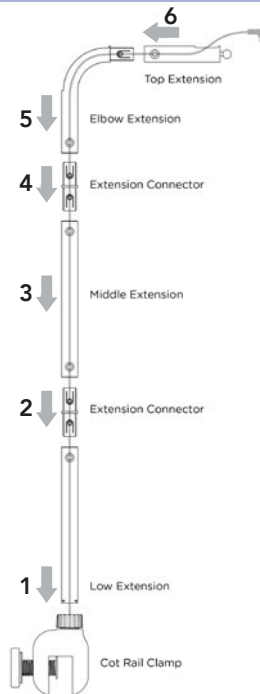



6.2 Close the Elbow Extension Cover

- Install the Elbow Extension Cover after the power cable is properly aligned.

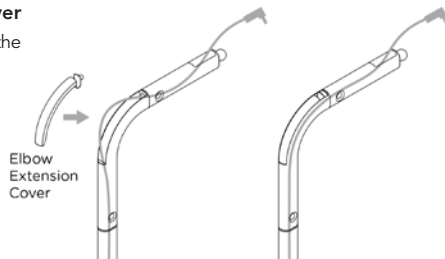

6.3 Camera Installation

- Push the lock nut through the ball joint from the Top Extension.
- Push the chuck at the camera end to catch the ball joint from the Top Extension (fig. 1).
- Tighten the lock nut securely to hold the camera in place (fig.2).

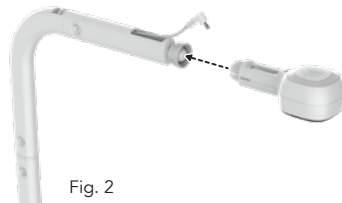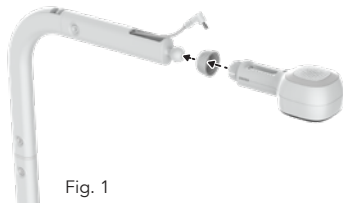

6.4 Power Connection

- Insert the DC power plug into the camera's power socket. Refer to fig. 3 and 4.
- Any excess cable should be pushed back into the open slot.

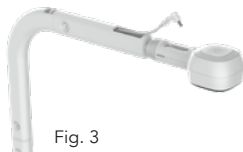


Fig. 3


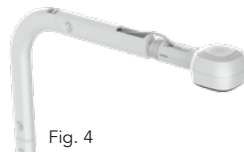


Fig. 4

6.5 Cot Mounting options


A. For top rail width less than 4.0cm (1.5")

- Place the Cot Rail Clamp on the top rail of the cot.
- Tighten the lock nut to securely clamp the cot mount to the rail.

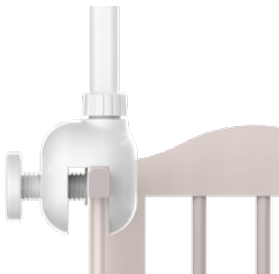


B. For top rail width wider than 4.0cm (1.5")

- Place the Cot Rail Clamp on the fencing with the lock nut inside the cot.
- Tighten the lock nut to securely clamp the cot mount against the slats.

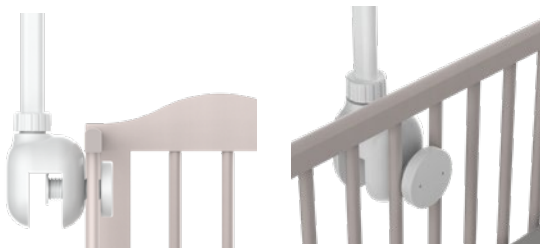

6.6 Powering On

- Insert the round DC plug into the round socket at the bottom of the cot mount.
- Connect the power adaptor to a suitable power outlet.

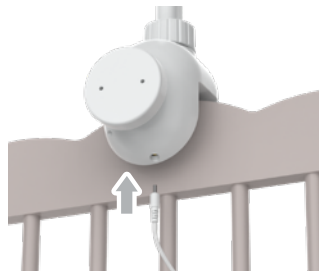

6.7 Cable Covers application

- Use the cable covers to cover the power cable below the Cot Rail Clamp.
- Remove the cover first then align the cables inside the cover channels.
Reinstall the cover.
- Peel the backing tape off the cable covers.
- Press to stick the cable covers to the cot rails or tie the covers to the cot rails by cable tie (see fig. 7 and 8).

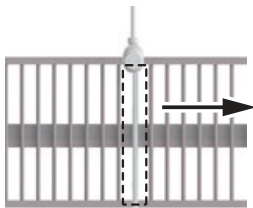


Fig. 7

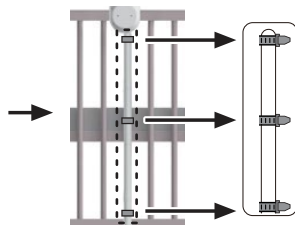
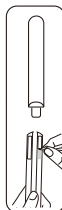 


Fig. 8

IMPORTANT SAFETY NOTES:

- Choking Hazard - Contains Small Parts. Keep children away from the installation area.
- Strangulation Hazard: The cable covers **MUST** be installed and be even with or extend below the bottom of the cot rails before use.

7. General Information

Express Warranty (Australia)

This Express Warranty is provided by Oricom International Pty Ltd ABN 46 086 116 369, Unit 1, 4 Sovereign Place, South Windsor NSW 2756, herein after referred to as "Oricom".

Oricom warrants that the product is free from defects in materials or workmanship during the Express Warranty Period. This Express Warranty does not extend to any product from which the serial number has been removed or was purchased outside of Australia.

The benefits of this Express Warranty are in addition to other rights and remedies you may have under the Australian Consumer Law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In the event of a minor failure, Oricom reserves the right to choose to repair or replace the product.

The Express Warranty Period will be a period of 24 months beginning on the date of purchase of the product evidenced by your dated sales receipt. You are required to provide proof of purchase as a condition of receiving Express Warranty services.

You are entitled to a replacement product or repair of the product at our discretion according to the terms and conditions of this document if your product is found to be faulty within the Express Warranty Period. This Express Warranty extends to the original purchaser only and is not transferable.

Products distributed by Oricom are manufactured using new materials or new and used materials equivalent to new in performance and reliability. Spare parts may be new or equivalent to new. Spare parts are warranted to be free from defects in material or workmanship for thirty (30) days or for the remainder of the Express Warranty Period of the Oricom branded product in which they are installed,

whichever is longer. During the Express Warranty Period, Oricom will where possible repair and if not replace the faulty product or part thereof. All component parts removed under this Express Warranty become the property of Oricom. In the unlikely event that your Oricom product has a recurring failure, Oricom may always, subject to the Competition and Consumer Act 2010, at its discretion, elect to provide you with a replacement product of its choosing that is at least equivalent to your product in performance.

No change to the conditions of this Express Warranty is valid unless it is made in writing and signed by an authorised representative of Oricom.

Oricom will not be liable under this Express Warranty, and to the extent permitted by law will not be liable for any defect, loss, damage or injury arising out of or in connection with a:

1. Failure by you to adhere to the warnings and follow the instructions set out in this user guide for the proper installation and use of the product;
2. Willful misconduct or deliberate misuse by you of the product;
3. Any external cause beyond our control, including but not limited to power failure, lightning or over voltage; or
4. Modification to the product or services carried out on the product by anyone other than Oricom or Oricom's authorised service provider.

How to make a claim under your Express Warranty in Australia

Oricom has a simple warranty process for you to follow:

- Please call or email our Customer Support Team, 02 4574 8888 or support@oricom.com.au.
- A Customer Support Team member will verify after troubleshooting with you if your product qualifies under warranty. If so, they will give you a Product Return Authorisation number.
- We will then email a Return Authorisation form and a Repair Notice (if necessary), together with instructions on how to return the product for warranty service.

Please note that if a Customer Support Team member advises that your product does not qualify for return, this warranty does not apply to your product. Products that are authorised to be returned to Oricom in Australia must include all of the following:

- A completed Return Authorisation form
- A copy of your Proof of Purchase (please keep your original copy)
- The faulty product, including all accessories.

Send the approved returns to:

Oricom International Pty Ltd
Locked Bag 658
South Windsor NSW 2756 Australia

Please note that this Express Warranty excludes expenses incurred by you in returning any faulty product to us. You must arrange and pay any expenses incurred (including postage, delivery, freight, transportation or insurance of the product) to return the faulty product to us, however, we will arrange delivery of the repaired or replaced faulty product to you.

Important Information - Repair Notice

Please be aware that the repair of your products may result in the loss of any user-generated data (such as stored telephone numbers, text messages and contact information). Please ensure that you have made a copy of any data saved on your product before sending for repair. Please also be aware that products presented for repair may be replaced by refurbished products or parts of the same type rather than being repaired.

Oricom Customer Support

Oricom have a trained and dedicated team of Customer Support Representatives, each with the knowledge and resources to assist in answering your questions quickly and efficiently.

Oricom Support - Australia

For all product enquiries, troubleshooting or to discuss the range of Oricom products, feel free to contact Oricom or visit our website for answers to frequently asked questions.

(02) 4574 8888 / Monday - Friday 8am – 6pm AEST

Email: support@oricom.com.au / www.oricom.com.au

Oricom Support - New Zealand

0800 674 266 / Monday - Friday 10am - 8pm NZST

Email: support@oricom.co.nz

oricom®

All rights reserved

