

How to connect



Using the VIB100

When connected to a compatible Oricom product the VIB100 will vibrate each time you receive an incoming call.

1. Connect the VIB100 to the VIB/Shaker outlet on the product as illustrated in the diagram below or in the user guide supplied with the Oricom phone.
2. In the menu on the professional series cordless phone you must set the "Shaker" feature to "ON" (refer to your Professional Series product operating instructions).
3. Place the VIB100 under your pillow/or cushion etc. to alert you of incoming call.

