



Oricom WNS1
Jumbo Display
Alarm Clock and Shaker

User Guide

Keep this user guide for future reference

WARNINGS



WARNINGS

Before installing or changing the battery make sure that the telephone is not connected to the telephone network or the mains power supply.

When inserting batteries into this product, observe the proper polarity or direction, failure may result in leakage or explosion.

Remove the batteries from this product if it will not be used for a long time (several months or more) since during this time the batteries could leak.

Batteries must be disposed of in accordance with the applicable waste disposal regulations.



AC ADAPTOR

Use only the mains AC adapter supplied with this product. Incorrect adapter polarity or voltage can seriously damage the unit.

AC Adaptor model number:- KA24A090090045S

Input: 240VAC 50Hz 70mA

Output: 9.0V AC 900mA



CAUTION

Always have a corded phone available to be able to make and receive calls to emergency services in case of mains power failure.

WARNINGS

Do not use any telephone during an electrical thunderstorm as it is possible to get an electric shock. Refer to information contained in the White pages directory.

BATTERY BACK-UP (Battery not supplied)

 
It's not necessary to install a battery for the clock to function. You can install a 9 volt alkaline battery to keep the time and alarm settings in the event of a power cut or the AC adaptor being unplugged for any reason.

We recommend you replace the old battery every 12 months, if there is frequently power outage, the battery need to be replaced more frequently. A leaking battery can destroy your WNS1.


INSTALLING THE 9 VOLT BATTERY

- Before installing or changing the battery make sure that the telephone is not connected to the telephone network or the mains power supply.
- Install a new 9 volt alkaline battery.
- Replace the battery door.

LOCATION OF CONTROLS

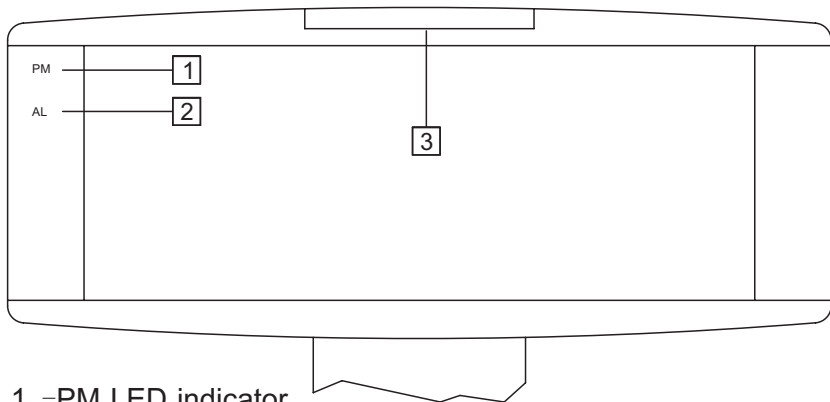

 - 1 -PM LED indicator
- 2 -Alarm LED indicator
- 3 -Strobe light and snooze button

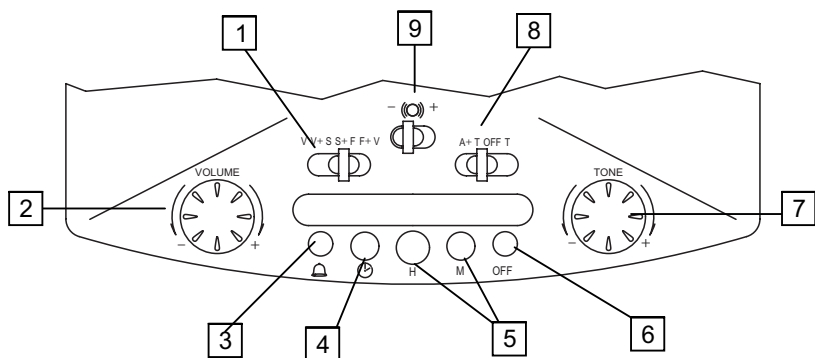


- 1 -Alarm mode switch
- 2 -Alarm and ring volume
- 3 -Set alarm
- 4 -Set clock
- 5 -Set hours & minutes
- 6 -Alarm off
- 7 -Alarm tone
- 8 -Alarm + ring / Off / Ring function switch
- 9 -Shaker Lo / Hi switch

INITIAL SETUP

PACK CONTENTS

Unpack the unit and check to be sure you have all the items below.

 - 1 Jumbo display /alarm clock (WNS1)
- 1 modular line Cord
- 1 Double adaptor plug
- 1 Shaker
- This User guide

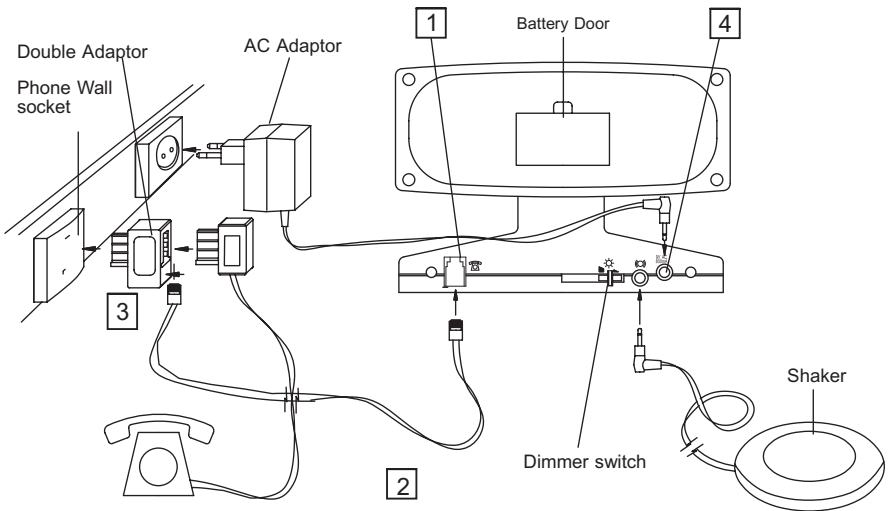

INITIAL SET UP

- Connect one end of the phone line cord to the back of the unit (1) and the other end to the double adaptor plug.
- Plug the double adaptor into the telephone wall socket.
- Connect the AC adaptor to the socket (4) on the back of the unit.
- Plug the AC adaptor to the power socket on the wall.
- Plug in the shaker to the back of the unit.

ALARM AND CLOCK FUNCTION

SETTING THE TIME (🕒)

- Press and hold 🕒 (set clock) button.
- Press **H** (hour) and **M** (minute) until correct hour and minutes appear on the display.
- Release 🕒 (set clock) button.
- For p.m. hours, the p.m. indicator will appear on the display near the inscription **PM**.

SETTING THE ALARM TIME (🔔)

Press and hold 🔔 (set alarm) button.

Press **H** (hour) or **M** (minute) until correct hour and minutes appear on the display.

Release 🔔 (set alarm) button.

Press 🔔, **H** and **M** to reset the alarm clock to 12.

SETTING THE ALARM MODE

Put the function switch on **A+T** position. Choose which alarm mode you wish to be awakened to by moving the alarm mode switch to one of the following selections:

V : only shaker activated

V+S : both sound and shaker alarm activated

F+V : both strobe light and shaker alarm activated


ALARM AND CLOCK FUNCTION

When the alarm is set to one of the alarm modes, the alarm indicator will appear on the display near the inscription **AL**.

The table below shows how the alarm modes indicate an incoming call from the alarm clock.

| ALARM MODE | ACTION | ALARM CLOCK | INCOMING CALL |
|--------------|----------|-------------|---------------|
| SOUND | Buzzer | Continuous | With pauses |
| SHAKER | Vibrates | Continuous | With pauses |
| STROBE LIGHT | Flashes | Continuous | With pauses |

SNOOZE BUTTON / STROBE LIGHT

When the alarm sounds, you can use the  snooze button to temporarily turn off the alarm. The alarm will come on again after 9 minutes. This sequence can be carried out for up to 2 hours after which the alarm mode will be automatically switched off.

SWITCHING THE ALARM OFF

Press the alarm off button (**OFF**), the alarm will then operate at the same time the next day. The alarm if not switched off will continue to sound for up to 2 hours and then be automatically switched off.

ALARM AND CLOCK FUNCTION


RINGER ON/OFF SWITCH (A+T / OFF / T)

- **A+T** (alarm + telephone): for the alarm and telephone ring position.
- **OFF**: alarm and ring off.
- **T** (telephone): for the telephone ring position.

HOW TO USE WITH YOUR TELEPHONE

- Ensure that your telephone is connected to the WNS1 as shown in the installation section.
- Select the ringer On/Off switch on the **A+T** or **T** position for the ring.
- Choose which of the alarm modes you wish to alert you of your incoming telephone calls (see page 5: **V**, **V+S**, **S+F** or **F+V**)
- When the alarm mode selected indicates there is an incoming telephone call, lift the telephone handset and answer the call. When you have finished the call replace the handset and the alarm will be ready to indicate the next call.

DIMMER SWITCH ()

Adjust the brightness of the display by moving the  control at the rear of your WNS1.

VOLUME CONTROL

Use this to set the volume of the ringer and the alarm sound.

ALARM AND CLOCK FUNCTION

TONE

This allows you to select the tone of the alarm sound that is best for you.

SHAKER SWITCH (- / +)

Sets the motion of the shaker to Lo (-) or Hi (+)

CLEANING

The surface of the case can be cleaned with a dry, soft, lint-free cloth. Never use cleaning agents, particularly aggressive solvents. Apart from occasional cleaning of the case, no other care is necessary. The rubber feet on the base are not resistant to all cleaning agents. The rubber feet do not normally leave any marks on the surface. However, on account of the multitude of varnishes and surface finishes used, surface marks caused by the feet of the unit cannot be ruled out.

Customer Support

If you have any problems setting up or using this product you will find useful tips and information in the Troubleshooting section of this user guide as well as “Frequently Asked Questions” on our website www.oricom.com.au.

If you have further questions about using the product after reviewing the resources above or would like to purchase replacement parts or accessories please call our Customer Support Team. Our dedicated local support team are more likely to be able to help you than the retailer where you made your purchase.

Important

Please retain your purchase receipt and attach to the back page of this user guide as you will need to produce this if warranty service is required. Take a few moments to register your product online: www.oricom.com.au.

WARRANTY

How to make a claim under Warranty in Australia

Oricom has a simple warranty process for you to follow:

- Please call or email our Customer Support Team, contact details follow.
- A Customer Support Team member will verify after troubleshooting with you if your product qualifies under warranty. If so, they will give you a Product Return Authorisation number.
- We will then email or fax a Return Authorisation form and a Repair Notice (if necessary), together with instructions on how to return the goods for warranty service.

Please note that if a Customer Support Team member advises that your product does not qualify for return, this warranty does not apply to your product.

Products that are authorised to be returned to Oricom in Australia must include all of the following:

- A completed Return Authorisation form
- A copy of your Proof of Purchase (please keep your original copy)
- The faulty product, including all accessories.

Send the approved returns to:

Oricom International Pty Ltd
Locked Bag 658
South Windsor NSW 2756 Australia

WARRANTY

Please note that this warranty excludes expenses incurred by you in returning any faulty product to us. You must arrange and pay any expenses incurred (including postage, delivery, freight, transportation or insurance of the product) to return the faulty product to us, however, we will arrange delivery of the repaired or replaced faulty product to you.

Important Information

Repair Notice

Please be aware that the repair of your goods may result in the loss of any user - generated data (such as stored telephone numbers, text messages and contact information). Please ensure that you have made a copy of any data saved on your goods before sending for repair.

Please also be aware that goods presented for repair may be replaced by refurbished goods or parts of the same type rather than being repaired.

Warranty Information (Australia)

This Warranty is provided by Oricom International Pty Ltd ABN 46 086 116 369, Unit 1, 4 Sovereign Place, South Windsor NSW 2756, herein after referred to as “Oricom”.

Oricom makes no other warranties or conditions, express or implied, including as to acceptable quality and fitness for a particular purpose, except as stated in this Warranty. Any implied warranties that may be imposed by law are limited in duration to the Warranty Period.

Oricom warrants that the product is free from defects in materials or workmanship during the Warranty Period. This Warranty does not extend to any product from which the serial number has been removed or was purchased outside of Australia.

This warranty in no way affects your statutory warranty rights under the Competition and Consumer Act 2010 or any other similar legislation.

The Warranty Period will be 1 year from the date of purchase of the product evidenced by your dated sales receipt. You are required to provide proof of purchase as a condition of receiving warranty services.

You are entitled to a replacement product or repair of the product according to the terms and conditions of this document if your product is found to be faulty within the Warranty Period. This Warranty extends to the original purchaser only and is not transferable.

Rechargeable battery cells and rechargeable battery packs (if supplied) with this product are covered under

WARRANTY

this warranty for a period of 90 days.

Products distributed by Oricom are manufactured using new materials or new and used materials equivalent to new in performance and reliability. Spare parts may be new or equivalent to new. Spare parts are warranted to be free from defects in material or workmanship for thirty (30) days or for the remainder of the Warranty Period of the Oricom branded product in which they are installed, whichever is longer. During the Warranty Period, Oricom will where possible repair and if not replace the faulty product or part thereof. All component parts removed under this Warranty become the property of Oricom. In the unlikely event that your Oricom product has a recurring failure, Oricom may, subject to the Competition and Consumer Act 2010, at its discretion, elect to provide you with a replacement product of its choosing that is at least equivalent to your product in performance.

Oricom does not warrant that the operation of the product will be uninterrupted or error free.

Oricom is not responsible for damage that occurs as a result of your failure to follow the instructions that came with the product. These terms and conditions together with any specific terms and conditions contained in the user guide to the product purchased constitute the complete and exclusive agreement between you and Oricom regarding the product.

No change to the conditions of this Warranty is valid unless it is made in writing and signed by an authorised representative of Oricom.

Oricom will not be in breach of a warranty expressly set out in this User Guide or under the Competition and

WARRANTY

Consumer Act 2010 and excludes any liability for damages or any other remedy arising under any other legislation or the common law if the damage occurs as a result of:

1. failure by you to adhere to the warnings and follow the instructions set out in this user guide for the proper installation and use of the product;
2. negligence on your part or misuse by you of the product;
3. an uncontrollable external cause which results in the product not functioning including but not limited to power failure, lightning or over voltage; and
4. modification to the product or services carried out on the production by anyone other than Oricom or Oricom's authorised service provider.

Oricom will not be liable for any damages caused by the product or the failure of the product to perform, including any lost profits or savings or special, incidental or consequential damages. Oricom is not liable for any claim made by a third party or made by you on behalf of a third party. This limitation of liability applies whether damages are sought, or a claim made, under this Warranty or as a tort claim (including negligence and strict product liability), a contract claim or any other claim. However, this limitation of liability will not apply to claims for personal injury. Nothing in this Warranty excludes, restricts or modifies any condition, warranty, right or remedy which pursuant to the Competition and Consumer Act 2010 applies to this Warranty and which may not be so excluded, restricted or modified. For warranties that cannot be excluded, restricted or

modified, Oricom limits the remedies available to those specified in the relevant legislation.

Oricom products come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact details for Oricom Support and Warranty Claims in Australia

Oricom International Pty Ltd
Locked Bag 658
South Windsor, NSW 2756
Australia

Email: support@oricom.com.au
Phone: 1300 889 785
(Monday to Friday 8am to 6pm AEST)
Web: www.oricom.com.au
Fax: (02) 4574 8898

Contact details for Oricom Support and Warranty Claims in New Zealand

Email: support@oricom.co.nz
Phone: 0800 674 266
(Monday to Friday 10am to 8pm NZST)
Web: www.oricom.co.nz

15092011

