



Oricom Audio Baby Monitor Secure 530 with Lightshow



User Guide

KEEP THIS USER GUIDE FOR FUTURE REFERENCE

Always retain your proof of purchase in case of warranty service.
AUSTRALIA: www.oricom.com.au NEW ZEALAND: www.oricom.co.nz

Welcome

Thanks for buying an Oricom Baby Monitor. You'll soon be able to relax knowing you can listen for your baby's every gurgle, snuffle or cry.

But first things first. To get set up, just follow the steps from page 9. Set-up only takes a few minutes.

Then, you can learn all about your monitor and how to use it from page 13.



Important safety information

1. Your baby monitor is designed as an aid. It is not a substitute for responsible and proper adult supervision.
2. Make sure all cables and units are out of your baby's reach – at least one metre away.
3. Never cover either unit, or put them in moist places or inside the cot, bed or playpen.
4. If you travel abroad, check the voltage on your unit's plugs match the local power output.
5. Only use the battery supplied for the Parent unit. If you need to replace it, contact our Sales or Support Team.
6. Do not take the product apart. If you need repairs, get in touch with our Sales or Support Team.
7. The Baby unit might get warm after it's been on for a while. Don't worry – this is normal, and it's perfectly safe.

Inside the box

- Baby unit
- Parent unit
- 2 x AA NiMH 1300mAh rechargeable batteries (Part number: 2B0076) for Parent unit (pre-installed)
- 2 x power adaptors

Warning

Risk of suffocation!

Keep all packaging materials and protective foils out of reach of children.

Contents

Your SC530 Baby Monitor

Parent unit	6
Baby unit.....	7
Parent unit menu map	8

Setting up

Parent unit	9
Baby unit.....	10
Switching on and linking the Parent and Baby units	11
Deciding where to put your units ...	11

Using your SC530 Baby Monitor

Switching the Baby unit on/off	13
Switching the Parent unit on/off...	13
Changing your Baby unit settings using the Parent unit menu.....	14
Checking or changing the loudspeaker volume on your Parent unit.....	14
Changing the loudspeaker volume on your Baby unit.....	15
Lightshow	15

Switch lightshow on/off using the Baby unit.....	15
Switch lightshow on/off using the Parent unit.....	16
Setting the lightshow timer	16
Talkback	17
Nightlight.....	17
Switching nightlight on/off using the Baby unit.....	17
Switching nightlight on/off using the Parent unit.....	18
Selecting the nightlight brightness level through the Parent unit.....	18
Setting the nightlight timer	18
Playing music from the Baby unit.....	19
Turning music on/off using the Baby unit.....	19
Turning music on/off using the Parent unit	20
Choosing a song to play using the Parent unit	20

Changing a song currently playing using the Baby unit.....	21	Oricom Help	30
Setting a play time for music	21	General information	
Feed timer	22	Cleaning	32
Starting the feed timer countdown	22	Express Warranty (Australia).....	32
Setting how often you want to get feed timer alerts.....	23		
Cancelling the feed timer countdown	24		
Switching the timer repeat option on or off.....	24		
Temperature monitor	25		
Changing the temperature format	25		
Adjusting the monitor's temperature	26		
Resetting the temperature on your monitor.....	26		
Backlight			
List of tones	28		
Resetting the units.....	29		

Your SC530 Baby Monitor

Parent unit

LCD display and backlight

The screen backlight comes on whenever you press a button.

It switches off again after 15 seconds.

Volume up/down

Turns the speaker volume up or down and lets you scroll through the main menu.

Menu

Opens the main menu. Press again to exit the main menu.


Talk

Press and hold down to talk to your baby.

Power socket

(on the back)

For connecting to the mains power socket using the power adaptor cable supplied.

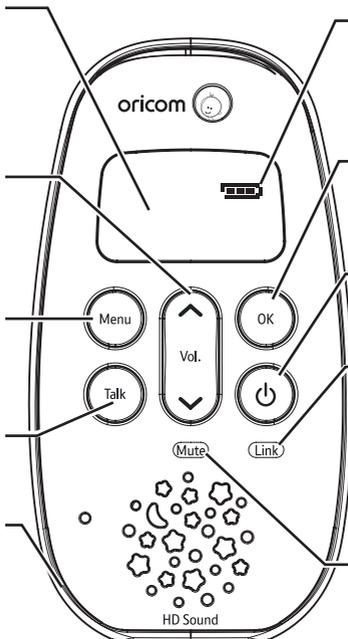

Battery icon on LCD screen

Tells you how much battery life your unit has left.

OK

Press to confirm when you're scrolling through the main menu.

Power

Press and hold to turn the unit on or off.


Link light

Flashes when your monitor is trying to find a link. Remains solid when the Parent and Baby units are linked to each other.

Mute light


Remains on when your Parent unit is on mute.

Baby unit

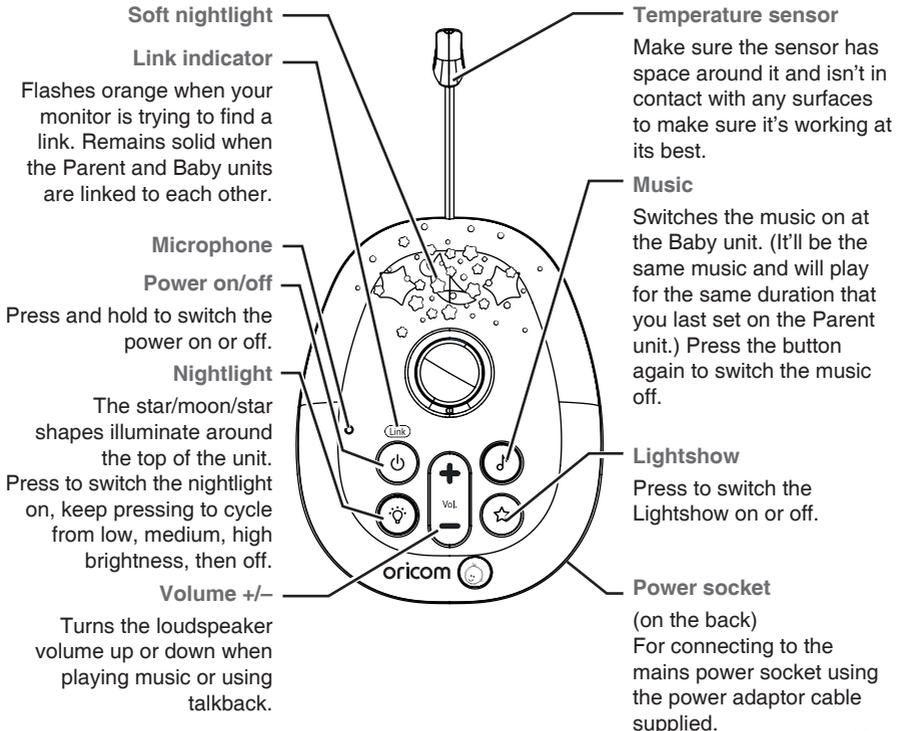

Your SC530 Baby Monitor


Parent unit menu map

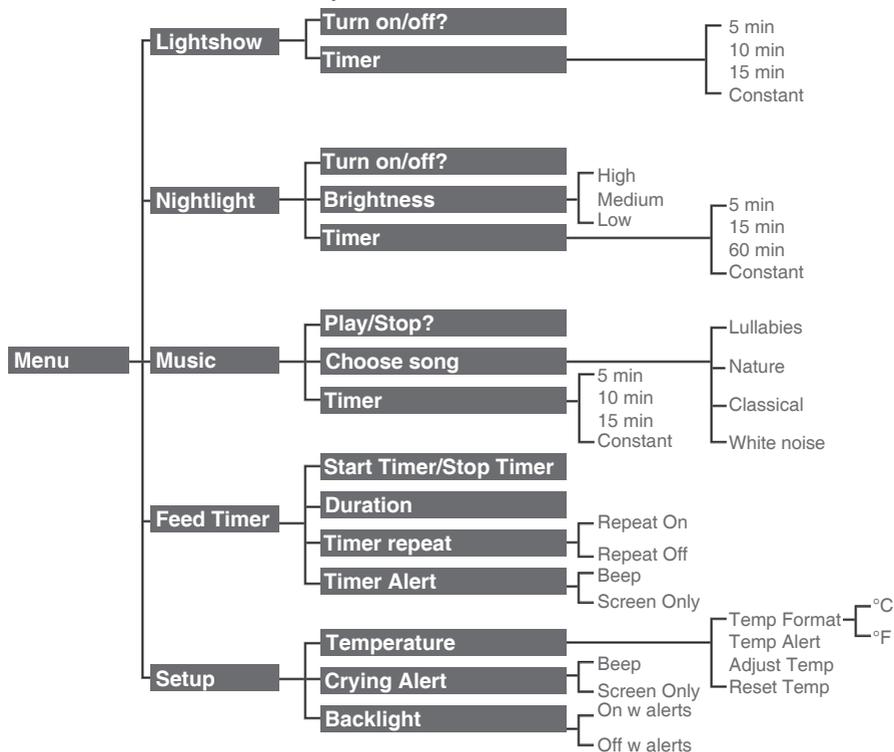


Setting up

Parent unit

1. Plug one of the power cables into the socket on the back of the Parent unit.
2. Plug the other end of the cable into your mains wall socket and switch it on.

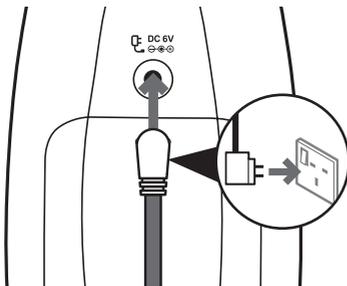

3. Activate the batteries by pulling the plastic tab away from the back of the Parent unit.

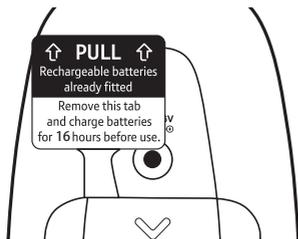

Warning

Only use the power adaptors supplied. Using incorrect power adaptors may permanently damage your product.

Battery low alert on Parent unit

When the batteries on your Parent unit are running out, an alert will sound and the battery icon  on your display screen will flash. When this happens, you'll need to charge the batteries.

Warning

Always use rechargeable batteries in the Parent unit. Only use the type we've recommended – 2 x AA NiMH 1300mAh batteries (Part number: 2B0076). Charge the batteries as instructed in this user guide. The Parent unit can still be used when it's charging.

Setting up


Taking out the batteries

If you ever need to remove the batteries, slide open the battery compartment cover and use the ribbon to pull them out.

4. Leave the batteries to charge for 16 hours to reach maximum charge. When they are fully charged the battery icon on the display will show full charge .

Baby unit

1. Plug the remaining power cable into the socket on the back of the Baby unit.
2. Plug the other end of the cable into your mains wall socket and switch it on.

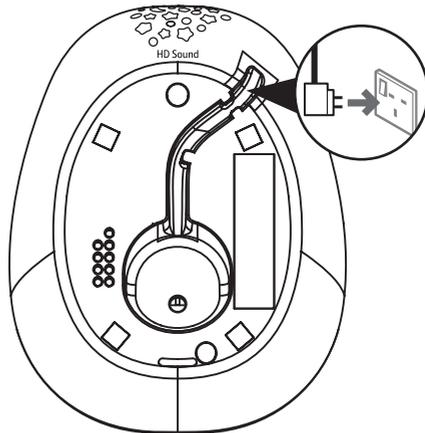

Switching on and linking the Parent and Baby units

Before switching on, make sure the Parent and Baby unit are at least one metre from each other. Any closer and you might get audio feedback sounds.

1. Press and hold the  button on the Baby unit until the orange Link indicator flashes.
2. Press and hold the  button on the Parent unit until all the LEDs on the unit briefly light up. The orange Link indicator will flash and the display will show  Linking...
3. When the units are linked, the orange Link indicator lights on the Parent and Baby units will stop flashing. When the lights stay steady, your monitor is ready to use.

Deciding where to put your units

The Baby unit should ideally be within 1 to 2 metres of your baby. Make sure both the Baby unit and mains power cable are connected securely and they're out of baby's reach.

If the Parent and Baby units are too close together, you'll hear a high-pitched noise. That's because the units are designed to be put at a distance from one another, such as in separate rooms.

Important

The two units will need to be linked before you can start using them. If the link between the units is broken, the Link indicator lights will flash while they try to look for each other. The Parent unit will show **I'm Linking...**

After 30 seconds, if the link is still broken, the Link indicator lights will flash red. The Parent unit display will show **Not Linked** and you'll hear an alert.

If the link is broken, check that:

- the mains power is plugged in and switched on at the Baby unit
- both units are switched on
- the batteries are charged in the Parent unit
- the Parent and Baby units are within range of each other (in ideal conditions, that's up to 300 metres outdoors and 50 metres indoors).

Using your SC530 Baby Monitor

Switching on/off

Switching the Baby unit on

1. To switch on, press and hold the  button until the nightlight briefly illuminates and the orange Link light flashes. When it's finished linking, it'll stop flashing and remain steady.
2. To switch off, press and hold the  button again.

Switching the Parent unit on

1. To switch on, press and hold the  button on your Parent unit. The LED screen will come on and the green light at the top will illuminate. The Link light will also flash on and off while the units are linking. *I'm Linking...* will show on the screen. When the units have found each other, your Parent unit will go back to its idle screen.
2. To switch off, press and hold the  button again. The screen will go blank and all the lights will switch off.

Changing your Baby unit settings using the Parent unit menu

You can use the **Menu** button on the Parent unit to change settings on the Baby unit without having to disturb your baby.

1. Press **Menu** and then **▲** or **▼** to scroll through the menu options. Press **OK** when the option you want appears on the screen.
2. You'll be taken to the submenu. Press **▲** or **▼** to scroll through the options. Press **OK** when the option you want shows on the screen.
3. You can then press **Menu** briefly to step back one menu level at a time, or press and hold **Menu** to go back to the idle screen. If you don't press any buttons for ten seconds, your Parent unit will go back to the idle screen automatically.

Checking or changing the loudspeaker volume on your Parent unit

You can change the volume on either of the units using the **▲** and **▼** buttons. When you press the **▲** or **▼** volume button, the current volume will be shown on your display screen. If you've muted the sound **Volume off** will show on the display screen.

Changing the loudspeaker volume on your Baby unit

There are two different ways to change the volume on the Baby unit.

1. When music is playing or you're using talkback, you can press the **+** or **-** buttons to adjust the volume.
2. If no music is playing and you're not using talkback, pressing the **+** or **-** buttons will change the volume.

Lightshow

The Baby unit has a lightshow that projects a starry image onto the ceiling of your baby's room. Using the Parent unit menu, you can set when you want the lightshow to start.

Switch lightshow on/off using the Baby unit

1. To switch on, press the **★** button. The lightshow will slowly fade in.
2. To switch off, press **★** again. The lightshow will fade out.

Each unit has five volume levels.

If you try to set the volume higher or lower than those, you'll hear a beep.

The Baby unit must be switched on for the lightshow to work but doesn't need to be linked to the Parent unit. Its default setting is Constant.

Switch lightshow on/off on the Parent unit

1. Press . Lightshow will show on the screen. Press .
2. Press  or , to get to either, Turn On? or Turn Off? and press .

Setting the lightshow timer

1. Press . Lightshow will show on the screen. Press .
2. Turn On/Off? will appear on the screen. Press  until Timer is displayed and press .
3. Press  or  to choose 5 min, 10 min, 15 min or Constant. When you've got to the option you want, press .
4. Saved will show on your screen and you'll hear the confirmation tone.

Talkback

Your Parent unit comes with one-way talkback, which lets you comfort and reassure your baby. When you speak into the Parent unit, your voice will come through on the Baby unit.

Setting the lightshow timer

1. Press and hold down the  button on the Parent unit to speak to your baby. While you're pressing the button, Talk will show on the display screen of the Parent unit.

Nightlight

You can set a comforting nightlight on the Baby unit. There are three brightness levels to choose from: low, medium and high. And you can set when you want the light to shine.

Switching nightlight on/off using the Baby unit

1. To turn on or off, press the  until you get to the setting you want.

TIP: When you're using talkback, you won't be able to hear your baby through the Parent unit until you release the  button.

Don't press the  button when the Baby unit and Parent unit are in the same room. You'll hear a high-pitched noise if you press the button when the units are within three metres of each other. When using talkback, hold the Parent unit about 30 centimetres in front of your mouth.

The Baby unit must be switched on for the nightlight to work, but need not be linked to the Parent unit. To adjust the brightness level or set the nightlight timer, take a look at page 18.

Switching nightlight on/off using the Parent unit

1. Press **Menu** and then **▼** until you get to **Nightlight**. Press **OK**.
2. Press **▲** or **▼** to display either **Turn On?** or **Turn Off?**, and press **OK** when you've got to the option you want.

Selecting the nightlight brightness level through the Parent unit

1. Press **Menu** and then **▼** until you see **Nightlight**. Press **OK**.
2. **Turn On/Off?** will show on the screen. Press the arrow buttons to scroll through to **Brightness** and then press **OK**.
3. Use the arrow buttons again to choose **Low**, **Medium** or **High**. When you've got to the option you want, press **OK**. **Saved** will show on your screen.

Setting the nightlight timer

1. Press **Menu** and use the arrow buttons to get to **Nightlight**. Press **OK**.
2. Press the arrow buttons to scroll through to **Timer**, then press **OK** again.

3. Press  or  to choose 5 min, 15 min, 60 min or Constant. When you've got to the option you want, press  to save it.

Playing music from the Baby unit

The Baby unit has 18 songs that can be played to gently soothe your baby, organised into four categories: Lullabies, Nature, Classical and White Noise.

You can select one song to play repeatedly or select the Play All option for a medley of the songs from your selected category. The songs can be set to play in a loop for 5, 10 or 15 minutes or you can leave them playing constantly.

Turning music on/off using the Baby unit

1. To turn the music on, press . The most recently chosen song will start playing at the time you last set on the Parent unit.
2. To turn the music back off, press the  button again.

The default music setting is to Play All of the lullaby songs for 5 minutes. When you switch the Baby unit on, there might be a small delay before it's ready to play music. Adjust the volume of the music using the  or  buttons on the Baby unit.

Turning music on/off using the Parent unit

1. Press **Menu** and then use the arrow buttons to get to **Music**. Press **OK**.
2. When **Play?** or **Stop?** is displayed, press **OK** to select the one you want.

Choosing a song to play using the Parent unit

1. Press **Menu** and then use the arrow buttons until you see **Music**. Press **OK**.
2. Press **▼** again until you see **Choose songs**. Press **OK**.
3. Use the arrow buttons to choose between the different song categories: **Lullabies**, **Nature**, **Classical** or **White Noise**. Press **OK** to select the one you want.
4. Use the arrow buttons to scroll through the song titles and press **OK** when you get to the option you want. Or you can select **Play All** to play all of the songs from your chosen category.

Changing a song currently playing using the Baby unit

1. Press and hold down the  button until the song changes. You'll need to turn the music on before choosing a song.

Setting a play time for music

1. Press  and then scroll through to Music.
Press .
2. Use the arrow buttons again to get to Timer.
Press .
3. Press  and  to choose how long you want the music to play. You can choose 5 min, 10 min, 15 min or Constant.
4. Press  when the option you want shows on the screen.

Feed timer

Your new baby monitor can give you handy reminders of when to feed your baby, using the feed timer. You can set a time through the Parent unit of the monitor.

Starting the feed timer countdown

1. Press **Menu** and use the arrow buttons to scroll through to **Feed Timer**.
2. Press **OK**. If your Feed Timer is already switched on, you'll see **Stop Timer**. If it isn't you'll see **Start Timer**. You'll then have two options.
 - a. To restart the timer if it's already switched on, press **OK** when you see **Stop Timer**. And then again when **Start Timer** appears on the display screen.
 - b. To start the timer if it's currently switched off, just press **OK** when you see **Start Timer** on the screen.
3. You'll be sent back to the idle screen, which will switch between showing **Timer on** and the length of time you have before you get your next feed alert.

Setting how often you want to get feed timer alerts

1. Press **Menu** and scroll through to **Feed Timer**, using the arrow buttons. Press **OK**.
2. Use the arrow buttons again to scroll through to **Duration** and press **OK**.
3. Your display screen will show what the timer is currently set at, with the default being **02h:00m**. Use the arrow buttons to change each digit to match the time you want to get reminders and press **OK**. When you return to the idle screen, the feed timer icon  will show on the display. You can set your timer from 1 minute to a maximum of 9 hours 59 minutes. If your Parent unit is switched off, the alert will be cancelled. It'll start playing the alert again when you turn the unit back on.

When you set Repeat On, the feed timer countdown will start again once the alert has sounded (if the alert isn't switched off). The default setting is for the timer to repeat.

Cancelling the feed timer countdown

1. Open the menu and then use the arrow buttons to get to **Feed Timer**. Press **OK**.
2. **Stop Timer** will show on the display screen. Press **OK**. **Timer Off** will show on the screen and the timer will disappear from the idle screen.

Switching the timer repeat option on or off

You can set your monitor to repeat feed time alerts for your chosen amount of time.

1. Press **Menu** and then use the arrow buttons to get to **Feed Timer**.
2. Press **OK**. Use the arrow buttons to get to **Timer Repeat**. Press **OK**.
3. Use the arrow buttons to choose **Repeat On** or **Repeat Off** and press **OK**.

Temperature monitor

Your new monitor comes with a sensor on the Baby unit, which lets you keep an eye on the temperature of your baby's room. If it gets too hot or too cold, the unit will tell you by sounding an alert tone and showing the temperature on the display screen. You can display the temperature in °C or °F.

Temperature	On the Parent unit
Below 16°C	Display shows the temperature and Too Cold
16 – 24°C	Display shows the temperature, no warnings will be displayed.
Over 24°C	Display shows the temperature and Too Hot.

Changing the temperature format

1. To switch between °C or °F, press **Menu** on the Parent unit and then use the arrow buttons to scroll through to **Setup**. Press **OK**.
2. When you see **Temperature**, press **OK** again.

Important

Use the temperature sensor only as a rough guide to the temperature of your baby's bedroom. What's displayed might depend on where you put the Baby unit in the room.

It shouldn't be used in place of medical devices, which may be more accurate.

Please note that your own temperature reference e.g. your central heating thermostat may not be as accurate, possibly due to tolerances and positioning of the thermostat in relation to your baby monitor.

Healthcare professionals advise that the ideal temperature for your baby's room is between 16°C and 24°C.

Using your SC530 Baby Monitor

Pre-set temperature alert range

The Baby unit comes with pre-set maximum and minimum temperatures. The UK Department of Health has recommended these temperatures to help reduce the risk of cot death.

If the temperature falls below or goes above the set range, an alert will sound on the Parent unit and the display will show Too Cold or Too Hot.

3. Use the arrow buttons to navigate to **TEMP Format** and press **OK**.
4. Press **▲** or **▼** to choose °C or °F and press **OK**.

Adjusting the monitor's temperature

If you find the temperature displayed on the Parent unit is slightly different on another thermometer or thermostat in your house, you can adjust the one on your monitor to match.

1. On your Parent unit, press **Menu**, then use the arrow buttons to get to **Setup**. Press **OK**.
2. When you see **Temperature**, press **OK**.
3. Press **▼** until **Adjust temp?** shows on the screen and press **OK**.
4. Then use the arrow buttons to add the temperature you want to change to and press **OK** to save.

Resetting the temperature on your monitor

If you've adjusted the temperature on your monitor, you can reset it through the Parent unit.

1. Go into the main menu and press **▼** until you get to **Setup**. Then press **OK**.

2. When you see **Temperature**, press **OK**.
3. Use the arrow buttons again to scroll through to **Reset Temp.** Press **OK**. **Saved** will be displayed and you'll hear a confirmation beep.

Backlight

You can select whether the backlight comes on when you get an alert on your Parent unit. The default setting is **On** and the screen will remain lit up for 15 seconds.

1. Press **Menu** and then use the arrow buttons to scroll through to **Setup**. Press **OK**.
2. Press **▼** to get to **Backlight** and press **OK**.
3. Use the **▲** and **▼** buttons to choose between **On w alerts** or **Off w alerts**, then press **OK** to save your choice.

List of tones

Your Audio Baby Monitor Secure 530 can produce various tones. They have the following meaning:

Tone	Meaning
Single tone	Confirmation (for example, saving a setting)
Fast double tone	Error (for example, trying to change the volume but already reached maximum)
Slow double tone	User alert (for example, time to feed your baby.)
Fast triple tone	System alert (for example, link lost or battery low)

You can turn off user alert tones by pressing any button on the Parent unit.
To switch off system alerts for five-minutes, press any button on the Parent unit.

Resetting the units

Resetting either units means they'll return to the settings they came with.

1. Make sure the unit you're resetting is switched on.
2. Parent unit – hold down  for 10 seconds or until the Parent unit displays the word `Reset`.
3. Baby unit – hold down  for 10 seconds or until the link light flashes, nightlight illuminates and you hear a confirmation beep.

You should only reset if you're having problems with your monitor.

Oricom Help

If you have any problems setting up or using your baby monitor, see if these common questions can help.

Why is the Parent unit beeping?

Take a look at page 28 for a list of the tones the Parent unit makes. It could be beeping for a few different reasons.

- The link has been lost between your units. Check that the Baby unit Link indicator is illuminated. If not, make sure the power adaptor is still connected.
- The feed timer has been set. See page 22.
- The temperature alert has been triggered. See pages 25-27.
- The batteries are low. See page 9.

If the Parent unit still beeps after this, try switching the Baby unit off at the mains power socket and removing the batteries for around 5 minutes. Make sure the Parent unit is clean by wiping with a damp cloth. If this doesn't work, call the Helpline for advice.

Why isn't the Link light coming on?

- Check that both units are switched on.
- Check the batteries in the Parent unit are installed properly and charged.
- Check that the mains power is plugged in and switched on at the Baby unit.
- Check that the units are within range of each other.

Why aren't the units linking?

- Make sure the units are within range of one another.
- Check if both units are turned on.

What do I do if the battery is showing as low on the Parent unit?

- Plug the unit into a wall power socket to charge it. It's best to leave the unit plugged in whenever you can, to make sure the batteries are always charged.
- To fully charge the batteries, the Parent unit should be on charge for about 16 hours if switched off and 24 hours if switched on.
- To speed things up, turn the Parent unit off when charging if it's not being used.

Why is my Parent unit very quiet?

- You may have set the volume too low. See 14.
- You may have switched Mute on. Take a look at 14.

Why is there a high-pitched noise coming out of one of the units?

- The units might be too close to each other.
- The volume setting might be too high.

Why isn't talkback working

- Check that the volume is loud enough at the Baby unit. See 15.
- Check the units are linked. Take a look at 11 for more on how to do that.

Still stuck?

Try 1300 889 785 or go to www.oricom.com.au

General information

Cleaning

To clean, wipe with a damp cloth.

Express Warranty (Australia)

This Express Warranty is provided by Oricom International Pty Ltd ABN 46 086 116 369, Unit 1, 4 Sovereign Place, South Windsor NSW 2756, herein after referred to as “Oricom”.

Oricom products come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Oricom warrants that the product is free from defects in materials or workmanship during the Express Warranty Period. This Express Warranty does not extend to any product from which the serial number has been removed or was purchased outside of Australia.

Nothing in this Express Warranty excludes, restricts or modifies any condition, warranty, guarantee, implied term, right or remedy pursuant to the Australian Consumer Law and which may not be so excluded, restricted or modified. For such conditions, terms, guarantees and warranties that cannot be excluded, restricted or modified, Oricom limits the remedies available to extent permitted in the relevant legislation.

The Express Warranty Period will be 3 years from the date of purchase of the product evidenced by your dated sales receipt. You are required to provide proof of purchase as a condition of receiving Express Warranty services.

You are entitled to a replacement product or repair of the product at our discretion according to the terms and conditions of this document if your product is found to be faulty within the Express Warranty Period.

This Express Warranty extends to the original purchaser only and is not transferable.

Products distributed by Oricom are manufactured using new materials or new and used materials equivalent to new in performance and reliability. Spare parts may be new or equivalent to new. Spare parts are warranted to be free from defects in material or workmanship for thirty (30) days or for the remainder of the Express Warranty Period of the Oricom branded product in which they are installed, whichever is longer.

During the Express Warranty Period, Oricom will where possible repair and if not replace the faulty product or part thereof. All component parts removed under this Express Warranty become the property of Oricom. In the unlikely event that your Oricom product has a recurring failure, Oricom may always, subject to the Competition and Consumer Act 2010, at its discretion, elect to provide you with a replacement product of its choosing that is at least equivalent to your product in performance.

General information

No change to the conditions of this Express Warranty is valid unless it is made in writing and signed by an authorised representative of Oricom. Oricom will not be liable under this Express Warranty, and to the extent permitted by law will not be liable for any defect, loss, damage or injury arising out of or in connection with a:

1. Failure by you to adhere to the warnings and follow the instructions set out in this user guide for the proper installation and use of the product;
2. Wilful misconduct or deliberate misuse by you of the product;
3. Any external cause beyond our control, including but not limited to power failure, lightning or over voltage; or
4. Modification to the product or services carried out on the product by anyone other than Oricom or Oricom's authorised service provider.

ORICOM CUSTOMER SUPPORT

Oricom have a trained and dedicated team of Customer Support Representatives, each with the knowledge and resources to assist in answering your questions quickly and efficiently.

Oricom Support - Australia

For all product enquiries, troubleshooting or to discuss the range of Oricom products, feel free to contact Oricom or visit our website for answers to frequently asked questions.

1300 889 785

Monday - Friday 8am – 6pm AEST

Email: support@oricom.com.au

www.oricom.com.au

Oricom Support - New Zealand

0800 674 266

Monday - Friday 11am - 7pm NZST

Email: support@oricom.co.nz

www.oricom.co.nz



Ref: 22052018