

# QUICK START GUIDE

oricom®

For a full explanation of all features and instructions, please refer to the User Guide (available for download from [www.oricom.com.au/support/](http://www.oricom.com.au/support/)).

## 1. Contents Inside Box

Model:  
OBH650P



Baby Unit  
(Camera)



Magnetic Mount



Parent Unit




Power Adaptors  
x 2




Quick Start  
Guide




Top Clamp



Bottom Clamp



Gooseneck




4-Poles with  
stand base

### **WARNING:**

Strangulation hazard. Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 1 metre away). Do not remove the tags from the AC Adaptors. Only use the AC Adaptors provided.

## 2. Setting up your Digital Video Baby Monitor

### A. Connecting the Power Supply for the Baby Unit

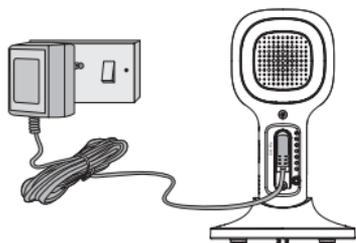


- Insert the DC plug of the power adaptor into the DC socket on the back of the Baby Unit.
- Connect the other end of the power adaptor to mains power.
- The baby unit will turn on and the power indicator lights in green colour.

#### **Note**

*Only use the supplied power adaptor (DC5V/1000mA).*

### B. (Optional) Fixing magnetic mount on the wall

- Mark the position of the screw holes on the wall.
- Install wall anchors (Not provided) suitable for the wall type, and mounting screws if required.
- Fasten the mounting screws (Not provided) on the wall.
- Position the cable behind the base as shown in the picture before attaching the base on the wall.

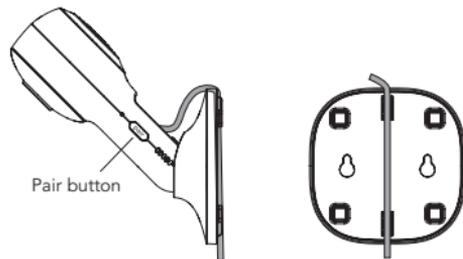

---

### C. Connecting the Power Supply of the Parent Unit.




- Connect the small plug of the power adaptor to the parent unit, and the other end to mains power. Only use the supplied adaptor (5VDC/1000mA).
- A rechargeable battery allows the parent unit to be used when not plugged into mains power. The battery provides up to 8 hours operation of the Parent Unit with the screen turned off. We recommend charging for at least 4 hours before first use, and charging the battery each time the Parent Unit indicates that the battery is low.
- Press and hold the POWER button  on the top of the Parent Unit to turn it ON.

---

#### D. Desktop Stand of the Parent Unit

- The parent unit comes with a desktop stand attached to the back.
- To place the parent unit on a desk, simply pull out the stand, as shown.

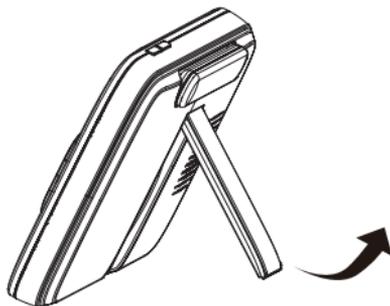

#### **NOTE**

*Place the parent unit on a flat, even surface.*

### 3. Basic operation of the keys

Parent unit		
	<b>ON/OFF button</b>	Press and hold to turn the Parent Unit ON/OFF.
	<b>Vol+ and Vol- buttons</b>	Press +/- to select volume level of the Parent Unit.
	<b>UP/DOWN buttons</b>	Press to tilt the camera up or down. Press to adjust menu setting when menu is active.
	<b>LEFT/RIGHT buttons</b>	Press to pan the camera left or right. Press to access menu options when menu is active.
	<b>MENU button</b>	Press to open menu options or exit the menu.
	<b>OK button</b>	Press to confirm a selection.
	<b>VIDEO button</b>	Press to turn the LCD screen ON/OFF. Audio will remain active while screen is off.
	<b>TALK button</b>	Press and hold to talk to your baby.
	<b>RESET pin pole</b>	Press and hold with a small pin to reset the unit.
Baby Unit		
	<b>PAIR button</b>	Press and hold to pair with the parent unit or Hubble Wi-Fi® Setup.

**IMPORTANT:** Download the full User Guide for complete instruction and button location, from the Oricom website: [oricom.com.au/support/](http://oricom.com.au/support/).

## 4. Setting up the Camera Unit for Wi-Fi® internet viewing

### A. Install HubbleClub for Partners.



- Scan the QR code with your smart device and download the HubbleClub for Partners from the App Store for iOS devices or from the Google Play™ Store for Android™ devices.
- Install the HubbleClub for Partners on your device.

### B. View on Compatible Smartphones and Tablets.



1. Open the HubbleClub for Partners on your compatible smartphone or tablet.
2. Follow the in-app instructions to create your Hubble account and connect to your device.

Please take note of the following minimum system requirements:

*Smartphones/Tablets: iOS 12.0, Android™ 8.0*

Wi-Fi® requirements:

*At least 0.6 Mbps upload bandwidth per Smart Monitoring Companion, test your Internet speed at: <http://www.speedtest.net/>*

## 5. Installation of Cot mount


To provide the best possible viewing experience, a cot mount with cable management is included. This cot mount has been designed to mount directly to most cots. Assemble and install the cot mount using the following steps. (To view an installation video visit [oricom.com.au](http://oricom.com.au).)

- Join the 4 poles and the support base together as shown in Fig. 1a and 1b.

Fig. 1a



Fig. 1b



### **IMPORTANT:**

*Each pole is connected with power cord inside. Take care not to damage the power cords when removing the poles from the box and during installation.*

- Fasten the top clamp either vertically on the upper rail (Fig. 2a) or horizontally on the slats (Fig. 2b).

Fig. 2a



Fig. 2b



- Unscrew the knob, then open the top and bottom clamps, and install them onto the supporting pole. (Fig. 3a)

- Place the bottom clamp below and securely against the lower rail, the stand base is spring loaded. Push the lower pole slightly downward before closing the bottom clamp and securing with knob. This is to allow the lower clamp to exert clamping pressure on the lower rail. (Fig. 3b)

Fig. 3a



Fig. 3b



- Position the top clamp to either the top rail or slats. Close and secure the top clamp with the knob Fig. 4a. Ensure the pole stands straight, is securely mounted, and the clamps are tight. (Fig. 4a, 4b). The pole should not move when moderate pressure is applied in any direction.

Fig. 4a



Fig. 4b



**WARNING - Choking Hazard:**

*May contain Small Parts. Parents must exercise caution and keep children under 5 away from the installation.*

- Install the flexible gooseneck extension into the top pole. The gooseneck will click and lock into place when properly inserted. (Fig. 5a)
- Holding the power adaptor plug up, insert the camera unit into the housing at the end of the flexible gooseneck extension, make sure the camera is magnetically secured in the gooseneck. Connect the power adaptor plug to the camera unit power socket. (Fig. 5b, 5c)



Fig. 5a



Fig. 5b



Fig. 5c

- Insert the DC plug into the power socket at the bottom of the Cot mount and connect the power adaptor to mains power. (Fig. 6a)
- Power on the camera unit to view the image on the parent unit. Adjust the flexible gooseneck and select the best zoom (1x, 1.2x, 1.5x or 2x) on the parent unit for optimal viewing of the cot. (Fig. 6b)



Fig. 6a



Fig. 6b

---

## 6. Important Safety Information

- Your Oricom baby monitor is designed to be an aid and should not be used as a substitute for responsible and proper adult supervision of a child.
- The baby monitor has been designed to provide some added reassurance in the form of video/sound transmission for those times when you are not in the same room as your baby provided you always stay within hearing range of the baby monitor during use.
- Your baby monitor is not a medical device, nor a device to prevent cases of Sudden Infant Death Syndrome (SIDS) or "cot death", and you should not rely on it for your baby's wellbeing. It is important that you regularly check on your baby personally.
- Make sure the baby unit, parent unit and mains adaptor cables are kept out of reach of your baby and other young children at all times, as far away from the baby as practical.
- Never place the baby unit or parent unit inside your baby's cot, bed or playpen.
- Never cover the parent or baby units with clothes, towels or blankets or any other item.
- Never use or place your parent or baby unit in or near moisture or water (e.g. near bath or pool). Immersing in water could cause electric shock and even death.
- The installation location plays an important role in ensuring proper operation. Therefore, maintain a distance of at least one metre from other electronic equipment, such as microwave ovens or Wi-Fi devices, otherwise they could cause interference.
- During continual use the baby unit power adaptors may become warm to the touch. This is normal and should not be a concern.
- This product is not a toy, do not allow children to play with this monitor.
- This device is designed for indoor use only.

---

## 7. General Information

### Express Warranty (Australia)

This Express Warranty is provided by Oricom International Pty Ltd ABN 46 086 116 369, Unit 1, 4 Sovereign Place, South Windsor NSW 2756, herein after referred to as "Oricom".

Oricom warrants that the product is free from defects in materials or workmanship during the Express Warranty Period. This Express Warranty does not extend to any product from which the serial number has been removed or was purchased outside of Australia.

The benefits of this Express Warranty are in addition to other rights and remedies you may have under the Australian Consumer Law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In the event of a minor failure, Oricom reserves the right to choose to repair or replace the product.

The Express Warranty Period will be a period of 24 months beginning on the date of purchase of the product evidenced by your dated sales receipt. You are required to provide proof of purchase as a condition of receiving Express Warranty services.

You are entitled to a replacement product or repair of the product at our discretion according to the terms and conditions of this document if your product is found to be faulty within the Express Warranty Period. This Express Warranty extends to the original purchaser only and is not transferable.

Products distributed by Oricom are manufactured using new materials or new and used materials equivalent to new in performance and reliability. Spare parts may be new or equivalent to new. Spare parts are warranted to be free from defects in material or workmanship for thirty (30) days or for the remainder of the Express Warranty Period of the Oricom branded product in which they are installed,

---

whichever is longer. During the Express Warranty Period, Oricom will where possible repair and if not replace the faulty product or part thereof. All component parts removed under this Express Warranty become the property of Oricom. In the unlikely event that your Oricom product has a recurring failure, Oricom may always, subject to the Competition and Consumer Act 2010, at its discretion, elect to provide you with a replacement product of its choosing that is at least equivalent to your product in performance.

No change to the conditions of this Express Warranty is valid unless it is made in writing and signed by an authorised representative of Oricom.

Oricom will not be liable under this Express Warranty, and to the extent permitted by law will not be liable for any defect, loss, damage or injury arising out of or in connection with a:

1. Failure by you to adhere to the warnings and follow the instructions set out in this user guide for the proper installation and use of the product;
2. Willful misconduct or deliberate misuse by you of the product;
3. Any external cause beyond our control, including but not limited to power failure, lightning or over voltage; or
4. Modification to the product or services carried out on the product by anyone other than Oricom or Oricom's authorised service provider.

### **How to make a claim under your Express Warranty in Australia**

Oricom has a simple warranty process for you to follow:

- Please call or email our Customer Support Team, 02 4574 8888 or [support@oricom.com.au](mailto:support@oricom.com.au).
- A Customer Support Team member will verify after troubleshooting with you if your product qualifies under warranty. If so, they will give you a Product Return Authorisation number.
- We will then email a Return Authorisation form and a Repair Notice (if necessary), together with

---

instructions on how to return the product for warranty service.

Please note that if a Customer Support Team member advises that your product does not qualify for return, this warranty does not apply to your product. Products that are authorised to be returned to Oricom in Australia must include all of the following:

- A completed Return Authorisation form
- A copy of your Proof of Purchase (please keep your original copy)
- The faulty product, including all accessories.

Send the approved returns to:

Oricom International Pty Ltd  
Locked Bag 658  
South Windsor NSW 2756 Australia

Please note that this Express Warranty excludes expenses incurred by you in returning any faulty product to us. You must arrange and pay any expenses incurred (including postage, delivery, freight, transportation or insurance of the product) to return the faulty product to us, however, we will arrange delivery of the repaired or replaced faulty product to you.

### **Important Information - Repair Notice**

Please be aware that the repair of your products may result in the loss of any user-generated data (such as stored telephone numbers, text messages and contact information). Please ensure that you have made a copy of any data saved on your product before sending for repair. Please also be aware

---

that products presented for repair may be replaced by refurbished products or parts of the same type rather than being repaired.

### **Oricom Customer Support**

Oricom have a trained and dedicated team of Customer Support Representatives, each with the knowledge and resources to assist in answering your questions quickly and efficiently.

#### ***Oricom Support - Australia***

For all product enquiries, troubleshooting or to discuss the range of Oricom products, feel free to contact Oricom or visit our website for answers to frequently asked questions.

(02) 4574 8888 / Monday - Friday 8am – 6pm AEST

Email: [support@oricom.com.au](mailto:support@oricom.com.au) / [www.oricom.com.au](http://www.oricom.com.au)

#### ***Oricom Support - New Zealand***

0800 674 266 / Monday - Friday 10am - 8pm NZST

Email: [support@oricom.co.nz](mailto:support@oricom.co.nz)

**oricom.**

All rights reserved

