

## **Contact Details for Oricom Support and Express Warranty Claims in Australia**

Oricom International Pty Ltd  
Locked Bag 658  
South Windsor, NSW 2756  
Australia

Email: [support@oricom.com.au](mailto:support@oricom.com.au)  
Phone: 1300 889 785 or (02) 4574 8888  
(Monday to Friday 8am to 6pm AEST)  
Web: [www.oricom.com.au](http://www.oricom.com.au)  
Fax: (02) 4574 8898

## **Contact Details for Oricom Support and Express Warranty Claims in New Zealand**

Email: [support@oricom.co.nz](mailto:support@oricom.co.nz)  
Phone: 0800 674 266  
(Monday to Friday 10am to 8pm NZST)  
Web: [www.oricom.co.nz](http://www.oricom.co.nz)



Ref: 13052014



## Operating Instructions

UHF2180 80 Channel UHF  
2-way 8 Citizen Band Radio

Keep this user guide for future reference. Always retain your proof of purchase in case of warranty service and register your product on line at: AUSTRALIA: [www.oricom.com.au](http://www.oricom.com.au)



## **Need Help?**

If you need assistance setting up or using your Oricom product now or in the future, call Oricom Support.

Australia            1300 889 785 or (02) 4574 8888  
[www.oricom.com.au](http://www.oricom.com.au)  
Mon-Fri 8am – 6pm AEST

New Zealand        0800 674 266  
[www.oricom.co.nz](http://www.oricom.co.nz)  
Mon-Fri 10am – 8pm NZST

Safety Information and Warnings .....	4
Getting Started .....	9
Oricom UHF2180 instructions .....	12
Operation.....	13
UHF channels and frequencies.....	22
Customer Support.....	25
Express Warranty .....	26

**Why has the ACMA increased the number of available UHF CB channels?**

To provide additional channel capacity within the UHF CB Band the ACMA will over the next 5 years change the majority of the current wideband 80 channel use to narrowband 80 channel use. During this time wideband channel use will be gradually phased out as users upgrade their existing radio's. This means that the new Oricom narrowband radio you have purchased will have more channels than older wideband radios. Some of these channels are locked and cannot be used, (see the attached channel chart for more information).

**When did this take place?**

Early in 2011 new AS/NZS Standards came into effect allowing operators to use additional narrowband channels and also use narrowband transmissions on some current wideband channels. This increased the number of channels up to 80, 75 of which are useable voice channels.

**What issues may users experience during the transition phase?**

When a new narrowband radio receives a transmission from an older wideband radio the speech may sound loud and distorted – simply adjust your radio volume for the best listening performance. When an older wideband radio receives a signal from a new narrowband radio the speech may sound quieter - simply adjust your radio volume for best listening performance. When operating a narrowband radio or Channel 41 - 80 interference is possible from wideband radios transmitting on high power or on adjacent frequency. The issues described above **are not a fault of the radio** but a consequence of mixed use of wideband and narrowband radios.

It is expected that as older wideband radios are removed from service that this issue will be resolved. Most radios in use will be narrowband eliminating this issue.

**This information is current at time of printing. For further up to date information please visit [www.acma.gov.au](http://www.acma.gov.au)**

Oricom Connecting you now.



This unit complies with all relevant Australian and New Zealand approval requirements AS/NZS 4365: 2011 including radio communications (Electromagnetic Radiation Human Exposure) standard 2003.

### Safety Information and Warnings



WARNING

#### **Information on Safe Operation**

Read This Information Before Using Your Oricom Radio.

The operation of your UHF radio in Australia and New Zealand is subject to conditions in the following licenses:

In Australia the ACMA Radio communications (Citizen Band Radio Stations) and in New Zealand by MED the General User Radio License for Citizen Band Radio.

#### **Radio Antenna**

Do not use any radio that has a damaged antenna. If a damaged antenna comes in contact with the skin, a minor burn may result.

Unauthorized antennas, modifications, or attachments could damage the radio and violate compliance. Do NOT change or modify the antenna.

Do NOT hold the antenna when the radio is "IN USE." Holding the antenna reduces range and may cause bodily harm.

#### **Safety and general use whilst in a vehicle**

Check the State and Federal laws and regulations regarding the use of two way radios in the area where you drive, and always obey them.

#### **For Vehicles fitted with Air Bags**

Do not place your radio in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a radio is placed in the air bag deployment area and the air bag inflates, the radio may be propelled with great force and cause serious injury to the occupants of the vehicle.

#### **Read all these Safety Warnings before you install or charge the rechargeable batteries.**

- Do not dispose of the rechargeable batteries in a fire as they may explode.
- Use only the rechargeable batteries supplied with the product. Improper use, or use of unapproved batteries may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty.



### WARNING

- Exercise extreme care when handling batteries in order not to short the batteries with conducting materials such as rings, bracelets and keys. The batteries or conduction material may overheat explode and or cause burns.
- Never replace or charge the batteries in a potentially explosive atmosphere (such as where gas is leaking) as contact sparking may occur while installing or removing the batteries cause a fire or an explosion.
- Do not modify, cut, disassemble, crush, bend, puncture, heat or damage the batteries.
- If the batteries leak, do not let the battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, and seek medical assistance. Released electrolyte is corrosive and may cause damage to the eyes and skin. It may be toxic if swallowed.
- Do not immerse or expose the batteries to water or other liquids.
- If you believe the batteries are damaged, remove product from the charger and stop using the product. Contact Oricom for assistance.
- Never use damaged batteries as they may explode.
- Remove batteries when they are no longer able to hold a charge and when the equipment will not be used for an extended period of time. Dispose of the batteries according to local regulations, never in your household rubbish.
- Risk of explosion if battery is replaced by an incorrect type. Only use the AC power adaptor supplied with this product. Using any other AC adaptor will invalidate any approvals and warranty and could be potentially dangerous.
- Do not attempt to charge non-rechargeable Alkaline batteries.



## WARNING

### **Potentially Explosive Atmospheres**

Turn your radio OFF when in any area with a potentially explosive atmosphere. Sparks in such areas could cause an explosion or fire resulting in injury or even death.

**NOTE:** Areas with potentially explosive atmospheres are often, but not always clearly marked. They include fueling areas such as below deck on boats; fuel or chemical transfer or storage facilities; areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

### **Blasting Caps and Areas**

To avoid possible interference with blasting operations, turn your radio OFF near electrical blasting caps or in a “blasting area” or in areas posted: “Turn off the two way radio.” Obey all signs and instructions.

### **Exposure to Radio Frequency Energy**

Your Oricom two-way radio complies with Australian Communications Authority Radio communications (Electromagnetic Radiation-Human Exposure) Standard, 2003.

To assure optimal radio performance and make sure human exposure to radio frequency electromagnetic energy is within the guidelines set out in the above standards always adhere to the following procedures.

### **Transmit and Receive Procedure**

Your two-way radio contains a transmitter and a receiver. To control your exposure and ensure compliance with the general population/uncontrolled environment exposure limits, always adhere to the following procedure:

- Transmit no more than 50% of the time.
- To receive calls, release the PTT button.
- To transmit (talk), press the Push to Talk (PTT) button.

Transmitting 50% of the time, or less, is important because the radio generates measurable RF energy exposure only when transmitting (in terms of measuring standards compliance).

Always hold the radio approximately 5cm in front of your mouth with the antenna pointing away from your head.



### WARNING

#### **Radio Operation and EME Exposure**

Unauthorized antennas, modifications, or attachments could damage the radio and violate compliance.

Do NOT hold the antenna when the radio is "IN USE." Holding the antenna reduces the effective range.

Do not use the radio if the antenna is damaged. If a damaged antenna makes contact with your skin, a minor burn can result.

If you wear a radio on your body when transmitting, always fit the radio on the belt clip (supplied). Always ensure the radio and its antenna are at least 5cm from your body when transmitting.

#### **Electromagnetic Interference/Compatibility**

Nearly every electronic device is susceptible to electromagnetic interference (EMI). To avoid the possibility of electromagnetic interference and/or compatibility conflicts, turn off your radio in any location where posted notices instruct you to do so such as health care facilities.

#### **Aircraft**

When instructed to do so, turn off your radio when onboard an aircraft. Any use of a radio must be in accordance with applicable regulations per airline crew instructions.





## WARNING

### **Medical Devices - Pacemakers**

The Advanced Medical Technology Association recommends that a minimum separation of 6 inches (15cm) be maintained between a handheld wireless radio and a pacemaker. These recommendations are consistent with the independent research by and recommendations of the U.S. Food and Drug Administration.

People with pacemakers should:

- ALWAYS keep the radio more than 15cm from their pacemaker when the radio is turned ON.
- Not carry the radio in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn the radio OFF immediately if there is any reason to suspect that interference is taking place.

### **Medical Devices - Hearing Aids**

Some radios may interfere with some hearing aids.

In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

### **General warnings**

Never use your radio outdoors during a thunderstorm.

Keep the radio out of reach of babies and young children.

## Installation

### Removing the Belt Clip

Pull the Belt Clip latch forward (away from the unit)

While pulling the Belt Clip latch, push up the Belt Clip as shown in Figure 1.

### Installing the Belt Clip

Slide the Belt clip into the slot as shown in Figure 2.

A “click” indicates the Belt clip is locked into position.

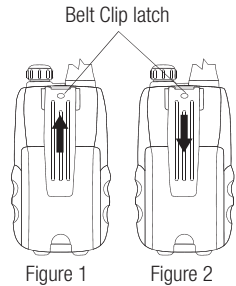


Figure 1

Figure 2

### Installing the Batteries

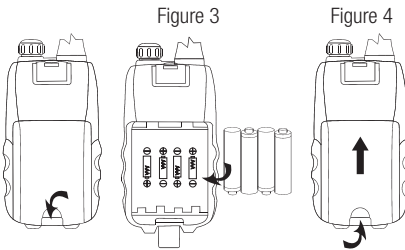


Figure 3

Figure 4

*Caution: Observe the proper battery polarity orientation when installing batteries. Incorrect positioning can damage both the batteries and the unit.*

- Slide down the Battery Compartment Cover.
- Install the rechargeable batteries (supplied) by following the orientation as shown in Figure 3.
- Replace the Battery Compartment Cover. See Figure 4.

**NOTE:** You can use Alkaline batteries if required, however **YOU MUST NOT PLACE THE RADIOS ON THE CHARGER WITH ALKALINE BATTERIES INSERTED** as this will damage the radio.

### Charging the batteries

Insert the small plug on the end of the mains adaptor into the Microphone/Earphone/Charge Jack located on the right hand side of the radio.

Plug the mains adaptor into a power point.

It takes about 10 hours to fully charge the batteries if they are completely run down. **New batteries take up to 14 hours to fully charged.**Battery meter

The battery meter is located in the left corner of the LCD screen. It appears like a battery with three bars inside. These indicate the amount of power available. When the battery level reaches its minimum level, the unit will emit two beep tones and automatically it will power off.

Your UHF2180 can detect the battery charge in 4 levels;



Battery charge at high level.



Battery charge at medium level.



Battery charge at low level. At this level, the radio will emit a “beep” sound for every 10 seconds in standby mode.



**TIP: At this stage, you need to recharge the unit at once, otherwise the battery will run down totally.**

Battery charge at very low level. When the battery level reaches its minimum level, the unit will emit two beep tones and automatically turn off the power.

**Important: You need to charge the unit for 10-14 hours.**

**CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.**

## Battery life

Your radio has a built in power saver to make the batteries last longer. But when you are not using the units, turn them OFF to conserve battery power.

For in vehicle charging, the SM5100 accessory kit is available which contains 2 car chargers and 2 shoulder speaker mics.

These can be purchased from your re seller or online at [www.oricom.com.au](http://www.oricom.com.au)

## Transmitting range

The talk range depends on the environment and terrain. The radio can reach (up to about 10km) in wide open spaces, without obstructions such as hills or buildings. Don't try to use two radio units which are less than 1.5m (5 feet) apart. Otherwise, you may experience interference.

Talk range depends on the terrain. It will be affected by concrete structures, heavy foliage and by operating radios indoors or in vehicles.



Optimal Range  
Outdoors  
Flat, open areas



Medium Range  
Outdoors  
Buildings or trees  
Also near residential  
buildings



Minimal Range  
Outdoors  
Dense foliage or  
mountains. Also inside  
some buildings

## Oricom UHF2180 instructions



### LCD Screen



**88** Channel Number. Changes from 1 to 80 as selected by the user.

**88** CTCSS Code. Changes from 1 to 38 as selected by the user.

**[Battery Icon]** Displays the Battery change level. When the bars are reduced, the battery needs to recharge.

**TX** Displayed when transmitting a signal.

**RX** Displayed when receiving a signal.

**DCM** Displayed when the Dual Watch function is turned ON.

**DCS** Displayed when the Digital Code System is turned On.

**VOX** Displayed when the VOX feature is enabled.

**SCAN** Displayed when the radio is doing scan.

**RPT** Displayed when the repeater function is activated.

**▲** Displayed when the call signal is ON.

**(V)** Displayed when the vibrator function is activated.

**🔒** Displayed when the Key Lock feature is activated.

## Operation

### Turning the Unit ON/OFF



#### To Turn ON;

- a. Rotate the **POWER/VOL** button clockwise until the LCD screen turns ON and displays the current channel.

#### To switch OFF;

- b. Rotate the **POWER/VOL** button counter clockwise until the LCD screen turns blank.

*Note: Every time you rotate the Power/Vol button to turn ON, the volume will also open. The volume level will increase or decrease by rotating the Power/Vol button.*

### Changing Channels

The UHF2180 has 80 available channels, to communicate with other radio's, it must have your radio tuned to the same channel.



- a. Press the **MENU** button once, the current channel number flashes on the LCD Screen.
- b. Press the **UP** or **DOWN** button to select the desired channel. The channel changes from 1 to 80, or vice versa.
- c. Press the **PTT** button to confirm the channel setting.

These are paired with higher channels as output/input (1/31, 2/32, etc.)

Check for local repeater activity before using these channels in Simplex mode to avoid interference. Channels 9 and above are the best choices for general use in Simplex mode.

You can find more information about channels and frequencies by visiting the Web site <http://www.acma.gov.au>

*Note: Refer to the "Channel Table" section of this Owner's Manual for detailed frequency listing.*

### Setting the CTCSS sub-channel

Each channel has 38 sub-channels to let you set up group of users within the same channel for more private communication. If you have set the sub-channel, you can only communicate with other radio users tuned to the same channel and sub-channel.

**To turn the sub-channel function off**, simply set the sub-channel to 0 (zero). You can then communicate with other radio's setting to the same channel who also turns off the sub-channel operation (or whose unit does not have the sub-channel feature).



- Press the **MENU** button twice, the current **CTCSS** sub-channel number flashes on the LCD screen.
- Press the **UP** or **DOWN** button to select one of the 38 CTCSS sub-channels.
- Press the **PTT** button to confirm the **CTCSS** sub-channel setting.

### SETTING THE DCS ADVANCED DIGITAL CODE.

Each channel also has 83 digital codes to let you set a group of users for more secured private communication.



- Press the **MENU** button 3 times. **DCS** code is blinking on the LCD screen.
- Press the **UP** or **DOWN** button to select the desired DCS code.
- Press the **PTT** button to confirm the **DCS** channel setting.

### Transmitting and Receiving



**The UHF2180** transmission is SIMPLEX "one way-at-a-time." While you are speaking, you can not receive a transmission.



**The UHF2180** is an open-license band. Always identify yourself when transmitting on the same channel.

**IMPORTANT:** Before transmitting on a UHF channel listen to ensure it is not already in use.

## Transmitting (sending a speech)

The unit is continuously in the Receive mode when the unit is turned ON and not transmitting. When a signal is received on the current channel, “**RX**” icon will be displayed on the LCD screen and the receiver LED will light up.



- Press and hold the PTT (push to talk) button to transmit your voice. “**TX**” icon will be displayed on the LCD Screen.
- Hold the unit in a vertical position with the MIC (Microphone) 5 cm away from the mouth. While holding the **PTT** button, speak into the **MIC** (microphone) in a normal tone of voice.
- Release the **PTT** button when you have finished transmitting.

## Monitor

You can use the Monitor feature to check for weak signals on the current channel.



- Press and hold the **MENU** and **DOWN** buttons at the same time. “**RX**” icon will be displayed on the LCD screen. Your radio will pick up signals on the current channel, including background noise.
- Press the **MENU** button to stop the channel monitoring.

## Setting the PTT (Voice Activated) Sensitivity

In VOX mode, the radio will transmit a signal only when it is activated by your voice or other sounds around you. The unit will transmit further for 2 seconds even if you stop talking.

The level of VOX sensitivity is shown by a number on the LCD Screen. At the highest level, the units will pickup softer noise (including background noise); at the lowest level, it will pick up only quite loud noise.





- a. Press the **MENU** button 4 times, “**VOX**” icon will be displayed and “**OFF**” flashes on the LCD screen.
- b. Press the **UP** button to set the VOX sensitivity into maximum level (the maximum level is “3 ”.) To deactivate the VOX function, press the **DOWN** button until “OF” appears on the LCD Screen.
- c. Press the **PTT** button to confirm your setting. “**VOX**” will steadily appear on the LCD Screen as long as the VOX feature is activated.

VOX operation is not recommended if the radio will be used in a noisy or windy environment.

A PTT headset is also available under part number KESP-300-0 from your re-seller or at [www.oricom.com.au](http://www.oricom.com.au)

### Activating the Auto Channel Scan

Channel scan perform searches for active signals in an endless loop for all 80 channels, 38 CTCSS codes and all 83 DCS codes.



- a. Press the **MENU** button 5 times, “**SCAN**” icon will display on LCD screen.
- b. Press the **UP** or **DOWN** button to begin scanning channels when an active signal is detected, channel scan pauses on the active channel.
- c. Press the **MENU** button six times, CTCSS flashes on the LCD screen press the **UP** or **DOWN** button to begin scanning the CTCSS from 1-38.
- d. Press the **MENU** button seven times, DCS flashes on the LCD screen. Press the **UP** or **DOWN** button to begin scanning DCS code 1-83.
- e. Press the **PTT** button to confirm your setting.

### Vibrator and Call alert

Your radio can alert you to incoming signal by emitting an audible call tone and vibration signal.

## Call-Ring tone



You can send a Call-ring tone to other radio users to give an alert that you want to communicate with them.

### Press the **CALL** button

You will hear a ring tone for about two seconds; “**TX**” icon appears on the LCD screen. Any other units within the transmitting range and tuned to the same channel and sub-channel (if applicable) will hear the Call-ring tone.

## Selecting a Call- Ring tone

Your UHF2180 is equipped with 15 different types of Call-Ring tones.



- Press the **MENU** button 8 times, the “**C 1**” icon will display and flash on the LCD Screen.
- Press the **UP** or **DOWN** button to select the desired Call-ring tone. A respective Call- Ring tone sound will be played when changing from one tone to another.
- Press the **PTT** button to confirm your setting.

## Activating the Vibrator mode



- Press the **MENU** button 9 times; “**3**” flashes on the LCD Screen.
- Press the **UP** or **DOWN** button to activate the vibrator function.
- Press the **PTT** button to confirm your setting.

*Note: Vibrator and Call tone can be activated at the same.*

## Setting the Roger Beep

The Roger beep is a tone which is automatically transmitted whenever the PTT button is released. This alerts the receiving party to inform you that you have intentionally ended the transmission, and you are now in receive mode.



- a. Press the **MENU** button 10 times, the “**ON**” icon will flash on the LCD Screen.
- b. Press the **UP** or **DOWN** button to select the Roger beep On/Off.
- c. Press the **PTT** button to confirm your setting.

## Setting the Key Tone ON or OFF

This feature allows your radio unit to emit a confirmation tone after pressing each button.



- a. Press the **MENU** button 11 times, the “**ON**” icon is flashing on the LCD Screen.
- b. Press the **UP** or **DOWN** button to select Key tone On/Off.
- c. Press the **PTT** button to confirm your setting.

## Setting the Dual Watch Mode

Your radio is capable of monitoring two channels, the current and another (dual watch) channel. If the unit detects a signal on either channel, it will stop and receive the signal.



- a. Press the **MENU** button 12 times, “**DCM**” icon will be displayed while “**OF**” flashes on the LCD Screen.
- b. Press the **UP** or **DOWN** button to select the Dual Watch channel (1-80, except the current channel).
- c. Continue pressing the **MENU** button to change the CTCSS code.
- d. Press the **UP** or **DOWN** button to select the desired CTCSS code (1-38)

- e. Continue pressing the MENU button to change the DCS code.
- f. Press the UP or DOWN button to select the desired DCS code (1-83)
- g. Press the PTT button to confirm your setting.

## Duplex operation via Repeaters

This feature allows to use local repeater stations that are designed to automatically re-transmit your broadcast over a large area thus giving you increased range.

Repeaters stations are privately operated radio systems installed throughout Australia.

For example, if you wish to access a repeater station in your area which operates on channel 2 you only need to set the Duplex access on this Channel.


So, if you are in the range of a local repeater which transmits on channel 2, after setting your radio to allow access of the repeater on that channel, you will select channel 2 as normal, but during transmit operation your radio will automatically transmit to the repeater on channel 32.

Turning on/off Duplex on channels

- a. Select the required channel to suit the repeater station you wish to access (Channels 1 – 8 and 41 – 48)
- b. Press the Menu button twice, "RPT" icon will display
- c. Press the UP or DOWN button to set the Duplex function to On or Off.
- d. Press the PTT button to confirm your setting.
- e. The RPT icon will display to indicate that Duplex is set on that channel.

Receive Channel	1	2	3	4	5*	6	7	8
Transmit channel	31	32	33	34	35*	36	37	38
Receive Channel	41	42	43	44	45	46	47	48
Transmit channel	71	72	73	74	75	76	77	78

\* Channel 5 is emergency channel only

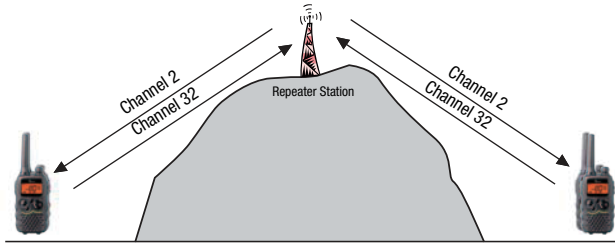

## Setting the Repeater function



- Select your repeater channel to suit the repeater station you wish to access (Channels 1 – 8 and 41 – 48).
- Press the Menu button 13 times, “RPT” icon will be displayed and flashing on the LCD screen.
- Press the UP or DOWN button to set the Repeat function to On or Off.
- Press the PTT button to confirm your setting.

## Important

- Speech transmissions are not allowed on channel 22 and 23 (Receive only)
- CTCSS and Call ring tone calling is disabled on channel 5 and 35.
- Call ring tone calling is only allowed to operate for a maximum of 3 seconds and it is only possible to operate once in any 60 second period.



## Auxiliary Features

### Key Lock



The Key Lock feature allows the user to disable the **UP**, **DOWN** and **MENU** buttons so that the UHF2180 settings could not be changed accidentally.



- a. To activate the key Lock feature, press and hold the **MENU** button until key lock “” icon appears on the LCD Screen.
- b. To deactivate the key Lock feature, press and hold the **MENU** button until key lock “” icon disappears on the LCD Screen.

Note: The **PTT**, and **CALL** buttons will remain functional even if the Key Lock feature is activated.

### LCD Screen Back Light



Every time the Power/Vol button is activated (except PTT and CALL button), the LCD Screen back light will illuminate for 5 seconds.

### Microphone/Earphone/Charge Jack



Your radio is equipped with an auxiliary microphone, earphone, and charge jack located at the opposite side of the PTT button.

## Channel Frequency Table

### Radiocommunications (Citizen Band Radio Stations) Class Licence 2002

No licence is required to own or operate this radio in Australia and New Zealand. The Radiocommunications (Citizen Band Radio Stations) Class Licence 2002 contains the technical parameters, operating requirements, conditions of licence and relevant standards for Citizen Band (CB) radios. CB radios must comply with the class licence for their use to be authorised under the class licence.

## UHF channels and frequencies

IMPORTANT NOTE: The operation of your UHF radio in Australia and New Zealand is subject to conditions in the following licenses:

In Australia the ACMA Radio communications (Citizen Band Radio Stations) and in New Zealand by MED the General User Radio License for Citizen Band Radio.

Channel		Tx	Rx	Channel		Tx	Rx
		Freq	Freq			Freq	Freq
		MHZ	MHz			MHZ	MHZ
01 *		476.4250	476.4250	21		476.9250	476.9250
	41 *	-	476.4375		61 ‡	-	-
02 *		476.4500	476.4500	22 †		476.9500	476.9500
	42 *	-	476.4625		62 ‡	-	-
03 *		476.4750	476.4750	23 †		476.9750	476.9750
	43 *	-	476.4875		63 ‡	-	-
04 *		476.5000	476.5000	24		477.0000	477.0000
	44 *	-	476.5125		64	477.0125	477.0125
05 *		476.5250	476.5250	25		477.0250	477.0250
	45 *	-	476.5375		65	477.0375	477.0375
06 *		476.5500	476.5500	26		477.0500	477.0500
	46 *	-	476.5625		66	477.0625	477.0625
07 *		476.5750	476.5750	27		477.0750	477.0750
	47 *	-	476.5875		67	477.0875	477.0875
08 *		476.6000	476.6000	28		477.1000	477.1000
	48 *	-	476.6125		68	477.1125	477.1125
9		476.6250	476.6250	29		477.1250	477.1250
	49	476.6375	476.6375		69	477.1375	477.1375

## UHF channels and frequencies

10		476.6500	476.6500	30		477.1500	477.1500
	50	476.6625	476.6625		70	477.1625	477.1625
11		476.6750	476.6750	31*		477.1750	477.1750
	51	476.6875	476.6875		71*	477.1875	-
12		476.7000	476.7000	32*		477.2000	477.2000
	52	476.7125	476.7125		72*	477.2125	-
13		476.7250	476.7250	33*		477.2250	477.2250
	53	476.7375	476.7375		73*	477.2375	-
14		476.7500	476.7500	34*		477.2500	477.2500
	54	476.7625	476.7625		74*	477.2625	-
15		476.7750	476.7750	35*		477.2750	477.2750
	55	476.7875	476.7875		75*	477.2875	-
16		476.8000	476.8000	36*		477.3000	477.3000
	56	476.8125	476.8125		76*	477.3125	-
17		476.8250	476.8250	37*		477.3250	477.3250
	57	476.8375	476.8375		77*	477.3375	-
18		476.8500	476.8500	38*		477.3500	477.3500
	58	476.8625	476.8625		78*	477.3625	-
19		476.8750	476.8750	39		477.3750	477.3750
	59	476.8875	476.8875		79	477.3875	477.3875
20		476.9000	476.9000	40		477.4000	477.4000
	60	476.9125	476.9125		80	477.4125	477.4125

\* The primary use for these channels is repeater operation using 750 kHz offset. Channels 1-8 and 41-48 inclusive are used for mobile reception and channels 31-38 and 71-78 for mobile transmission. In addition, any designated repeater channel may be used for simplex operation in areas where it is not used for repeater operation.

† Speech telephony shall be inhibited on these channels.

‡ At the time of production Channels 61, 62 and 63 are guard channels and are not available for use.

Channel 5 and 35 (paired for Duplex repeaters) are reserved as emergency channels and should be used only in an emergency.

CTCSS and DCS will not operate on channels 5 and 35.

A list of currently authorised channels can be obtained from the ACMA website in Australia and the MED website in New Zealand. Channel 11 is a calling channel generally used to call others and channel 80 is the customary road vehicle channel.

Once contact is established on the calling channel, both stations should move to another unused "SIMPLEX" channel to allow others to use the calling channel.



## UHF channels and frequencies

---

Channels 22 and 23 are for Telemetry and Telecommand use, voice communications are not allowed on these channels by law.

Channel 9 and above are the best choices for general use in Simplex mode.

### 38 CTCSS CODE LIST

CODE	Frequency(Hz)	CODE	Frequency(Hz)
OFF	OFF	20	131.8
1	67.0	21	136.5
2	71.9	22	141.3
3	74.4	23	146.2
4	77.0	24	151.4
5	79.7	25	156.7
6	82.5	26	162.2
7	85.4	27	167.9
8	88.5	28	173.8
9	91.5	29	179.9
10	94.8	30	186.2
11	97.4	31	192.8
12	100.0	32	203.5
13	103.5	33	210.7
14	107.2	34	218.1
15	110.9	35	225.7
16	114.8	36	233.6
17	118.8	37	241.8
18	123.0	38	250.3
19	127.3		

### **Customer Support**

If you have any problems setting up or using this product you will find useful tips and information in the Troubleshooting section of this user guide as well as “Frequently Asked Questions” on our website [www.oricom.com.au](http://www.oricom.com.au).

If you have further questions about using the product after reviewing the resources above or would like to purchase replacement parts or accessories please call our Customer Support Team. Our dedicated local support team are more likely to be able to help you than the retailer where you made your purchase.

### **Important**

Please retain your purchase receipt and attach to the back page of this user guide as you will need to produce this if warranty service is required. Take a few moments to register your product online: [www.oricom.com.au](http://www.oricom.com.au)

### **Express Warranty (Australia)**

This Express Warranty is provided by Oricom International Pty Ltd ABN 46 086 116 369, Unit 1, 4 Sovereign Place, South Windsor NSW 2756, herein after referred to as “Oricom”.

Oricom products come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Oricom warrants that the product is free from defects in materials or workmanship during the Express Warranty Period. This Express Warranty does not extend to any product from which the serial number has been removed or was purchased outside of Australia.

Nothing in this Express Warranty excludes, restricts or modifies any condition, warranty, guarantee, implied term, right or remedy pursuant to the Australian Consumer Law and which may not be so excluded, restricted or modified. For such conditions, terms, guarantees and warranties that cannot be excluded, restricted or modified, Oricom limits the remedies available to extent permitted in the relevant legislation.

The Express Warranty Period will be 3 years (excluding battery cells and rechargeable battery packs) from the date of purchase of the product evidenced by your dated sales receipt. You are required to provide proof of purchase as a condition of receiving Express Warranty services.

You are entitled to a replacement product or repair of the product at our discretion according to the terms and conditions of this document if your product is found to be faulty within the Express Warranty Period. This Express Warranty extends to the original purchaser only and is not transferable.

Products distributed by Oricom are manufactured using new materials or new and used materials equivalent to new in performance and reliability. Spare parts may be new or equivalent to new. Spare parts are

warranted to be free from defects in material or workmanship for thirty (30) days or for the remainder of the Express Warranty Period of the Oricom branded product in which they are installed, whichever is longer. During the Express Warranty Period, Oricom will where possible repair and if not replace the faulty product or part thereof. All component parts removed under this Express Warranty become the property of Oricom. In the unlikely event that your Oricom product has a recurring failure, Oricom may always, subject to the Competition and Consumer Act 2010, at its discretion, elect to provide you with a replacement product of its choosing that is at least equivalent to your product in performance.

No change to the conditions of this Express Warranty is valid unless it is made in writing and signed by an authorised representative of Oricom.

Oricom will not be liable under this Express Warranty, and to the extent permitted by law will not be liable for any defect, loss, damage or injury arising out of or in connection with a:

1. Failure by you to adhere to the warnings and follow the instructions set out in this user guide for the proper installation and use of the product;
2. Wilful misconduct or deliberate misuse by you of the product;
3. Any external cause beyond our control, including but not limited to power failure, lightning or over voltage; or
4. Modification to the product or services carried out on the product by anyone other than Oricom or Oricom's authorised service provider.

# How to make a claim under your Express Warranty in Australia

Oricom has a simple warranty process for you to follow:

- Please call or email our Customer Support Team, 1300 889 785 or support@oricom.com.au.
- A Customer Support Team member will verify after troubleshooting with you if your product qualifies under warranty. If so, they will give you a Product Return Authorisation number.
- We will then email or fax a Return Authorisation form and a Repair Notice (if necessary), together with instructions on how to return the goods for warranty service.

Please note that if a Customer Support Team member advises that your product does not qualify for return, this warranty does not apply to your product. Products that are authorised to be returned to Oricom in Australia must include all of the following:

- A completed Return Authorisation form
- A copy of your Proof of Purchase (please keep your original copy)
- The faulty product, including all accessories.

Send the approved returns to:

Oricom International Pty Ltd  
Locked Bag 658  
South Windsor NSW 2756 Australia

Please note that this Express Warranty excludes expenses incurred by you in returning any faulty product to us. You must arrange and pay any expenses incurred (including postage, delivery, freight, transportation or insurance of the product) to return the faulty product to us, however, we will arrange delivery of the repaired or replaced faulty product to you.

## **Important Information**

### **Repair Notice**

Please be aware that the repair of your goods may result in the loss of any user-generated data (such as stored telephone numbers, text messages and contact information). Please ensure that you have made a copy of any data saved on your goods before sending for repair. Please also be aware that goods presented for repair may be replaced by refurbished goods or parts of the same type rather than being repaired.